

[Manuals.plus](#) /

> [Aikmi](#) /

> Aikmi 2-in-1 Robot Toy User Manual

## Aikmi 11638

# Aikmi 2-in-1 Robot Toy User Manual

Model: 11638 | Brand: Aikmi

## INTRODUCTION

The Aikmi 2-in-1 Robot Toy is an innovative and interactive companion designed for children. This versatile robot combines the fun of a remote-controlled toy with the soothing functionality of a projection night light. It features dual control modes, engaging music, and a captivating design, providing hours of entertainment and a calming ambiance for bedtime.

## SAFETY INFORMATION

**WARNING:** Not suitable for children under 3 years old due to small parts that may present a choking hazard. Adult supervision is recommended during play. Ensure all components are securely attached before use. Do not expose the robot or its components to water or extreme temperatures.

## PACKAGE CONTENTS

Please check the box to ensure all items are present:

- 1 x Aikmi 2-in-1 Robot Toy
- 1 x Remote Control
- 1 x USB Type-C Charging Cable
- Batteries (for robot, included)
- Instruction Manual (this document)


## PRODUCT FEATURES



The Aikmi Robot Toy in a child's room, demonstrating its star and moon projection feature, along with its remote control and accessories.



## Multiple Projection Light Modes

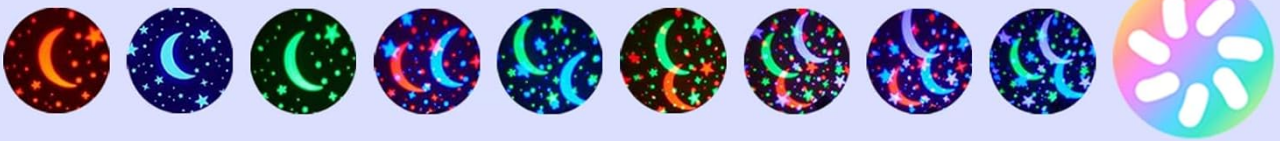

VARIABLE COLORS: single color light, mixed color light

LIGHTING MODES: constant, flashing, breathing light

LIGHT EFFECT: fixed mode, rotating mode

Illustration of the robot's multiple projection light modes, including variable colors, constant, flashing, and breathing light effects, and fixed or rotating modes.

# ROBOT TOYS WITH PROJECTOR NIGHT LIGHT



**Weight: 280g**



**Size: 12cm\*9.2cm\*14cm/  
4.7 in\*3.5 in\*5.51 in**



**Head Projector**



**2.4G Remote  
Gesture Sensor**



**Glowing Crawler**



**Color Changing Eyes**



**Music & Dance  
Auto-Demo**




**800mAh&Type-C**



An infographic detailing the robot's specifications and features, such as its weight (280g), size (12x9.2x14cm), head projector, 2.4G remote and gesture sensor, glowing crawler tracks, color-changing eyes, music and dance auto-demo, and 800mAh Type-C rechargeable battery.

# DUAL CONTROL MODES

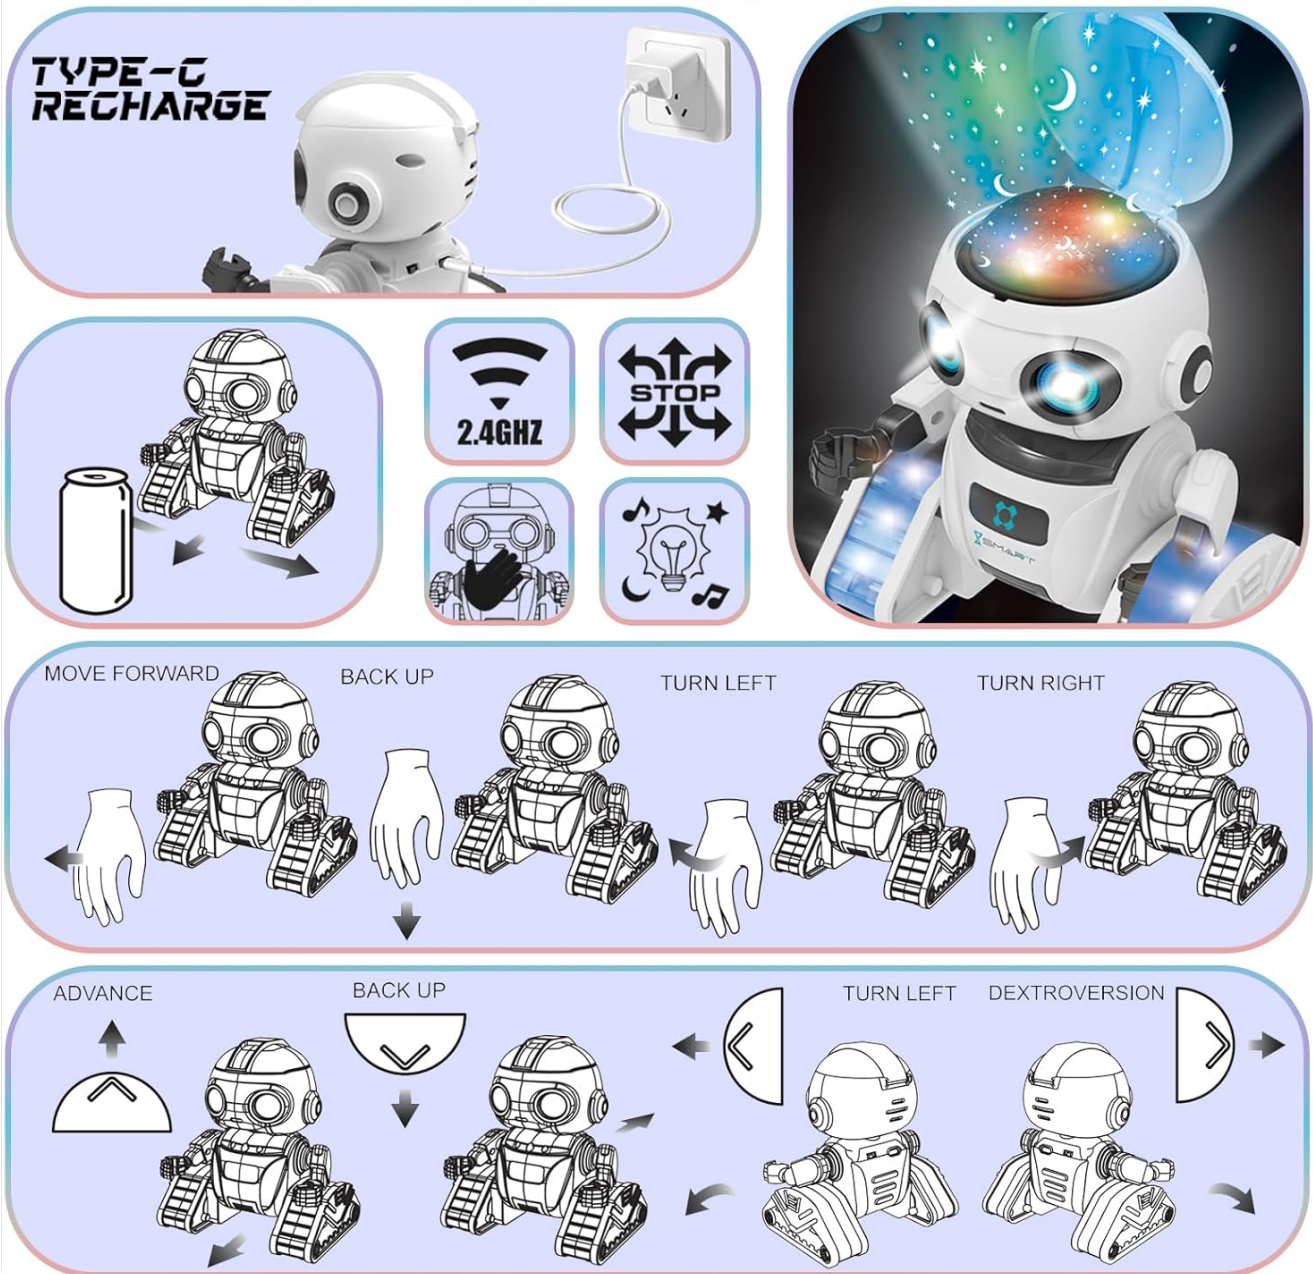

A visual guide to the robot's dual control modes, showing how to operate it using the remote control for movement and functions, and through hand gestures for various commands.

- **2-in-1 Functionality:** Combines a remote-controlled robot with an integrated projection night light, offering both playtime fun and a soothing bedtime ambiance.
- **Multiple Projection Light Modes:** Features 8 fascinating light effects with various colors, clear star and moon patterns, and different lighting modes (constant, flashing, breathing, fixed, rotating).
- **Dual Control Modes:** Operate the robot using either the included 2.4G remote control or intuitive hand gestures, promoting cognitive and motor skill development.
- **Dynamic Sound Experience:** Includes 3 upbeat classic songs for play mode and 5 relaxing melodies for projection mode, enhancing the sensory experience.
- **Engaging Design:** Equipped with color-changing eyes, glowing crawler tracks, and flexible head and hands for various poses and interactive play.
- **Rechargeable Battery:** Built-in 800mAh battery, rechargeable via Type-C USB, providing 90-100 minutes of playtime on a full charge.

## SETUP

### 1. Charging the Robot:

Before first use, fully charge the robot. Connect the provided USB Type-C charging cable to the robot's charging port (usually located on the back or side) and the other end to a USB power adapter (not included) or a computer USB port. The charging indicator will show the charging status (e.g., red light for charging, off when fully charged). A full charge takes approximately [Time, if available, otherwise omit].

### 2. Installing Remote Control Batteries:

Open the battery compartment on the back of the remote control. Insert [Number, e.g., two] AAA batteries (not included, or check if included in package contents) ensuring correct polarity (+/-). Close the battery compartment securely.

### 3. Powering On:

Locate the power switch on the robot (usually on its back or base) and slide it to the 'ON' position. The robot's eyes or indicator lights should illuminate.

## OPERATING INSTRUCTIONS

### 1. Remote Control Operation

Ensure the robot is powered on and the remote control has fresh batteries. The remote control allows for precise movement and function activation.

- **Move Forward:** Press the 'Forward' button/joystick.
- **Move Backward:** Press the 'Backward' button/joystick.
- **Turn Left:** Press the 'Left' button/joystick.
- **Turn Right:** Press the 'Right' button/joystick.
- **Music Playback:** Press the 'Music' button to cycle through songs.
- **Projection Light:** Press the 'Light' button to activate or change projection modes.
- **Demo Mode:** Press the 'Demo' button for an automatic demonstration of the robot's movements and features.

### 2. Gesture Control

The robot can respond to specific hand gestures. Ensure your hand is within the sensor's range (typically in front of the robot's chest or head area).

- **Move Forward:** Wave your hand forward in front of the robot.
- **Move Backward:** Wave your hand backward.
- **Turn Left:** Wave your hand to the left.
- **Turn Right:** Wave your hand to the right.
- **Stop:** Hold your hand still in front of the robot.

### 3. Night Light Projection

To use the robot as a night light projector, ensure it is powered on. The projector is located on the robot's head.

- **Activate Projection:** Press the dedicated 'Light' button on the remote control.
- **Change Light Modes:** Press the 'Light' button repeatedly to cycle through the 8 different projection effects, including various colors, star and moon patterns, and lighting styles (constant, flashing, breathing).
- **Music for Projection:** When in projection mode, the robot will play 5 relaxing melodies automatically.

## 4. Music Playback

The robot features built-in music for both active play and relaxation.

- **Play Mode Music:** Press the 'Music' button on the remote control to play 3 upbeat classic songs. Press again to switch songs.
- **Projection Mode Music:** When the projection feature is active, the robot will automatically play 5 soothing melodies.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the robot and remote control. Do not use harsh chemicals or abrasive cleaners. Avoid getting water into any openings.
- **Storage:** When not in use for extended periods, turn off the robot and remove batteries from the remote control. Store the toy in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Recharge the robot's battery regularly, even if not in frequent use, to maintain battery health. Do not overcharge.

## TROUBLESHOOTING

- **Robot Not Responding:**

Ensure the robot is fully charged and powered on. Check if the remote control batteries are correctly installed and not depleted. Try pairing the remote control with the robot again (refer to specific pairing instructions if provided in the product packaging, otherwise assume automatic pairing).

- **Projection Light Not Working:**

Verify the robot is powered on and sufficiently charged. Ensure no obstructions are blocking the projector lens on the robot's head. Try pressing the 'Light' button on the remote control multiple times.

- **Sound Issues:**

Check if the volume is turned down or muted (if applicable, though not specified in input). Ensure the robot is powered on. If sound is distorted, the battery might be low.

- **Short Playtime:**

Ensure the robot's battery is fully charged before each use. Battery performance can decrease over time with repeated charging cycles.

## SPECIFICATIONS

<b>Product Dimensions (L x W x H)</b>	12 x 9.2 x 14 cm (4.7 x 3.6 x 5.5 inches)
<b>Weight</b>	280 g (0.62 lbs)
<b>Recommended Age</b>	4 - 12 years (Manufacturer recommended)
<b>Model Number</b>	11638
<b>Number of Pieces</b>	1
<b>Assembly Required</b>	No
<b>Batteries Required</b>	Yes
<b>Batteries Included</b>	Yes (Lithium Battery for robot)
<b>Main Material</b>	Plastic
<b>Color</b>	White
<b>Recommended Use</b>	Entertainment, learning, and motor skill development

## WARRANTY AND SUPPORT

Specific warranty information for the Aikmi 2-in-1 Robot Toy is not provided in this manual. For details regarding warranty coverage, technical support, or replacement parts, please contact Aikmi customer service directly. Refer to the product packaging or the official Aikmi website for contact information.

*Note: Information regarding spare parts availability is currently unavailable.*