

ASHATA ASHATA0g2fk6d5ab

ASHATA Mini Portable 1080P Projector Instruction Manual

Model: ASHATA0g2fk6d5ab

1. INTRODUCTION

Thank you for choosing the ASHATA Mini Portable 1080P Projector. This compact and versatile device is designed to provide a convenient and immersive viewing experience, whether for home entertainment, presentations, or casual use. This manual provides essential information for setting up, operating, and maintaining your projector.



Figure 1.1: ASHATA Mini Portable 1080P Projector

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- ASHATA Mini Portable 1080P Projector
- Remote Control
- Power Adapter
- AV Cable
- HDMI Cable
- User Manual (this document)



Figure 2.1: Projector, remote control, power adapter, and AV cable

3. PRODUCT OVERVIEW

3.1 Device Layout

Familiarize yourself with the various components and ports of your projector.

Front View



Figure 3.1: Front view showing the projection lens.

The front of the projector features the main projection lens and a focus adjustment dial.

Top View (Control Panel)



Figure 3.2: Top view showing the control buttons.

The top panel includes buttons for power, navigation (up, down, left, right), OK, menu, and back functions.

Rear View (Ports)



Figure 3.3: Rear view displaying DC IN, HDMI, USB, and Headphone ports.

The rear of the projector houses the DC IN port for power, an HDMI port for digital video/audio input, a USB port for media playback, and a 3.5mm headphone jack for audio output. It also includes an AV port and a Micro SD card slot on the side.

Side Views (Ventilation)



Figure 3.4: Side view with ventilation grilles.

Both sides of the projector feature ventilation grilles to ensure proper airflow and prevent overheating during operation.

4. SETUP

4.1 Power Connection

1. Connect the power adapter to the 'DC IN' port on the rear of the projector.
2. Plug the power adapter into a suitable electrical outlet.
3. Press the power button on the projector or remote control to turn on the device.

4.2 Focusing the Image

To achieve a clear and sharp image, adjust the focus dial located near the projection lens.



Projection Size: 24 to 60 Inches

Figure 4.1: Focus adjustment dial.

4.3 Projection Distance and Size

The projector supports a projection size of 24 to 60 inches with an optimal projection distance of 4.9 to 6.6 feet. Adjust the distance from the projection surface to achieve your desired screen size.



Supported Resolution: 1920x1080

Figure 4.2: Projection size example.

5. OPERATING INSTRUCTIONS

5.1 Connecting Devices

HDMI Connection

Connect your laptop, computer, game console, or TV box to the projector using an HDMI cable. Select 'HDMI' as the input source from the projector's menu.

USB Connection

Insert a USB flash drive into the USB port to play media files directly. Navigate through the files using the remote control or top panel buttons.

AV Connection

Use the provided AV cable to connect older devices such as DVD players. Select 'AV' as the input source.

Audio Output

The projector has a built-in speaker. For a more immersive audio experience, connect external headphones or speakers to the 3.5mm headphone jack.

5.2 Using the Remote Control

The included remote control allows for convenient operation of the projector from a distance. Functions include power on/off, source selection, menu navigation, volume control, and media playback controls.

5.3 Menu Navigation

Access the projector's settings menu to adjust various display and audio options. Use the navigation buttons on the remote or top panel to browse and select settings such as Picture Mode, Color Temperature, Aspect Ratio, Noise Reduction, and Projection Direction.

6. MAINTENANCE

6.1 Cleaning

- **Lens:** Gently wipe the lens with a soft, lint-free cloth. Avoid using abrasive cleaners or excessive pressure.
- **Exterior:** Clean the projector's exterior with a soft, dry cloth. Do not use liquid cleaners directly on the device.
- **Ventilation Grilles:** Periodically check and clean the ventilation grilles to ensure unobstructed airflow. Use a soft brush or compressed air to remove dust.

6.2 Storage

When not in use, store the projector in a cool, dry place away from direct sunlight and extreme temperatures. Use the original packaging or a protective case to prevent dust accumulation and damage.

7. TROUBLESHOOTING

If you encounter any issues with your projector, please refer to the table below for common problems and their solutions.

Problem	Solution
No image or power	Ensure the power adapter is securely connected and plugged into a working outlet. Check if the power button is pressed.
Blurry image	Adjust the focus dial on the projector until the image is clear. Ensure the projection surface is flat.
No sound	Check the volume settings on the projector and your connected device. Ensure external speakers/headphones are properly connected if used.
Remote control not working	Ensure batteries are correctly inserted and not depleted. Point the remote directly at the projector's IR receiver.
Image too small/large	Adjust the distance of the projector from the projection surface.

8. TECHNICAL SPECIFICATIONS

Feature	Value
Brand	ASHATA

Feature	Value
Model Number	ASHATA0g2fk6d5ab
Item Weight	14.8 ounces
Product Dimensions	7.87 x 7.08 x 3.14 inches
Display Resolution	1920 x 1080 (1080P Supported)
Contrast Ratio	800:1
Projection Size	24 to 60 inches
Projection Distance	4.9 to 6.6 feet
Connectivity Technology	AV, VGA, USB, HDMI, Micro SD
Special Features	Adjustable

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. Keep your purchase receipt as proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, troubleshooting, or any questions regarding your ASHATA Mini Portable 1080P Projector, please contact ASHATA customer support through the retailer's platform or the contact information provided on the product packaging.