

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [BioloMix](#) /

> [BioloMix Professional Smoothie Blender T5200 Instruction Manual](#)

BioloMix T5200

BioloMix Professional Smoothie Blender

MODEL: T5200

Brand: BioloMix

INTRODUCTION

The BioloMix Professional Smoothie Blender is a high-performance kitchen appliance designed for efficient blending of various ingredients. Featuring a powerful 2200W motor and durable stainless steel blades, it is suitable for preparing smoothies, crushing ice, making frozen desserts, and more. This manual provides essential information for safe and effective use of your blender.

Key Features:

- **High Power Motor:** Max 2200W, 3 peak horsepower motor for efficient blending.
- **Durable Blades:** Hardened Japan stainless steel six-wave action blades for versatile processing.
- **High Speed:** Up to 30,000 RPM for quick ice crushing and smooth results.
- **Large Capacity:** 68 oz (2000 ml) Tritan pitcher, safe, sturdy, and shockproof.
- **Safety Features:** BPA-free materials, safety protection design (automatic stop when jar is separated), and 4 rubber anti-slip feet.
- **Easy Operation:** Variable speed control with pulse function.
- **Convenient Cleaning:** One-button self-cleaning function for quick maintenance.

SAFETY INFORMATION

Please read all safety instructions carefully before operating the blender. Failure to follow these instructions may result in injury or damage to the appliance.

- Always ensure the blender is unplugged before assembly, disassembly, or cleaning.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used only when the blender is not running.
- Blades are sharp. Handle with care.
- Ensure the lid is securely in place before operating the blender.
- Do not blend hot liquids in large quantities as pressure buildup can cause the lid to eject and result in burns.
- The blender features a safety lock switch design; the motor will not operate unless the jar is correctly placed on the base.

- This appliance is equipped with an overheating motor protection and overload reset switch. If the motor stops due to overheating, allow it to cool down before restarting.
- Keep the appliance out of reach of children.

PACKAGE CONTENTS

Verify that all items are included in your package:

- Main unit (Motor Base)
- Blender Jar (68 oz / 2L Tritan)
- Lid with Inserter (Removable Cap)
- Stirring Stick (Tamper)
- Replacement Blades, Drive Socket, and Tool
- 600ML Grinding Cups (Extra Parts)
- Instruction Manual



Figure 1: Included Components

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean:** Wash the blender jar, lid, and removable cap with warm, soapy water. Rinse thoroughly and dry. Wipe the motor base with a damp cloth.
3. **Assemble:** Place the blender jar securely onto the motor base. Ensure the safety lock switch engages properly.
4. **Position:** Place the blender on a stable, flat, and dry surface.
5. **Connect:** Plug the power cord into a suitable electrical outlet (110 Volts).

OPERATING INSTRUCTIONS

Follow these steps to operate your BioloMix Professional Smoothie Blender:

1. **Prepare Ingredients:** Cut ingredients into appropriate sizes for blending. For optimal results, add liquids first, then soft ingredients, followed by harder ingredients and ice.
2. **Load Jar:** Place prepared ingredients into the blender jar. Do not exceed the maximum fill line (2L).

3. **Secure Lid:** Place the lid firmly on the jar and ensure the removable cap is inserted into the lid opening.
4. **Power On:** Flip the 'ON/OFF' switch to the 'ON' position. The power indicator light will illuminate.
5. **Select Speed:** Turn the variable speed control dial to your desired speed. Start at a lower speed and gradually increase as needed.
6. **Use Pulse Function:** For quick bursts of power or to chop ingredients, press and hold the 'PULSE' button. Release to stop.
7. **Blending:** Allow the blender to process ingredients until the desired consistency is achieved. Use the stirring stick through the lid opening to push down ingredients if necessary, but only when the blender is running at a low speed or stopped.
8. **Stop:** Once blending is complete, turn the speed dial to 'STOP' and then flip the 'ON/OFF' switch to 'OFF'. Unplug the appliance.



Figure 2: Variable Speed Control and Pulse Function

Video 1: Demonstrating the BioloMix Blender's 2200-Watt Motor in action, showcasing its power and efficiency for various blending tasks.

Video 2: A demonstration of the BioloMix professional blender's capabilities for making juice, highlighting its ease of use and effective blending.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your blender.

Self-Cleaning Function:

For quick and easy cleaning, follow these steps:

1. Fill the blender jar halfway with warm water and add a drop of dish soap.
2. Secure the lid and place the jar on the motor base.
3. Select the 'PULSE' function or run at high speed for 30-60 seconds.
4. Empty the jar, rinse thoroughly with clean water, and dry.

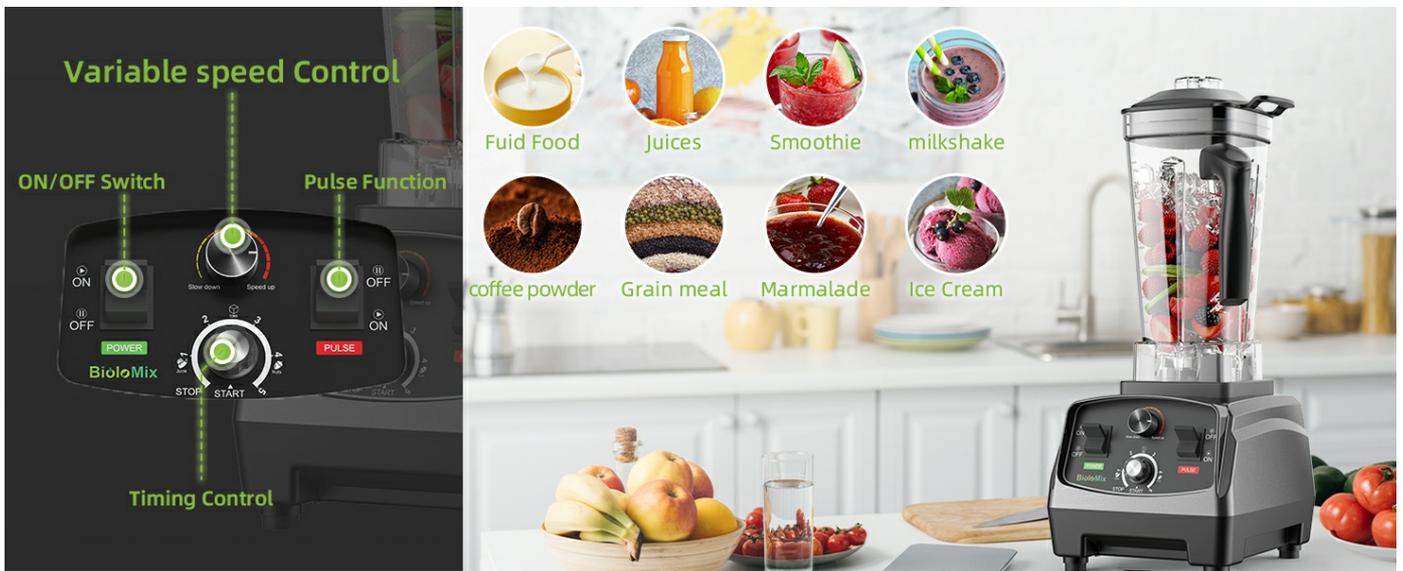


Figure 3: One-Click Automatic Cleaning

General Cleaning:

- Wipe the motor base with a damp cloth. Do not submerge it in water.
- The blender jar, lid, and removable cap are dishwasher-safe (top rack only) or can be hand-washed.
- Ensure all parts are completely dry before storing.

TROUBLESHOOTING

If you encounter issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; safety switch not engaged; power switch off.	Ensure power cord is securely plugged in. Verify the jar is correctly seated on the motor base. Turn the 'ON/OFF' switch to 'ON'.
Motor stops during operation.	Overheating due to prolonged use or overloading.	Unplug the blender and allow it to cool down for at least 15-20 minutes. Reduce the load or blend in smaller batches.
Ingredients are not blending smoothly.	Insufficient liquid; ingredients too large; air pocket around blades.	Add more liquid. Cut ingredients into smaller pieces. Use the tamper (stirring stick) to push ingredients towards the blades. Increase speed gradually.
Leakage from the jar.	Lid not properly secured; jar overfilled.	Ensure the lid is firmly in place. Do not fill above the maximum line.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Biolomix
Model Number	T5200
Power	Max 2200W (3 Peak Horsepower)

Feature	Detail
Voltage	110 Volts
Capacity	2 Liters (68 Oz)
Blade Material	Hardened Japan Stainless Steel (Six-Wave Action)
Container Material	Tritan (BPA Free)
Controls Type	Push Button, Adjustable Dial
Special Features	Safety Lock, Multiple Speeds, Removable Blade, Overheating & Overload Protection
Product Dimensions	9"D x 19.6"W x 7.9"H
Item Weight	9.08 pounds

WARRANTY AND SUPPORT

The BioloMix Professional Smoothie Blender comes with a limited warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty card included in your package or contact BioloMix customer support.

For technical assistance, troubleshooting not covered in this manual, or to inquire about replacement parts, please visit the official BioloMix website or contact their customer service department.