

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FLEXISPOT](#) /

› [FLEXISPOT XC6 360° Swivel Rocker Recliner User Manual](#)

FLEXISPOT XC6

FLEXISPOT XC6 360° Swivel Rocker Recliner User Manual

Model: XC6

1. INTRODUCTION

Thank you for choosing the FLEXISPOT XC6 360° Swivel Rocker Recliner. This manual provides essential information for the safe assembly, operation, and maintenance of your new recliner. Please read these instructions thoroughly before use and retain them for future reference.

The XC6 recliner is designed to offer comfort and versatility, featuring a 360° swivel, gentle rocking motion, and a reclining function. It also includes an integrated 8-point vibration massage system and lumbar heating for enhanced relaxation.

2. SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- **Maximum Weight Capacity:** Do not exceed the maximum weight recommendation of **350 pounds (158 kg)**.
- Keep children and pets away from the recliner's moving parts, especially during reclining or adjusting positions.
- Ensure all electrical connections for the massage and heating functions are securely plugged in and free from damage. Do not use if cords are frayed or damaged.
- Avoid placing the recliner near heat sources or in direct sunlight for prolonged periods, as this may damage the fabric and internal components.
- Do not stand on the recliner or use it as a step stool.
- Always ensure the recliner is on a stable, level surface before use.
- Disconnect the power adapter from the wall outlet before cleaning or if the recliner will not be used for an extended period.

3. PACKAGE CONTENTS

The FLEXISPOT XC6 recliner is designed for convenient 1-box shipping and tool-free assembly. Carefully unpack all components and verify that you have received the following parts:

- Seat Base with integrated armrests
- Backrest
- Power Adapter
- Remote Control for massage and heating functions
- User Manual (this document)



Image: Product dimensions and 'The item all comes in ONE box' indication.

4. ASSEMBLY INSTRUCTIONS

The FLEXISPOT XC6 recliner features a tool-free assembly process, typically requiring only one person.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Attach Backrest:** Align the metal brackets on the backrest with the corresponding slots on the seat base. Slide the backrest down firmly until it clicks into place. Ensure both sides are securely engaged.
3. **Connect Power:** Locate the power cable extending from the recliner and connect it to the provided power

adapter. Plug the power adapter into a standard wall outlet.

Your recliner is now assembled and ready for use.

5. OPERATING INSTRUCTIONS

5.1 Swivel and Rocking Function

The recliner is equipped with a 360° swivel base and a gentle rocking mechanism. To utilize these features, simply shift your weight or gently push off the floor. The chair will smoothly swivel and rock, providing a soothing motion.

5.2 Reclining Function

To recline the chair and extend the footrest:

- Locate the side-pull buckle (handle) on the side of the recliner.
- Pull the buckle firmly to release the footrest.
- Lean back gently to recline the backrest to your desired position. The recliner supports multiple reclining angles up to 135 degrees.
- To return to the upright position, push down on the footrest with your legs while simultaneously leaning forward. The footrest will retract, and the backrest will return to its original position.

Swivel And Rocking

The gentle rocking swiveling motion can have a soothing effect, providing stress relief and relaxation.

30°Rocking



Pulling out the handle to adjust the footrest



Reading Books



Watching TV



Taking a Nap

Image: Illustration of 270° swivel, 30° rocking, and footrest adjustment via side handle.



Swivel & Rocking



Image: Visual representation of swivel, rocking, and reclining capabilities.

5.3 Massage and Heating Functions

The recliner features an 8-point vibration massage system and a lumbar heating function, controlled by the included remote control.

- Power On/Off:** Press the 'Power' button on the remote to activate or deactivate the massage and heating functions.
- Massage Zones:** The 8 vibration nodes target the back, lumbar, thighs, and legs. Use the remote to select specific zones (M1-M5) or cycle through all zones.
- Vibration Modes:** Select from various vibration modes (e.g., pulse, wave, auto) using the 'Mode' button.
- Intensity Levels:** Adjust the massage intensity (3 levels) using the 'Intensity' button.
- Heating:** Activate the lumbar heating function by pressing the 'Heat Mode' button. The heating element is located in the lumbar area.
- Timer:** Set a massage duration (e.g., 10, 20, 30 minutes) using the 'Time' button.



Image: Visual representation of the 8-point massage system and lumbar heating zones.



Spa-Like Experience



8 Vibration Nodes



5 Vibration Modes



3 Intensity Levels



3 Time Settings



Image: Remote control for massage and heating functions.

6. CARE AND MAINTENANCE

Proper care will extend the life and appearance of your recliner.

- Cleaning Fabric:** For general cleaning, use a soft brush or vacuum cleaner with an upholstery attachment to remove dust and loose debris. For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild fabric cleaner according to the product instructions, testing on an inconspicuous area first.
- Mechanism Care:** Periodically inspect the reclining mechanism for any loose bolts or connections. Tighten if necessary. Avoid forcing the mechanism if it feels stiff.
- Electrical Components:** Keep the power adapter and remote control dry. Do not immerse them in water.
- Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the fabric and finish.



Breathable Fabric



Wide Armrests



Plush Backrest



Sturdy Metal Base



Smooth Swivel & Rocking

Comfort in Details

Every detail is precision-engineered for your body's natural comfort.



Image: Details on fabric and construction, relevant for care.

7. TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Recliner does not recline or footrest does not extend.	Side-pull buckle not fully engaged; obstruction in mechanism.	Ensure the side-pull buckle is pulled completely. Check for any objects obstructing the reclining mechanism.
Massage or heating function not working.	Power adapter not connected; remote control battery low/dead; loose connection.	Verify the power adapter is securely plugged into the recliner and a working wall outlet. Check remote control battery. Ensure all internal connections are secure.

Problem	Possible Cause	Solution
Unusual noises during rocking or reclining.	Loose bolts or components; mechanism needs lubrication.	Inspect all visible bolts and connections and tighten if loose. If noises persist, contact customer support.
Chair feels unstable or wobbly.	Uneven floor; loose assembly connections.	Ensure the recliner is on a flat, level surface. Re-check assembly connections, especially where the backrest attaches to the base.

If these solutions do not resolve the issue, please contact FLEXISPOT customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	FLEXISPOT
Model Number	XC6
Color	Grey
Product Dimensions (D x W x H)	38.6" x 39.4" x 42.1" (98 cm x 100 cm x 107 cm)
Maximum Weight Recommendation	350 Pounds (158 kg)
Reclining Positions	3 or more (up to 135°)
Massage System	8-point vibration (back, lumbar, thighs, legs)
Heating Function	Lumbar heating
Assembly	Tool-free, 1-box shipping
Material	Soft fabric, high-density sponge, metal base
Item Weight	110 pounds (50 kg)

9. WARRANTY AND SUPPORT

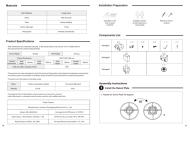
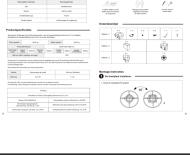
FLEXISPOT is committed to providing high-quality products. For warranty information, please refer to the documentation included with your purchase or visit the official FLEXISPOT website. Keep your proof of purchase for warranty claims.

If you require assistance with assembly, operation, or troubleshooting, please contact FLEXISPOT customer support:

- **Email:** contact@flexispot.com
- **Phone:** +1 (855) 585-5618

Our customer service team is available to assist you with any questions or concerns.

Related Documents - XC6

	<p>FlexiSpot XC6 Recliner Chair User Manual: Assembly, Operation, and Safety Guide</p> <p>This user manual provides detailed assembly instructions, usage guidelines, maintenance tips, and safety warnings for the FlexiSpot XC6 recliner chair (Item No. XC6-BG-EU/XC6-OB-EU/XC6-LG-EU). Learn how to set up, operate, and safely use your chair.</p>
	<p>Flexispot Power Swivel Rocker Recliner Assembly and User Guide</p> <p>Detailed assembly instructions, product specifications, usage guidelines, and troubleshooting for the Flexispot Power Swivel Rocker Recliner. Learn how to set up and operate your new recliner chair safely and efficiently.</p>
	<p>FlexiSpot Waffle Back Elektrische Relaxfauteuil Gebruiksaanwijzing en Montagegids</p> <p>Gedetailleerde instructies voor het monteren, gebruiken en oplossen van problemen met de FlexiSpot Waffle Back Elektrische Relaxfauteuil. Inclusief productspecificaties en veiligheidswaarschuwingen.</p>
	<p>FlexiSpot XP6 Pushback Recliner Chair User Manual</p> <p>User manual for the FlexiSpot XP6 Pushback Recliner Chair, providing assembly instructions, usage guidelines, maintenance tips, warnings, and troubleshooting information.</p>
	<p>FlexiSpot DT3B-EU User Manual and Warranty Information</p> <p>Comprehensive user manual for the FlexiSpot DT3B-EU height adjustable desk frame, including detailed assembly instructions, parts list, and warranty coverage information.</p>
	<p>FlexiSpot XP6 Pushback Recliner Chair User Manual</p> <p>Comprehensive user manual for the FlexiSpot XP6 Pushback Recliner Chair, covering assembly instructions, product specifications, usage guidelines, maintenance tips, warnings, and troubleshooting.</p>