

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Skip Hop](#) /

› [Skip Hop EON 4-in-1 Convertible Baby High Chair Instruction Manual](#)

Skip Hop EON

Skip Hop EON 4-in-1 Convertible Baby High Chair

INSTRUCTION MANUAL

[Introduction](#)

[Setup & Assembly](#)

[Operating Modes](#)

[Maintenance](#)

[Specifications](#)

[Safety](#)

[Information](#)

[Troubleshooting](#)

[Warranty & Support](#)

1. Introduction

The Skip Hop EON 4-in-1 Convertible Baby High Chair is designed to adapt to your child's growth from infancy through toddlerhood. This versatile high chair offers four modes of use: a traditional high chair, a dining booster, a tableside booster, and a big kid chair. Its sleek design, combined with user-friendly features, ensures both functionality and aesthetic appeal in your home.

Key Features:

- **Versatile 4-in-1 Design:** Adapts from baby high chair to dining booster, tableside booster, and big kid chair.
- **Effortless Cleanup:** Features smooth, wipe-clean surfaces and a detachable, dishwasher-safe tray insert.
- **Adjustable & Detachable Tray:** Tray can be adjusted to suit feeding requirements and easily removed.
- **Enhanced Safety:** Includes a removable 5-point harness for secure mealtime activities.
- **Convenient & Chic Design:** Crafted with FSC-certified wood accents and a space-saving design.
- **Age Range Versatility:** Suitable for ages 6 months to 3 years (up to 33 lbs/15 kg) as a High Chair, and up to 5 years (up to 80 lbs/36 kg) as a Big Kid Chair.

2. Setup & Assembly

Assembly of the Skip Hop EON High Chair is designed to be straightforward and quick. Follow the included graphical instructions for detailed steps. Ensure all components are securely fastened before first use.



Figure 1: Assembled Skip Hop EON 4-in-1 High Chair in Oat color.

3. Operating Modes - 4-in-1 Versatility

The EON High Chair seamlessly transitions through four stages to accommodate your child's growth and developmental needs.

grows with baby in 4 stages



STAGE 1:
High Chair



STAGE 2:
Dining Booster



STAGE 3:
Tableside Booster



STAGE 4:
Toddler Chair

Figure 2: The four convertible modes of the Skip Hop EON High Chair.

Stage 1: High Chair

Use as a traditional high chair for infants aged 6 months to 3 years (up to 33 lbs/15 kg). Ensure the 5-point harness is securely fastened and the tray is properly attached.



Figure 3: High Chair mode in use.

Stage 2: Dining Booster

Convert to a dining booster for children aged 6 months and up (with harness). This mode allows your child to sit at the dining table with the family. Remove the high chair legs and attach the booster seat to a standard dining chair using the provided straps (not explicitly detailed in JSON, but implied by booster function).



*** STAGE 1:**
high chair



*** STAGE 2:**
dining booster



*** STAGE 3:**
tableside booster



*** STAGE 4:**
toddler chair

Figure 4: Dining Booster mode in use.

Stage 3: Tableside Booster

For older toddlers (3 years and above, without harness), the tableside booster provides a comfortable and secure seating option directly at the table. This mode typically involves removing the tray and using the chair's base to elevate the child to table height.



Figure 5: Tableside Booster mode in use.

Stage 4: Big Kid Chair

The high chair can be transformed into a standalone big kid chair, supporting children up to 5 years old (up to 80 lbs/36 kg). This mode involves removing the booster components and using only the chair seat with shorter legs.



*** removable
5-point harness**



*** dishwasher-safe
tray insert**



*** 2-position footrest**



*** beechwood
accents**

Figure 6: Big Kid Chair mode in use.

4. Maintenance & Cleaning

Maintaining the cleanliness of your Skip Hop EON High Chair is simple due to its thoughtful design.

user-friendly features



removable
5-point harness



dishwasher-safe
tray insert



2-position
footrest



beechwood
accents

Figure 7: Key features for easy maintenance.

- **Wipe-Clean Surfaces:** The chair's smooth surfaces can be easily wiped down with a damp cloth and mild soap after each use.
- **Detachable Tray Insert:** The tray insert is detachable and dishwasher-safe for thorough cleaning. Simply unclip and place in the dishwasher.
- **Removable 5-Point Harness:** The 5-point harness can be removed for cleaning. Refer to the product manual for specific washing instructions, typically machine washable.
- **Footrest:** The 2-position footrest can also be wiped clean.

5. Product Specifications



Figure 8: Dimensions of the Skip Hop EON High Chair.

Feature	Detail
Brand	Skip Hop
Model	EON
Color	Oat
Material Type	Beech Wood, Nylon, Polypropylene
Item Dimensions (D x W x H)	26.4"D x 27.4"W x 36"H
Item Weight	11.9 Pounds
Maximum Weight Recommendation (High Chair)	33 Pounds (15 kg)
Maximum Weight Recommendation (Big Kid Chair)	80 Pounds (36 kg)
Age Range Description	Baby (6 months to 5 years)

Feature	Detail
Assembly Required	Yes
Is Portable	No

6. Safety Information

- Always use the 5-point harness when your child is in the high chair or booster seat.
- Never leave your child unattended in the high chair.
- Ensure the high chair is placed on a flat, stable surface.
- Regularly inspect the high chair for any signs of wear, damage, or loose parts. Discontinue use if any damage is found.
- Keep children away from moving parts during assembly or conversion between modes.

7. Troubleshooting

If you encounter any issues with your Skip Hop EON High Chair, please refer to the detailed troubleshooting section in the full product manual that came with your purchase. Common issues often relate to assembly or proper adjustment of components. Ensure all parts are correctly aligned and securely locked into place.

8. Warranty & Support

For warranty information, product registration, or to contact customer support, please visit the official Skip Hop website or refer to the warranty card included with your purchase. Keep your proof of purchase for any warranty claims.