

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Armitron](#) /

› [Armitron Women's Bracelet Watch Model 75-3313 User Manual](#)

Armitron 75-3313

Armitron Women's Bracelet Watch Model 75-3313 User Manual

Comprehensive guide for setup, operation, and maintenance.

INTRODUCTION

Thank you for choosing the Armitron Women's Bracelet Watch, Model 75-3313. This manual provides essential instructions for the proper setup, operation, and care of your new timepiece. Please read this guide thoroughly to ensure optimal performance and longevity of your watch.



Front view of the Armitron Women's Bracelet Watch, Model 75-3313.

SETUP

1. Unboxing and Initial Inspection

Carefully remove the watch from its packaging. Inspect the watch for any visible damage or missing components. Ensure the protective film, if present, is removed from the crystal and case back.



The Armitron watch presented in its display box.

2. Setting the Time

Your Armitron watch is equipped with a Japanese Quartz movement. To set the time:

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown out to the time-setting position. You may feel a slight click.
3. Turn the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
4. Once the time is set, push the crown back into its original position to engage the movement and start the watch.





Side view of the watch, highlighting the crown for time adjustment.

3. Bracelet Adjustment

The metal bracelet is designed for a comfortable fit. If the bracelet is too loose, links may need to be removed. This process often requires specialized tools and precision.

- For minor adjustments, some bracelets include an extra snap closure that can be removed.
- For significant adjustments requiring link removal, it is recommended to take your watch to a professional jeweler. Attempting to remove links without proper tools or experience may damage the bracelet.

OPERATING YOUR WATCH

Timekeeping

Once the time is set and the crown is pushed back in, your watch will accurately display the time using its analog hands. The Japanese Quartz movement ensures precise timekeeping.

Water Resistance

Important: This watch is classified as **Not Water Resistant**. Avoid all contact with water, including showering, swimming, or exposure to rain. Water exposure can cause irreparable damage to the watch movement.

MAINTENANCE AND CARE

Cleaning

To maintain the appearance of your watch, wipe the case and bracelet regularly with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the finish and crystal.

Battery Replacement

The watch is powered by a battery. When the watch stops running, it indicates that the battery needs replacement. Battery replacement should be performed by a qualified watch technician to prevent damage to the movement and ensure proper sealing of the case back.





Back view of the watch, showing the case back where the battery is accessed.

Storage

When not wearing your watch, store it in a dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. The original watch box is ideal for storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch is not running.	<ul style="list-style-type: none"> • Crown is pulled out. • Battery is depleted. 	<ul style="list-style-type: none"> • Push the crown back into its normal operating position. • Replace the battery (recommended by a professional).
Time is incorrect.	<ul style="list-style-type: none"> • Time was not set correctly. • Crown was accidentally pulled out. 	<ul style="list-style-type: none"> • Refer to the "Setting the Time" section to reset the time. • Ensure the crown is fully pushed in after setting.
Condensation under crystal.	<ul style="list-style-type: none"> • Exposure to moisture (watch is not water resistant). 	<ul style="list-style-type: none"> • Immediately take the watch to a professional for inspection and repair to prevent further damage.

SPECIFICATIONS

Model Number	75-3313
Display Type	Analog
Movement	Japanese Quartz
Power Source	Battery Powered
Water Resistance	Not Water Resistant
Crystal Material	Mineral Glass
Case Material	Metal
Case Diameter	17 Millimeters
Case Thickness	7.5 Millimeters
Band Material	Metal
Band Width	9 Millimeters
Band Length	6.75 Inches
Closure Type	Jewelry Clasp
Item Weight	0.22 Kilograms

WARRANTY INFORMATION

Your Armitron watch comes with a **Limited Warranty**. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. This warranty typically covers manufacturing defects but does not cover damage resulting from improper use, accidents, or unauthorized repairs.

CUSTOMER SUPPORT

If you have any questions, require assistance with your watch, or need to inquire about warranty service, please contact Armitron customer support.

For more information, you can visit the official Armitron store: [Armitron Store on Amazon](#).



© 2026 Armitron. All rights reserved.