



Manuals.plus /

- › ezilight /
- › EZilight Mosquito Stop MS 10 Portable Mosquito Repellent User Manual

ezilight MS 10

EZilight Mosquito Stop MS 10 Portable Mosquito Repellent User Manual

Model: MS 10 | Brand: EZilight

1. INTRODUCTION

The EZilight Mosquito Stop MS 10 is a portable mosquito repellent device designed to provide effective protection against common mosquitoes, tiger mosquitoes, and other flying insects. Its versatile design allows for various wearing options, making it suitable for use in diverse environments, from outdoor adventures to daily urban life. This manual provides essential information for the proper use, maintenance, and care of your device.

2. PRODUCT OVERVIEW

The EZilight Mosquito Stop MS 10 features a compact design with multiple attachment options for maximum portability and convenience.



Figure 1: EZlight Mosquito Stop MS 10 with carabiner attachment. The device is black with a rose gold accent on the button area.

Key Features:

- **Effective Protection:** Repels common and tiger mosquitoes, as well as other flying insects.
- **Unparalleled Portability:** Can be worn as a wristband, ankle band, or attached with a carabiner. Suitable for pets by attaching to their collar.
- **Extended Battery Life:** Offers up to 144 hours of continuous protection on a single charge.
- **Family and Pet Safe:** Designed with safety in mind for all family members, including children and pets.
- **Discreet Technology:** Provides effective protection without chemicals or noticeable odors.



Figure 2: The EZlight Mosquito Stop MS 10 device integrated into a black silicone wristband, ready for wear.



Figure 3: The main repellent unit detached from the wristband, revealing the charging port at one end.

3. SETUP

1. **Initial Charge:** Before first use, fully charge the device for 3 hours. Connect the device to a suitable USB power source using the provided charging cable.
2. **Attachment:**
 - **Wrist/Ankle:** Insert the repellent unit into the silicone wristband. Secure it comfortably on your wrist or ankle.
 - **Carabiner:** Insert the repellent unit into the carabiner holder. Attach the carabiner to a bag, belt loop, or other convenient location.
 - **Pet Collar:** Attach the device (either in wristband or carabiner holder) to your pet's collar, ensuring it does not cause discomfort.



Figure 4: The EZlight Mosquito Stop MS 10 unit alongside its carabiner attachment, demonstrating the modular design.

4. OPERATING INSTRUCTIONS

1. **Power On:** After charging, press and hold the power button on the device to turn it on. An indicator light may illuminate to confirm activation.
2. **Placement:** Wear the device on your wrist, ankle, or attach it to clothing or a bag. For pets, attach it to their collar. Ensure the device is in close proximity to the area you wish to protect.
3. **Continuous Protection:** The device will emit ultrasonic waves to repel mosquitoes. It operates continuously once activated.
4. **Power Off:** To turn off the device, press and hold the power button again until the indicator light (if any) turns off.



Figure 5: A hand wearing the EZlight Mosquito Stop MS 10 on the wrist, illustrating its use for personal mosquito protection.

5. MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. If necessary, use a slightly damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** The device is designed to withstand splashes (e.g., hand washing). However, it is not recommended for submersion in water.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place. Ensure it is fully charged before storing and recharge periodically to maintain battery health.



Figure 6: The EZlight Mosquito Stop MS 10 being worn while washing hands, indicating its splash-resistant design.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device for 3 hours.
Repellent effect seems weak.	Device is too far from the user or area to be protected.	Ensure the device is worn close to the body or within the immediate vicinity.
Battery life is shorter than expected.	Frequent use or aging battery.	Ensure full charge before each use. Battery performance may degrade over time.

7. SPECIFICATIONS

Feature	Detail
Brand	EZlight
Model Number	3760372555597
Color	Black
Dimensions (L x W x H)	26.2 x 1.4 x 2.9 cm
Weight	60 grams
Material	Plastic
Battery Life	Up to 144 hours

8. SAFETY INFORMATION

- Keep the device out of reach of small children when not in use, especially small detachable parts.
- Do not attempt to open, modify, or repair the device yourself. This may void the warranty and pose safety risks.
- Avoid exposing the device to extreme temperatures, direct sunlight for prolonged periods, or open flames.
- Do not submerge the device in water. While splash-resistant, it is not waterproof.
- Dispose of the device and its battery responsibly according to local regulations.
- If the device becomes damaged, discontinue use immediately.

9. WARRANTY AND SUPPORT

EZlight products are designed for durability and performance. Spare parts availability is indicated for 5 years from the date of purchase. For warranty claims, technical support, or further assistance, please contact EZlight customer service through their official website or the retailer where the product was purchased. Please retain your proof of purchase for warranty purposes.