

[manuals.plus](#) /

› [YASHE](#) /

› [YASHE SB-0902-2 Milk Frother and Steamer User Manual](#)

**YASHE SB-0902-2**

# **YASHE SB-0902-2 Milk Frother and Steamer User Manual**

Model: SB-0902-2

## **INTRODUCTION**

The YASHE SB-0902-2 Milk Frother and Steamer is a versatile appliance designed to create various milk-based beverages. This 4-in-1 electric frother can produce hot milk, warm milk foam, cold milk froth, and warm cocoa/hot chocolate. Its detachable cup and silent operation enhance user convenience, allowing you to prepare cafe-style drinks at home.

# One-Touch Control Button



Image: The YASHE Milk Frother and Steamer, fully assembled, ready for use.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions thoroughly before operating the appliance.
- Do not immerse the power base, cord, or plug in water or other liquids.
- Ensure the frother is placed on a stable, level, heat-resistant surface, away from edges.
- Keep the appliance out of reach of children.
- This appliance features an automatic shut-off function for safety and energy saving.
- The frother includes overheat protection to prevent damage from empty operation.
- Only use the frother with the provided power base.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner.

# Even Heating, Overheat Protection

Auto shut-off after 40 seconds of empty operation for added safety.



Image: Illustration of the even heating and overheat protection mechanism within the frother.

## PRODUCT OVERVIEW AND COMPONENTS

The YASHE SB-0902-2 Milk Frother consists of the following main components:

- **Frother Jug:** Detachable stainless steel cup with handle and lid.
- **Power Base:** Contains the heating element and control button.
- **Lid:** Transparent lid for the frother jug.
- **Whisker/Stirrers:** Two types of stirrers for different functions.

### Whisker Types:

- **Toothed Stirrer:** Used for creating foam for beverages like Iced Coffee, Cappuccino, Latte, and Chocolate Milk.
- **Circular Stirrer:** Used for heating milk or making hot chocolate without foam.

# Get Perfect Froth

make cafeteria-style coffee drinks



Image: Close-up view of the Toothed Stirrer (for foam) and Circular Stirrer (for heating/mixing).

## SETUP

- Unpack:** Carefully remove all components from the packaging.
- Initial Cleaning:** Before first use, wash the frother jug and lid with warm soapy water, then rinse thoroughly. Wipe the power base with a damp cloth. Ensure all parts are completely dry before assembly.
- Placement:** Place the power base on a dry, flat, and stable surface.
- Attach Whisk:** Select the appropriate whisk (Toothed for foam, Circular for heating/mixing) and securely place it onto the spindle inside the frother jug.

## OPERATING INSTRUCTIONS

The YASHE Milk Frother offers 4-in-1 functionality with simple one-button operation.

### Filling Guidelines:

Observe the maximum fill lines inside the frother jug to prevent overflow and ensure optimal performance.

- Max-Level for Heating Milk:** Do not exceed 7.78 oz (230ml).
- Max-Level for Hot Milk Frother:** Do not exceed 4.4 oz (130ml).

Using milk with a fat content of over 3% (e.g., whole milk, soy milk, almond milk) is recommended for best frothing results.

# Precise Tick Marks

Please use strictly within the range



Image: Internal markings indicating maximum fill levels for heating milk and frothing.

## One-Touch Operation:

- Choose Whisk:** Select the appropriate whisk (Toothed for foam, Circular for heating/mixing) and place it inside the jug.
- Pour Milk:** Pour the desired amount of fresh milk into the jug, ensuring it does not exceed the indicated MAX level for your chosen function.
- Close Lid:** Place the lid securely on the frother jug.
- Place on Base:** Position the frother jug onto the power base.
- Select Function:** Press the control button to cycle through the available functions. The indicator light will change color to show the selected mode:
  - **Red Light On:** Heats milk (with circular stirrer) or makes warm milk foam (with toothed stirrer).
  - **White Light On:** Makes warm cocoa or hot chocolate (with circular stirrer).
  - **Blue Light On:** Makes cold cocoa (with circular stirrer) or cold milk froth (with toothed stirrer).
- Start:** The frother will begin operation automatically after selecting the function.

7. **Completion:** Once the process is complete, the frother will automatically shut off. The indicator light will flash for approximately 30 seconds.



Image: Visual guide to the one-touch control button and its corresponding light indicators for various functions.



Image: Step-by-step visual guide on how to easily make rich milk foam.

## MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your YASHE Milk Frother.

- **Detachable Jug:** The inner tank of the frother jug is made of 304 stainless steel, which is wear-resistant and scratch-resistant.
- **Dishwasher Safe:** The detachable frother jug is dishwasher safe, allowing for convenient and thorough cleaning.
- **Hand Wash:** For hand washing, rinse the jug and whisk under running water immediately after use. Use a soft sponge and mild detergent if necessary. Pay attention to cleaning underneath the frothing whisk where milk solids can accumulate.
- **Power Base:** Wipe the power base with a damp cloth. Do not immerse the power base in water.
- **Drying:** Ensure all parts are completely dry before storing or next use.

## Easy To Clean



**Hand Wash**



**Dishwasher Safe**

Image: Demonstrates both hand washing and dishwasher cleaning options for the frother jug.

## TROUBLESHOOTING

If you encounter issues with your YASHE Milk Frother, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Frother does not turn on.	No power connection.	Ensure the power cord is securely plugged into a working outlet and the frother jug is correctly placed on the power base.
Milk not frothing properly or foam is too thin.	Incorrect whisk used; insufficient milk fat content; milk level too high or low.	Ensure the toothed stirrer is used for frothing. Use whole milk or milk with over 3% fat content. Verify milk level is within the MAX line for frothing (4.4 oz/130ml).
Milk sticks to the bottom of the jug.	Residue from previous use; insufficient cleaning.	Clean the frother jug immediately after each use. Ensure thorough cleaning, especially around the whisk spindle and heating element area.
Device stops working unexpectedly.	Internal malfunction; prolonged use.	Unplug the device and allow it to cool down. If the issue persists, refer to warranty information or contact customer support.

## SPECIFICATIONS

Feature	Specification
Brand	YASHE
Model Number	SB-0902-2
Colour	Silver
Product Dimensions	14.78 x 14.4 x 24.99 cm
Capacity	230 Milliliters (7.78 oz)
Power/Wattage	550 watts
Voltage	120 Volts
Material	Stainless Steel
Special Features	Auto Shut-Off, Cool-Touch Casing, Detachable Base, Quiet Function, Variable FrothSetting
Item Weight	1.2 kg (2.64 Pounds)
Included Components	Lid, User Manual, Power Supply Base, Power Cable
Product Care Instructions	Dishwasher Safe, Hand Wash

## WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or service inquiries, please refer to the documentation included with your purchase or visit the official YASHE website. Keep your proof of purchase for any warranty claims.

