

## YOSUN G25N8L

# YOSUN G25N8L Replacement Voice Remote Control User Manual

## INTRODUCTION

This manual provides comprehensive instructions for the YOSUN G25N8L Replacement Voice Remote Control. This remote is designed to replace original voice remotes for various Fire TV Stick models and Amazon Fire Smart TVs, offering voice search capabilities and customizable shortcut buttons for enhanced control and convenience.

## PRODUCT OVERVIEW

The YOSUN G25N8L remote control features a standard layout with dedicated buttons for navigation, media playback, voice commands, and quick access to popular streaming services. Its compact design ensures comfortable handling.





Image: YOSUN G25N8L Replacement Voice Remote Control.

## Button Functions and Dimensions



Product Size: 5.7inch \* 1.49inch \* 0.7inch  
 Batteries: 2 AAA batteries (not included)

Image: Detailed diagram of the YOSUN G25N8L remote control, highlighting button functions and overall dimensions (5.7 inches \* 1.49 inches \* 0.7 inches). Requires 2 AAA batteries (not included).

- **Power Button:** Turns the connected device on or off.
- **Microphone/Alexa Voice Button:** Activates voice commands for search and control.
- **Navigation Ring:** Used to move through menus and selections.
- **Select Button:** Confirms selections.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Navigates to the home screen.
- **Menu Button:** Accesses additional options or settings.
- **Play/Pause, Fast Forward, Rewind:** Standard media playback controls.
- **Guide Button:** Opens the TV guide.
- **Mute Button:** Mutes audio.
- **Volume Up/Down:** Adjusts audio volume.
- **Shortcut Buttons (Video, Netflix, Disney+, Hulu):** Direct access to specified streaming services.
- **Customization Buttons (1, 2):** Programmable buttons for personalized shortcuts.

## Applicable Models

This replacement voice remote is compatible with a wide range of streaming devices and smart TVs. Ensure your device is listed below for proper functionality.

# New Voice Replacement Remote for

## Streaming Devices:

for Smart TV Cube (1st / 2nd / 3rd Gen)  
for Smart TV Stick 4K Max (1st / 2nd Gen)  
for Smart TV Stick 4K (1st / 2nd Gen)

for Smart TV Stick (1st / 2nd / 3rd Gen)  
for Smart TV Stick Lite  
for Smart TV (3rd Gen, Pendant Design)

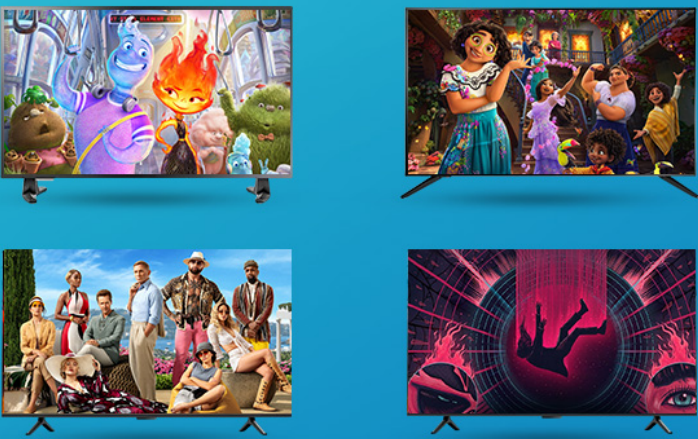


Image: Visual representation of compatible streaming devices and smart TVs.

- Smart TV Stick 4K Max (1st / 2nd Gen)
- Smart TV Stick 4K (1st / 2nd Gen)
- Smart TV Stick (1st / 2nd / 3rd Gen)
- Smart TV Cube (1st / 2nd / 3rd Gen)
- Smart TV Stick Lite
- Smart TV (3rd Gen, Pendant Design)
- For Series Smart TVs, 2/4 Series Smart TVs
- For Smart TVs: LF711/LF621U/LF421U/LF221U/C350/A810U/A710U/M550/V35 series
- For Smart TVs: F30/F20/F50/DF710/DF711/DF310/DF510/DF311/DF620 series
- For Smart TVs PN450/PN651/PN851/PN951 series
- Replacement for TV Stick Voice Remote (2nd Gen/3rd Gen/Lite/Lite 2nd Gen)
- Replacement for TV remote control (NS-RCFNA-21, CT-95018, CT-RC1US-21, NS-RCFNA-19, CT-RC1US-19)

## Not Compatible With

This remote control is not compatible with the following devices:

## Not compatible with:

- ✗ Not for Roku stick
- ✗ Not for Roku streaming stick 4k
- ✗ Not for Roku stick 4k
- ✗ Not for Roku streaming stick 4k+
- ✗ Not for Roku stick 4k+



Image: Visual representation of devices not compatible with the YOSUN G25N8L remote control.

- Roku stick
- Roku stick 4k
- Roku stick 4k+
- Roku streaming stick 4k
- Roku streaming stick 4k+

## SETUP AND PAIRING

Follow these steps to pair your YOSUN G25N8L remote control with your device.

### Pairing with Fire TV Stick or Fire TV Cube

1. **Insert Batteries:** Open the battery compartment and insert two new AAA batteries (not included), ensuring correct polarity.
2. **Reset Remote:** Press and hold the **Back** button (⏪), **Home** button (🏠), and **Menu** button (☰) simultaneously for 10 seconds. This will reset the remote.
3. **Update TV System:** Ensure your TV system has been updated to the latest version before attempting to pair. Navigate to Settings > My TV > About > System Update to check for updates.
4. **Power Cycle Device:** Unplug the power cord of your Fire TV Stick or Fire TV Cube, wait for 5 seconds, then plug it back in.
5. **Initiate Pairing:** Once your device restarts and displays the home screen, a 'Waiting for Pairing' tip should appear. Press and hold the **Home** button (🏠) on the new remote for 10 seconds. The remote should pair automatically.

### Pairing with Smart TVs

1. **Insert Batteries:** Open the battery compartment and insert two new AAA batteries (not included),

ensuring correct polarity.

2. **Reset Remote:** Press and hold the **Back** button (🔑), **Home** button (🏠), and **Menu** button (☰) simultaneously for 10 seconds. This will reset the remote.
3. **Access TV Settings:** Use your existing TV remote or the TV's physical buttons to navigate to the TV's settings menu.
4. **Add New Remote:** In the TV settings, select **Settings > Controllers & Bluetooth Devices > Amazon TV Remotes > Add new remote**.
5. **Initiate Pairing:** Follow the on-screen prompts. When prompted, press and hold the **Home** button (🏠) on the new remote for 10 seconds. The TV will search for and pair with the remote.

## VOICE FUNCTION ACTIVATION

The YOSUN G25N8L remote supports voice commands for easy content search and device control. After successful pairing, the voice function should be active.

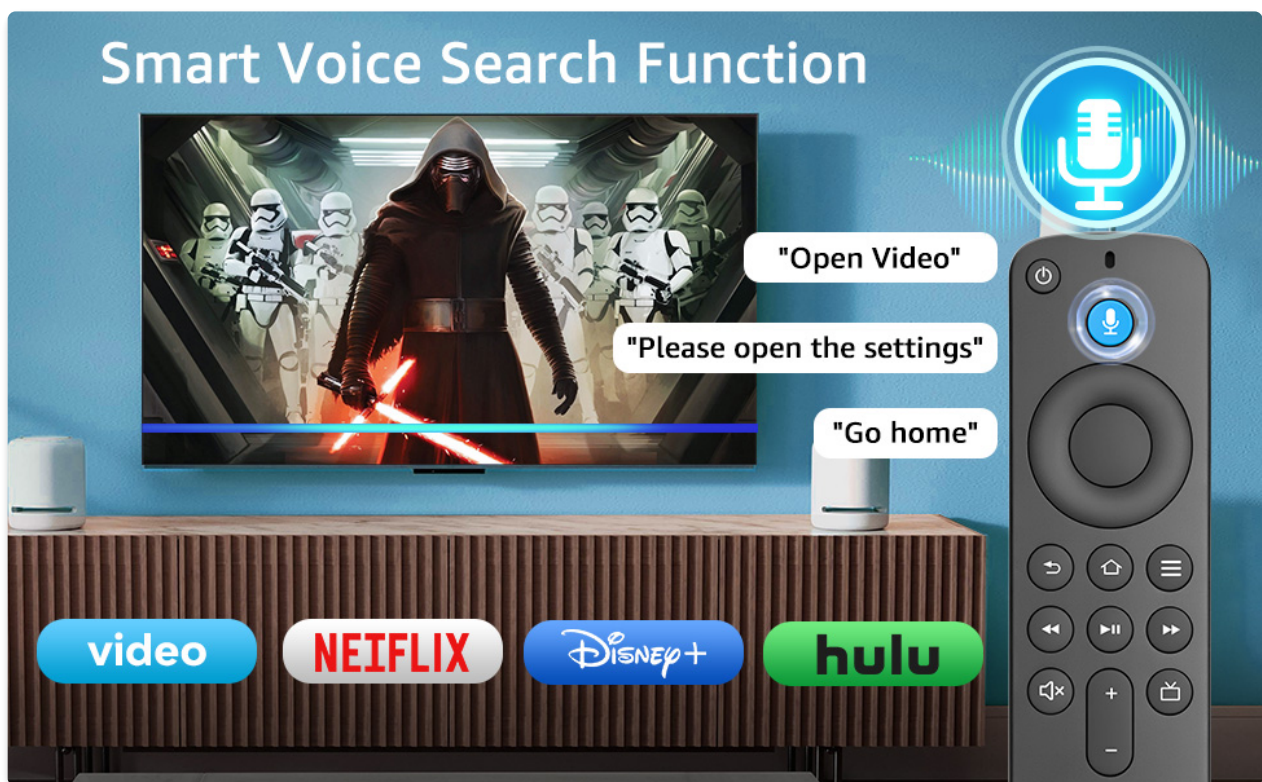


Image: The remote control's voice search function in use, showing examples like "Open Video" or "Go home".

To use the voice function, press and hold the **Microphone/Alexa Voice Button** (🔊) and speak your command clearly. Release the button when you are finished speaking.

## CUSTOMIZATION BUTTONS

The remote includes two customizable buttons (labeled 1 and 2) that allow you to program quick access to your favorite streaming services or applications.



## One-Tap Switching

Find Your Favorite Shows



## Program Customizable Buttons

The list of shortcut options will be personalized to you.



Image: The remote control demonstrating one-tap switching to various streaming services and the concept of programmable customization buttons.

To program a customization button:

1. Navigate to the desired application or service on your TV.
2. Press and hold either the **1** or **2** customization button for a few seconds until a confirmation message appears on your screen.
3. The button is now programmed to launch that application directly with a single press.

## TROUBLESHOOTING

If you encounter issues with your YOSUN G25N8L remote control, refer to the following common problems and solutions:

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"><li>• Ensure batteries are correctly inserted and not depleted. Replace with new AAA batteries if necessary.</li><li>• Make sure there are no obstructions between the remote and your device.</li><li>• Re-pair the remote control following the 'Setup and Pairing' instructions.</li></ul>
Voice function is not working.	<ul style="list-style-type: none"><li>• Confirm the remote is successfully paired.</li><li>• Ensure you are pressing and holding the Microphone/Alexa Voice Button while speaking.</li><li>• Check your device's settings to ensure voice control is enabled.</li></ul>

Problem	Solution
Shortcut buttons are not working.	<ul style="list-style-type: none"><li>• Verify that the remote is properly paired.</li><li>• For customizable buttons (1, 2), ensure they have been programmed as per the 'Customization Buttons' section.</li></ul>
Remote disconnects frequently.	<ul style="list-style-type: none"><li>• Replace batteries with fresh ones.</li><li>• Ensure your device's software is up to date.</li><li>• Try re-pairing the remote.</li></ul>

## SPECIFICATIONS

---

Key technical specifications for the YOSUN G25N8L Replacement Voice Remote Control:

- **Brand:** YOSUN
- **Model Number:** G25N8L
- **Special Feature:** Voice Search
- **Connectivity Technology:** Infrared
- **Controller Type:** Voice Control
- **Compatible Devices:** Television (Fire Stick/Amazon Toshiba Insignia Fire Smart TVs)
- **Maximum Number of Supported Devices:** 1
- **Button Quantity:** 27
- **Maximum Range:** 30 Feet
- **Battery Type:** AAA
- **Number of Batteries:** 2 AAA batteries required (not included)
- **Smart Home Compatibility:** Smart Home Compatible

## WARRANTY AND SUPPORT

---

The YOSUN G25N8L Replacement Voice Remote Control comes with a **1 Year Warranty** from the manufacturer. For any support inquiries, troubleshooting assistance beyond this manual, or warranty claims, please contact YOSUN customer service through your purchase platform or the official YOSUN website.