

[Manuals.plus](#) /

> [Jeazans](#) /

> Jeazans Kids Tablet KT1016 User Manual

Jeazans KT1016

Jeazans Kids Tablet KT1016 User Manual

Model: KT1016 | Brand: Jeazans

INTRODUCTION

The Jeazans Kids Tablet KT1016 is an advanced Android 14 tablet designed specifically for children, featuring robust parental controls, an Octa-Core processor, and a durable protective case. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your tablet, ensuring a safe and engaging experience for young users.



Image: The Jeazans Kids Tablet KT1016, showcasing its vibrant display and protective purple case.

WHAT'S IN THE BOX

Upon unboxing your Jeazans Kids Tablet KT1016, please verify that all the following items are included:

- Jeazans Kids Tablet KT1016 (with pre-installed protective case)
- USB Type-C Cable
- 3 Extra DIY Stickers (for customization)



Image: The Jeazans Kids Tablet alongside the three additional DIY stickers for personalization.

SETUP

1. Charging the Tablet

Before first use, fully charge the tablet. Connect the provided USB Type-C cable to the tablet's charging port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The battery indicator on

the screen will show charging status. A full charge typically takes about 1.5 hours.

2. Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the Jeazans logo appears.
- **To Power Off:** Press and hold the Power button until a power menu appears on the screen. Select 'Power off' and confirm.
- **To Restart:** From the power menu, select 'Restart'.

3. Initial Setup

Upon first power-on, follow the on-screen prompts to complete the initial setup:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Select your Wi-Fi network and enter the password to connect to the internet.
3. **Google Account:** Sign in with an existing Google account or create a new one. This is necessary for downloading apps from Google Play.
4. **Date and Time:** Set the correct date and time, or allow the tablet to set it automatically via network.
5. **Parental Control Setup:** The tablet comes with a pre-installed parental control system. Follow the instructions to set up profiles for your children, manage content, set screen time limits, and control app access. This ensures a safe and clean online environment.

Kid-Friendly & Kid-Safe



Set screen time



Monitor activity



Content Filter



App access control



Image: A mother and child interacting with the tablet, highlighting the kid-friendly and kid-safe features like screen time, activity monitoring, content filtering, and app access control.

4. Inserting a Micro SD Card

The tablet supports storage expansion up to 1TB via a Micro SD card (not included). Locate the Micro SD card slot on the side of the tablet. Gently insert the Micro SD card into the slot until it clicks into place. You can then use this additional storage for e-books, songs, pictures, and videos.

OPERATING THE TABLET

1. Navigating the Android 14 OS

The tablet runs on the Android 14.0 operating system, offering a user-friendly interface. Swipe gestures are used for navigation:

- **Home Screen:** Swipe up from the bottom to access the app drawer.
- **Notifications/Quick Settings:** Swipe down from the top of the screen.
- **Multitasking:** Swipe up from the bottom and hold to see recent apps.

Android 14.0 OS



Image: The tablet screen showing the Android 14.0 OS interface with icons for Wi-Fi, Kids Mode, Camera, Eye Protection, Google Play, and Parental Control.

2. Using Parental Controls and Kids App

The pre-installed parental control system allows you to manage your child's tablet usage. Access the parental control settings using your password to:

- Set daily screen time limits.
- Filter web content to ensure age-appropriate browsing.
- Approve or block specific applications.
- Monitor your child's activity and usage patterns.



Image: A visual representation of the tablet's pre-installed apps and the parental control interface, demonstrating content management and safety features.

3. Display and Eye Protection Features

The 10.1-inch IPS HD touchscreen (1280x800 resolution) provides clear visuals. For eye comfort, the tablet incorporates low blue light technology. Activate the professional reading mode with one click to reduce screen flicker and harmful blue light, promoting safer viewing during extended use.

1280*800 IPS HD Touchscreen



Image: Children enjoying content on the 1280*800 IPS HD touchscreen, illustrating its vibrant display quality.

4. Camera Usage

The tablet is equipped with dual cameras (front and rear). Open the Camera app to take photos or record videos. Ensure adequate lighting for best results. Photos and videos are saved to the tablet's internal storage or the inserted Micro SD card.

5. App Management and Storage

With 64GB of internal storage and expandability up to 1TB via Micro SD card, you have ample space for apps and media. Download new educational and entertainment apps from the Google Play Store. Manage installed apps through the tablet's settings to free up space or adjust permissions.

MAINTENANCE

1. Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the tablet to extreme temperatures (hot or cold), as this can degrade battery life.

- Use the provided USB Type-C cable for charging to ensure compatibility and safety.

Enjoy Long-Lasting Battery Life

Our Tablet for Kids is equipped with 5000mAh lithium ion battery and allows up to 6 hours of reading use or 4 hours of video play on a single charge. It is convenient for family gathering, camping, long flights, and road trips. Let your kids enjoy their time.



Image: Two children happily using the Jeazans tablet, symbolizing its long-lasting battery life for extended play and learning.

2. Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution.
- Avoid using harsh chemicals, abrasive materials, or excessive moisture.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Jeazans Kids Tablet KT1016.

Problem	Possible Solution
Tablet does not turn on.	Ensure the tablet is charged. Connect to a charger for at least 30 minutes. If still unresponsive, press and hold the Power button for 10-15 seconds to force a restart.
Slow performance or apps crashing.	Close unused apps running in the background. Clear app caches in Settings > Apps. Restart the tablet. Ensure sufficient storage space is available.
Wi-Fi connection issues.	Ensure Wi-Fi is enabled. Restart your Wi-Fi router. Forget the network in tablet settings and reconnect. Check if other devices can connect to the same network.
Screen is unresponsive or frozen.	Force restart the tablet by holding the Power button for 10-15 seconds. Ensure the screen is clean and free of debris.
Parental controls not working as expected.	Verify your parental control settings and password. Ensure the tablet is connected to the internet for content filtering updates.

SPECIFICATIONS

Detailed technical specifications for the Jeazans Kids Tablet KT1016:

Feature	Detail
---------	--------

Feature	Detail
Model Name	KT1016
Operating System	Android 14.0
Processor	Octa-Core (2.0 GHz)
RAM	8GB
Internal Storage	64GB
Expandable Storage	Up to 1TB via Micro SD Card (not included)
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 IPS HD
Rear Camera Resolution	5 MP
Wireless Type	802.11ax (Wi-Fi)
Battery Life (Average)	Up to 6 hours (mixed usage)
Item Weight	2.54 pounds
Product Dimensions	9.64 x 0.31 x 6.42 inches
Color	Purple

WARRANTY AND SUPPORT

The Jeazans Kids Tablet KT1016 comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures reliable product performance.

For any questions, technical assistance, or warranty claims, please contact Jeazans Official customer service. Our team is dedicated to providing support and ensuring a pleasant experience with your product.

Please refer to your purchase documentation or the official Jeazans website for the most current contact information.

© 2025 Jeazans. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D2R5TNW4>

More documents and user manuals: <https://manuals.plus/>