

## HPRT T260LR

# HPRT T260LR 2-Inch Bluetooth Portable Label Printer User Manual

Model: T260LR

## 1. INTRODUCTION

This manual provides detailed instructions for the HPRT T260LR 2-Inch Bluetooth Portable Label Printer. Please read this manual thoroughly before using the device to ensure proper operation and to maximize its lifespan. This compact thermal label printer is designed for various labeling needs in home, office, and small business environments.



Figure 1: HPRT T260LR Label Printer with example labels.

## 2. WHAT'S IN THE BOX

---

Verify that all items are present in the package:

- 1 x HPRT T260LR Portable Label Printer
- 1 x Label Paper Roll (pre-installed or separate)
- 1 x USB-C Cable
- 1 x User's Manual

## 3. SETUP

---

### 3.1. Powering On/Off

1. To power on, press and hold the power button located on the side of the printer for approximately 3 seconds until the indicator light illuminates.
2. To power off, press and hold the power button again for 3 seconds.

### 3.2. Loading Label Paper

1. Open the printer cover by gently pulling it outward with both hands.
2. Insert the label paper roll into the compartment. Ensure the print side (thermosensitive layer) faces upwards. The printer supports label widths ranging from 0.8 to 2 inches (20-50mm).
3. Lift the paper guide lever and adjust the paper guide to match the width of your label paper.
4. Press the lever down to lock the paper guide in place.
5. Pull out a short length of paper beyond the paper outlet and close the cover. The printer will automatically feed the paper and roll it back, preparing for printing.

# ✦ Palm-Sized Printer for Easy Carrying ✦

Small But Powerful

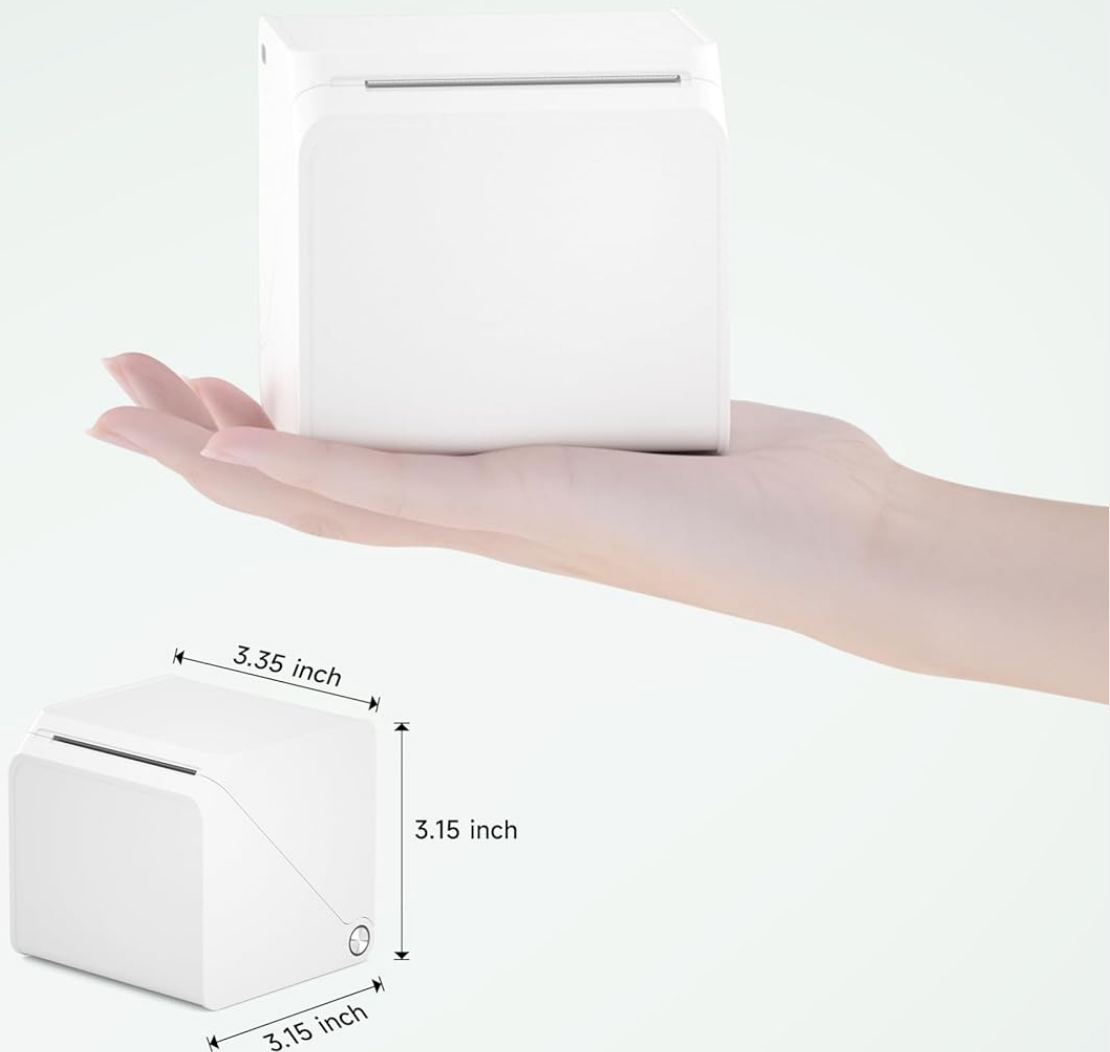 


Figure 2: Visual guide for loading label paper.

Video 1: Detailed instructions on how to load label paper into the HPRT T260LR printer.

### 3.3. App Installation & Bluetooth Connection

1. Download the 'HereLabel' app from your device's app store (Google Play Store for Android or Apple App Store for iOS). You can also scan the QR code provided in the quick start guide or visit [hm.hpri.com/en/download/?from=T21](https://hm.hpri.com/en/download/?from=T21).
2. Ensure Bluetooth is enabled on your mobile phone.
3. Open the 'HereLabel' app. Tap on the 'Not connected' option, usually found at the top of the screen.
4. From the list of available Bluetooth devices, select 'HM-T260LR-XXXX' (where XXXX represents the last four digits of your printer's Bluetooth address) to connect.

# Bluetooth Connection via HereLabel App



Figure 3: Connecting the HPRT T260LR via the HereLabel app.

Video 2: Guide for mobile app setup and label editing with the HPRT T260LR.

## 4. OPERATING INSTRUCTIONS

### 4.1. Creating and Customizing Labels

The 'HereLabel' app offers extensive customization options:

1. **Select a Template:** Choose from recommended templates under 'Current Consumables' or tap 'New' to start from scratch.
2. **Insert Elements:** The app supports various elements including text, dates, barcodes, QR codes, icons, tables, lines,

and shapes.

3. **Customize Elements:** Adjust font, font size, font effects (bold, italic, underline), and element position on the label.
4. **Image Integration:** Upload images from your phone's gallery to include on your labels.



Figure 4: Effortless label customization through the user-friendly HereLabel app.

Video 3: Demonstrating customizable labeling for home and small business use.

## 4.2. Printing Labels

Once your label design is complete:

1. Review the print preview in the app to ensure the layout is correct.
2. Adjust the number of copies if needed.

3. Tap the 'Print' button to send the label design to your HPRT T260LR printer.

## 5. FEATURES

### 5.1. Compact and Portable Design

The HPRT T260LR features a cuboid design, measuring approximately 3.15 x 3.35 x 3.15 inches, making it highly portable and suitable for on-the-go labeling.



Figure 5: The palm-sized design of the HPRT T260LR for easy carrying.

### 5.2. Ink-Free Thermal Printing

Utilizes thermal printing technology, eliminating the need for ink cartridges. This ensures clear prints and reduces ongoing

costs.

## ✨ Effortless Label Customization ✨

### User-Friendly App for Quick Design Adjustments ✨



Figure 6: Applications of ink-free thermal labels for various uses.

### 5.3. Automatic Label Recognition (RFID)

The printer features automatic label recognition, simplifying the printing process by detecting label size and type. This feature is compatible with HPRT Thermal Label Paper.

# ✨ Automatic Label Recognition

Automatic Paper Rollback and Feed ✨  
(Compatible only with HPRT Thermal Label Paper)



Figure 7: Automatic label recognition in action.

## 5.4. Versatile Label Sizes

Supports a wide range of label sizes and shapes, with label widths from 0.8 to 2 inches (20-50mm), allowing for diverse labeling applications.

# ✨ Ink-free Thermal Label Printer

Suitable for Small Business & Home Use ✨

Logo



Thank-You Sticker



Address Label



Price Label



Gift Tag



Name Tag



Figure 8: Examples of versatile label sizes and types supported.

## 6. MAINTENANCE

### 6.1. Cleaning the Print Head

To maintain print quality, regularly clean the print head:

1. Ensure the printer is powered off and disconnected from any power source.
2. Open the printer cover.
3. Gently wipe the print head with a cotton swab lightly dampened with isopropyl alcohol.
4. Allow the print head to dry completely before closing the cover and powering on the printer.

## 6.2. Battery Care

The printer contains a Lithium Ion battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Store the printer in a cool, dry place when not in use for extended periods.
- Charge the printer using the provided USB-C cable.

## 7. TROUBLESHOOTING

If you encounter issues with your HPRT T260LR printer, refer to the following common solutions:

Problem	Possible Cause	Solution
Printer does not power on	Low battery or power button not held long enough.	Charge the printer using the USB-C cable. Hold the power button for 3 seconds.
Cannot connect via Bluetooth	Bluetooth is off on phone, app not open, or printer not in pairing mode.	Ensure phone Bluetooth is on. Open 'HereLabel' app. Power cycle printer and try connecting again.
Poor print quality	Dirty print head or incorrect label paper.	Clean the print head (see Section 6.1). Ensure you are using HPRT Thermal Label Paper.
Labels not feeding correctly	Paper roll incorrectly loaded or paper guide not adjusted.	Re-load the label paper correctly (see Section 3.2). Adjust the paper guide to fit the label width.

For further assistance, please refer to the 'Help' section within the 'HereLabel' app or contact HPRT customer support.

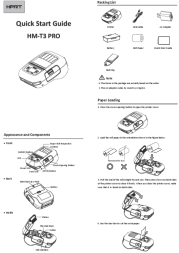 
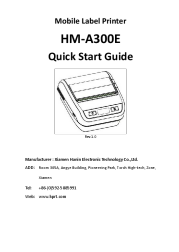 
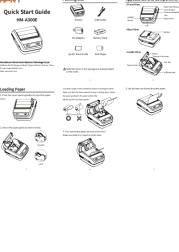 

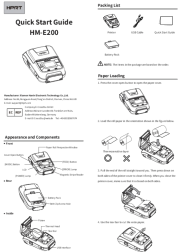 
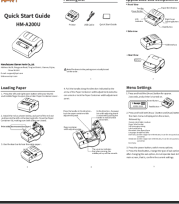 
## 8. SPECIFICATIONS

- **Model:** HM-T260LR
- **Dimensions:** 3.15 x 3.35 x 3.15 inches
- **Item Weight:** 12.6 ounces
- **Connectivity:** Bluetooth
- **Printing Technology:** Thermal
- **Printer Output:** Monochrome
- **Maximum Black and White Print Resolution:** 203 Dots Per Inch
- **Maximum Media Size:** 1.97 x 3.15 inch
- **Supported Media Sizes:** 1.75 x 2.5 inches (and other sizes up to 2 inches width)
- **Compatible Devices:** Smartphones (Android, iOS)
- **Hardware Interface:** USB Type C
- **Batteries:** 1 Lithium Ion battery (included)

## 9. WARRANTY AND SUPPORT

HPRT products are covered by a manufacturer's warranty. For specific warranty details and duration, please refer to the warranty card included with your product or visit the official HPRT website. For technical support, troubleshooting, or service inquiries, please contact HPRT customer service through their official channels. Keep your purchase receipt as proof of purchase for warranty claims.

Related Documents - T260LR

	<p><a href="#">HPRT HM-T3 PRO Portable Label Printer Quick Start Guide</a></p> <p>A quick start guide for the HPRT HM-T3 PRO portable label printer, detailing packing contents, paper loading, component identification, battery installation and charging, Wi-Fi setup, menu navigation, and FCC compliance information.</p>
	<p><a href="#">HPRT HM-A300E Mobile Label Printer Quick Start Guide</a></p> <p>A quick start guide for the HPRT HM-A300E mobile label printer, covering setup, accessories, and basic operations.</p>
	<p><a href="#">HPRT HM-A300E Quick Start Guide: Setup and Operation</a></p> <p>A concise guide to setting up and operating the HPRT HM-A300E portable printer, covering packing, loading paper, battery installation, charging, and menu settings.</p>
	<p><a href="#">HPRT SK41 Direct Thermal Label Printer User Guide</a></p> <p>Comprehensive user guide for the HPRT SK41 direct thermal label printer, covering setup, operation, troubleshooting, and driver installation for Windows and macOS.</p>
	<p><a href="#">HPRT HM-E200 Quick Start Guide</a></p> <p>This guide provides instructions for setting up and using the HPRT HM-E200 portable thermal printer, including packing list, paper loading, battery installation, charging, and menu settings.</p>
	<p><a href="#">HPRT HM-A200U Portable Thermal Printer Quick Start Guide and Setup Instructions</a></p> <p>Comprehensive quick start guide for the HPRT HM-A200U portable thermal printer, covering setup, paper loading, menu settings, battery charging, Bluetooth connection, and FCC compliance. Includes component identification and operational instructions.</p>