

Kircuit Micro USB 5V AC/DC Adapter

Kircuit Micro USB 5V AC/DC Adapter Instruction Manual

Compatible with Bielmeier BCSW-4 and BCSD-27 Cordless Electric Screwdrivers

1. INTRODUCTION

Thank you for choosing the Kircuit Micro USB 5V AC/DC Adapter. This adapter is designed to provide reliable power for charging your compatible devices, specifically the Bielmeier BCSW-4 and BCSD-27 cordless electric screwdrivers. Please read this manual thoroughly before use to ensure proper operation and to maximize the lifespan of your adapter.

2. SAFETY PRECAUTIONS

- Do not expose the adapter to water, rain, or excessive moisture.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not disassemble or attempt to repair the adapter yourself. Refer to qualified service personnel.
- Ensure the power outlet voltage matches the adapter's input voltage (100-240V AC).
- Keep out of reach of children.
- Unplug the adapter from the power outlet when not in use for extended periods.

3. SETUP INSTRUCTIONS

3.1 Unpacking

Carefully remove the Kircuit Micro USB 5V AC/DC Adapter from its packaging. Inspect the adapter and cable for any signs of damage. If any damage is found, do not use the product and contact customer support.

3.2 Connecting the Adapter

1. Insert the Micro USB connector of the cable into the charging port of your Bielmeier BCSW-4 or BCSD-27 cordless electric screwdriver.
2. Plug the USB-A end of the cable into the USB port on the Kircuit AC/DC Adapter.
3. Insert the adapter's prongs into a standard 100-240V AC wall outlet.



Image shows the Kircuit Micro USB 5V AC/DC Adapter, a compact black unit with a USB port, accompanied by a Micro USB cable. This adapter is designed to provide power to compatible devices.

4. OPERATING INSTRUCTIONS

4.1 Charging Your Device

Once the adapter is properly connected to both the power outlet and your Bielmeier cordless electric screwdriver, the device should begin charging. Refer to your screwdriver's manual for specific charging indicators (e.g., LED lights).

- Ensure the adapter is securely plugged into a functional wall outlet.
- Verify the Micro USB cable is firmly connected to both the adapter and the screwdriver.
- Allow sufficient time for the device to fully charge. Charging times may vary based on the device's battery level and capacity.
- Disconnect the adapter from the power source and the device once charging is complete.

5. MAINTENANCE

5.1 Cleaning

To clean the adapter, unplug it from the power outlet and disconnect it from your device. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners, aerosols, or solvents, as these can damage the adapter.

5.2 Storage

Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid wrapping the cable too tightly around the adapter to prevent damage to the cable or connectors.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not charging	Adapter not plugged in; faulty outlet; loose cable connection; incompatible device.	Ensure adapter is fully plugged in. Try a different outlet. Check cable connections. Confirm device compatibility.
Slow charging	Cable damage; device drawing too much power; background apps on device.	Try a different Micro USB cable. Close unnecessary applications on the device.
Adapter is hot	Normal operation; excessive load; poor ventilation.	A slight warmth is normal. Ensure adequate ventilation around the adapter. If excessively hot, discontinue use and contact support.

7. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Kircuit
Input Voltage	100-240V AC
Output Voltage	5V DC
Current Rating	1A
Connector Type	USB (Micro USB cable required for device connection)
Compatible Devices	Bielmeier BCSW-4, BCSD-27, BCSW4, BCSD27
Color	Black
Special Feature	Built-in Dynamic IC, Charger IC & Power fuse for rapid charging and over charge protection.

8. WARRANTY INFORMATION

This Kircuit product is covered by a standard manufacturer's warranty against defects in materials and workmanship. The warranty period typically begins from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact Kircuit customer support.

9. CUSTOMER SUPPORT

If you have any questions, encounter issues, or require assistance with your Kircuit Micro USB 5V AC/DC Adapter, please contact our customer support team. Provide your product model and a detailed description of the issue for faster service.

Email: support@kircuit.com (example)

Website: www.kircuit.com (example)

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question