Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- suevery /
- suevery 24-inch Curved Gaming Monitor 180Hz FHD User Manual

suevery SV240QC

suevery 24-inch Curved Gaming Monitor 180Hz FHD User Manual

Model: SV240QC

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of your suevery 24-inch Curved Gaming Monitor (Model: SV240QC). Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your viewing experience. Keep this manual for future reference.

PRODUCT FEATURES

- Immersive Curved Display: The 24-inch 3000R curved screen is designed to match the natural curvature of the human eye, providing an immersive visual experience. This is complemented by a Full HD (1920x1080) resolution, drawing users into the content.
- **Ultra-Smooth Motion:** An ultra-high 180Hz refresh rate combined with an ultra-fast 1ms (GTG) gray-to-gray response time, enhanced by FreeSync technology, effectively eliminates screen tearing, stuttering, and ghosting. This ensures seamless transitions in fast-paced games.
- Accurate Color Reproduction: With 100% sRGB color space coverage and precise reproduction of 16.7
 million colors, the VA panel delivers excellent contrast and color layering. This results in vivid and realistic
 visuals for both gaming and multimedia.
- Flexible Connectivity and Installation: Equipped with DisplayPort (DP) and High-Definition Multimedia Interface (HDMI) ports, the monitor can easily connect to PCs, gaming consoles, laptops, and other devices. It supports VESA wall mounting, allowing for flexible placement in various environments.



Image: The suevery 24-inch Curved Gaming Monitor, showcasing its sleek design and curved screen.



Image: A visual representation highlighting the 180Hz refresh rate, illustrating smooth motion in a racing game scene.



Image: An illustration demonstrating the monitor's wide color gamut (100% sRGB), 3000:1 contrast ratio, and 16.7 million colors for vibrant visuals.

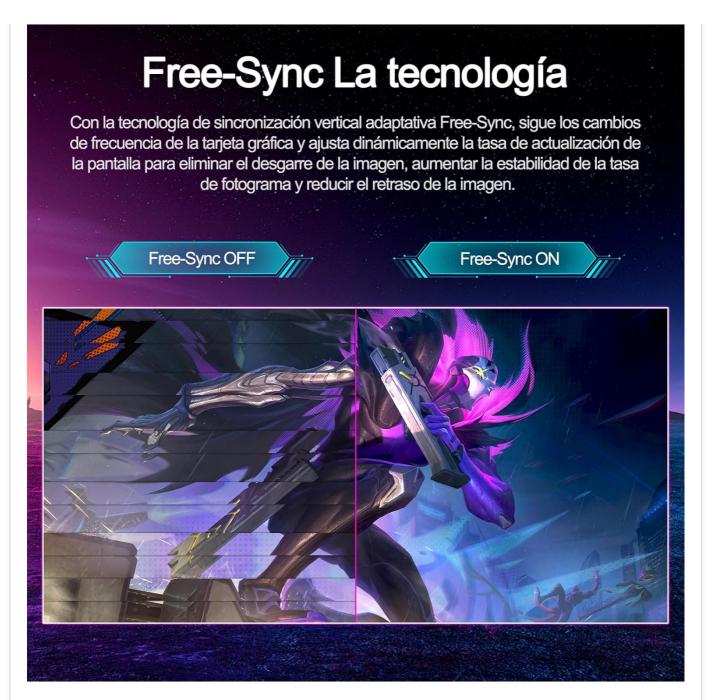


Image: A split-screen comparison showing the visual difference with FreeSync OFF (screen tearing) and FreeSync ON (smooth image) during gameplay.

SETUP INSTRUCTIONS

1. Unpacking and Assembly

- 1. Carefully remove all components from the packaging.
- 2. Place the monitor panel face down on a soft, clean surface to prevent scratches.
- 3. Attach the stand base to the stand neck, securing it with the provided screws.
- 4. Attach the assembled stand to the back of the monitor panel. Ensure it clicks securely into place or is fastened with screws as per the design.
- 5. Alternatively, for VESA mounting, remove the stand and attach a VESA-compatible mount (75x75mm) to the monitor's rear panel.

2. Connecting Cables

Refer to the diagram below for port locations.

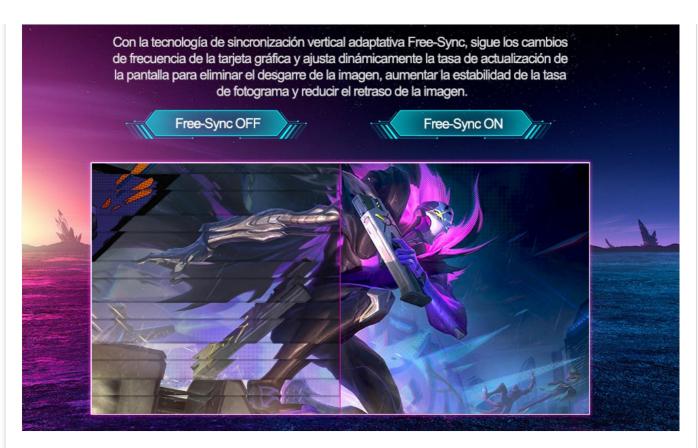


Image: A diagram illustrating the monitor's rear panel, showing the HDMI, DisplayPort (DP), USB (if applicable), and power input ports, along with VESA mount dimensions (75x75mm).

- **Power Connection:** Connect the power adapter to the monitor's power input port, then plug the power cable into a wall outlet.
- Video Connection: Connect one end of an HDMI or DisplayPort cable to the corresponding port on your monitor and the other end to your computer's graphics card or other video source. For optimal performance, especially at 180Hz, a DisplayPort connection is recommended.
- Audio (if applicable): If your monitor has a 3.5mm audio output, you can connect external speakers or headphones.

3. Initial Power On

- 1. Press the power button on the monitor. The power indicator light should illuminate.
- 2. Turn on your connected computer or video source.
- 3. The monitor should automatically detect the input signal. If not, you may need to manually select the input source using the On-Screen Display (OSD) menu.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the power button, usually located on the back or bottom of the monitor, to turn the monitor on or off.

2. On-Screen Display (OSD) Menu

The OSD menu allows you to adjust various monitor settings. Access the OSD menu using the joystick or buttons typically found on the back or bottom of the monitor.

- Navigation: Use the joystick or directional buttons to navigate through the menu options.
- Selection: Press the joystick or a dedicated button to select an option or confirm a setting.

• Exit: Use the designated 'Exit' button or move the joystick in a specific direction to close the OSD menu.

3. Adjusting Settings

Key settings you can adjust include:

- Brightness/Contrast: Adjust these to suit your viewing environment.
- Color Settings: Modify color temperature, gamma, and individual RGB values.
- Input Source: Manually select between HDMI and DisplayPort inputs.
- Refresh Rate: Ensure your operating system and graphics card settings are configured to utilize the monitor's 180Hz refresh rate.
- FreeSync: Enable FreeSync in the OSD menu and in your graphics card control panel for tear-free gaming.
- Picture Mode: Select from preset modes (e.g., Standard, Game, Movie) or customize your own.

MAINTENANCE

1. Cleaning the Screen

- Turn off the monitor and unplug the power cord.
- Gently wipe the screen with a soft, lint-free cloth.
- For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner (do not spray directly onto the screen).
- Avoid using harsh chemicals, abrasive cleaners, or alcohol-based solutions.

2. General Care

- Keep the monitor away from direct sunlight, excessive heat, and humidity.
- Ensure adequate ventilation around the monitor.
- Avoid placing heavy objects on the monitor or its cables.

TROUBLESHOOTING

If you encounter issues with your monitor, please refer to the following common problems and solutions:

Problem	Possible Solution
No image on screen	Ensure the power cable is securely connected and the monitor is turned on. Verify the video cable (HDMI/DP) is properly connected to both the monitor and the computer. Check if the correct input source is selected in the OSD menu.
Image flickering or unstable	Check the video cable connection. Ensure your graphics card drivers are up to date. Verify the refresh rate setting in your operating system is set correctly (e.g., 180Hz). Enable FreeSync if supported by your graphics card.
Colors appear incorrect	Adjust color settings (brightness, contrast, color temperature) in the OSD menu. Reset the monitor to factory default settings.
Monitor does not turn on	Check the power cable and adapter connections. Try plugging the monitor into a different power outlet.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	suevery
Model Number	SV240QC
Screen Size	24 Inches
Display Resolution	1920 x 1080 (Full HD)
Refresh Rate	180Hz
Response Time	1ms (GTG)
Curvature	3000R
Color Gamut	100% sRGB
Panel Type	VA
Aspect Ratio	16:9
Connectivity	1x HDMI, 1x DisplayPort (DP)
VESA Mount Compatibility	75x75mm
Product Dimensions	59 x 39 x 11 cm (with stand)
Weight	3.5 kg

WARRANTY AND SUPPORT

Warranty Information

suevery provides a **12-month warranty** for this monitor, covering manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

If you encounter any damage, failure, or missing parts, or require technical assistance, please do not hesitate to contact suevery customer service. Our support team is available to assist you with any product-related inquiries. For support, please refer to the contact information provided on the suevery official website or your purchase platform.