

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tibuta](#) /

› **Tibuta 10.1 inch Wi-Fi Digital Photo Frame with IPS Touch Screen (Model D10) User Manual**

Tibuta D10

Tibuta 10.1 inch Wi-Fi Digital Photo Frame (Model D10) User Manual

Model: D10

INTRODUCTION

Thank you for choosing the Tibuta 10.1 inch Wi-Fi Digital Photo Frame. This device allows you to easily share and display your cherished photos and videos with family and friends from anywhere in the world. Featuring an IPS touch screen and Wi-Fi connectivity, this frame is designed for intuitive use and vibrant display of your memories. Please read this manual carefully to ensure proper setup and operation.

WHAT'S IN THE BOX

- Tibuta 10.1 inch Wi-Fi Digital Photo Frame
- Power Adapter
- USB Cable
- Quick Start Guide



The product package includes the Tibuta Digital Photo Frame, a power adapter, a USB cable, and a quick start guide to assist with initial setup.

SETUP INSTRUCTIONS

1. **Power On:** Connect the power adapter to the frame and plug it into an electrical outlet. The frame will automatically power on.
2. **Initial Setup:** Follow the on-screen prompts to select your language, time zone, and other basic settings.
3. **Connect to Wi-Fi:** Select your Wi-Fi network from the list and enter the password. Ensure a stable internet connection for optimal performance.

4. **Download the Uhale App:** Download the free "Uhale" app from the Google Play Store (for Android devices) or the Apple App Store (for iOS devices).
5. **Pair with App:** Open the Uhale app on your smartphone or tablet. The app will guide you through the process of pairing your device with the digital photo frame using a unique code displayed on the frame. This code is typically valid for 12 hours.

How to Use Uhale

Easy to set up and use

1 Download Free Uhale APP

Download the frameo app on:
Google play by searching for "Uhale"
App Store by searching for "Uhale"

2 Uhale Setup

When starting your frame for the first time, you will need to setup the frame.
Connect your frame to the internet by connecting it to a Wi-Fi.
Enter your name, and the location where you have placed your frame.

3 Using Uhale

Share the unique code to your friends to add them to your frame.
The code would be valid for 12 hours to keep your frame
safe and get rid of strangers' requests.



This image illustrates the steps for setting up the Uhale app, including downloading, connecting to Wi-Fi, and sharing a unique code for adding friends to your frame.

OPERATING INSTRUCTIONS

Photo and Video Sharing via Uhale App

Once your frame is paired with the Uhale app, you can start sending photos and videos.

1. Open the Uhale app on your smartphone or tablet.
2. Select the photos or videos you wish to share. You can typically select up to 50 pictures at a time.
3. Choose the recipient frame(s) from your connected devices.
4. Optionally, edit the pictures by adjusting focus areas or adding names/captions.
5. Tap 'Send' to transfer the media to your digital photo frame. The media will appear on the frame shortly after being sent.



SHARE YOUR PRECIOUS MOMENTS VIA FRAMEO APP



- 1 . Download frame app
- 2 . Add devices by code
- 3 . Share photos or videos



Share your precious moments effortlessly using the Uhale app. Download the app, connect your device, and share photos or videos directly to the frame from your smartphone.

Photo share: select pictures (up to 50 pictures) - select photo frames - edit pictures (adjust focus areas and name photos) - send.



This image details the four-step process for sharing photos via the Uhale app: selecting pictures, choosing frames, editing, and sending.

Built-in 16GB Memory

Keeps Over 40000+ Photos



An expandable SD card (up to 128GB) and
USB2.0 hole can import or export photos

The Tibuta digital photo frame allows you to send photos from any location to multiple users, enabling seamless sharing of memories regardless of distance.

Display Settings

- **Brightness Adjustment:** Navigate to the settings menu on the frame to adjust the screen brightness to your preference.
- **Sleep Mode:** Configure the sleep function to automatically turn off the screen during specific hours (e.g., overnight) to conserve energy.
- **Auto-Rotate Function:** The frame automatically adjusts the display orientation (portrait or landscape) based on how it is positioned.

Memories Never Fade Away !



The frame offers adjustable brightness settings for optimal viewing and includes a sleep function to automatically turn off the screen during specified hours, conserving energy.

Auto- Rotate Function

Support Portrait & Landscape Mode



Portrait Mode



Landscape Mode



360°Rotation




Wall-mountable



The frame supports automatic rotation, allowing it to display photos correctly whether placed in portrait or landscape orientation. It is also designed to be wall-mountable.

Memory Management

The Tibuta D10 frame comes with 16GB of built-in memory, capable of storing a large number of photos and videos. For additional storage, you can expand the memory up to 128GB using an SD card. The frame also features a USB 2.0 port for importing or exporting media.

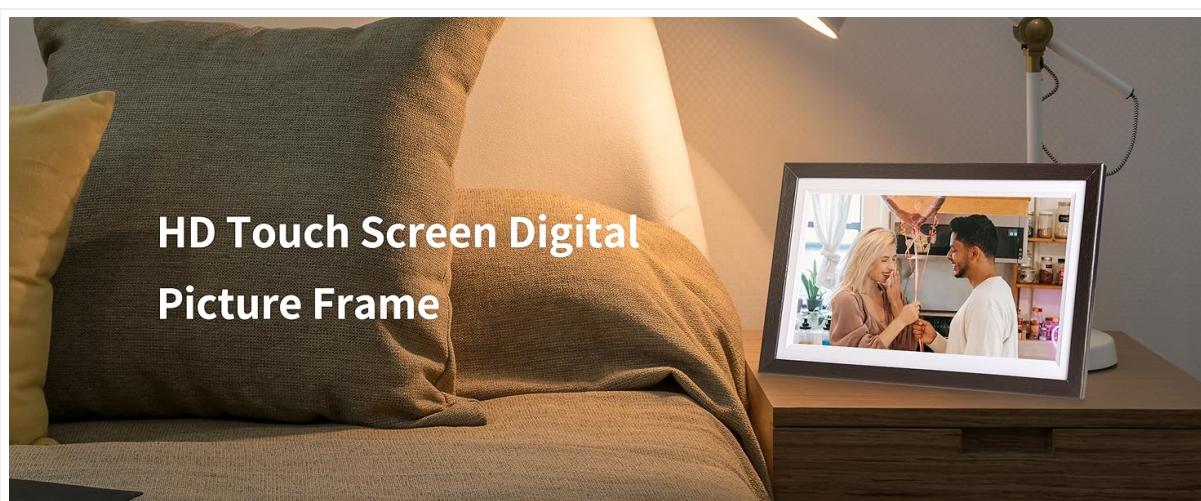

The frame comes with 16GB of built-in memory, capable of storing over 40,000 photos. Storage can be expanded up to 128GB via an SD card, and photos can be imported/exported using a USB 2.0 port.

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the screen and frame. Avoid using abrasive cleaners or solvents.
- Placement:** Place the frame on a stable surface or mount it securely on a wall. Avoid direct sunlight or extreme temperatures.
- Software Updates:** Periodically check for software updates through the frame's settings menu to ensure optimal performance and access to new features.

TROUBLESHOOTING

- Frame not powering on:** Ensure the power adapter is securely connected to both the frame and a working electrical outlet.
- Cannot connect to Wi-Fi:** Verify your Wi-Fi password and ensure the frame is within range of your router. Try restarting your router and the frame.
- Photos not appearing on frame:** Check if the frame is connected to Wi-Fi and if the Uhale app shows the photos as successfully sent. Ensure the frame is paired correctly with the app.
- Screen unresponsive:** Try restarting the frame by unplugging and re-plugging the power adapter. If the issue persists, perform a factory reset (refer to the Quick Start Guide for instructions).

SPECIFICATIONS

Brand	Tibuta
Model	D10
Screen Size	10.1 inches
Resolution	1280 x 800
Display Type	IPS Touch Screen
Internal Storage	16 GB
Expandable Storage	SD card (up to 128GB)
Connectivity	Wi-Fi
Compatible Devices	Android or iOS smartphones/tablets
Color	Walnut
Dimensions (L x W x H)	29 x 21 x 2.5 cm
Weight	80 grams
Power Source	AC Adapter
Frame Material	Wood

WARRANTY AND SUPPORT

The Tibuta 10.1 inch Wi-Fi Digital Photo Frame comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product meets its specified performance standards.

For technical support, troubleshooting assistance, or warranty claims, please contact Tibuta customer service through the retailer's platform or the contact information provided in your Quick Start Guide. Please have your model number (D10) and purchase details ready when contacting support.