

[manuals.plus](#) /

› [SKMEI](#) /

› [SKMEI Model 9235 Multifunctional Quartz Analog Watch User Manual](#)

SKMEI 9235

SKMEI Model 9235 Multifunctional Quartz Analog Watch User Manual

Your guide to setup, operation, and care.

1. INTRODUCTION

Thank you for choosing the SKMEI Model 9235 Multifunctional Quartz Analog Watch. This timepiece combines durable stainless steel construction with precise quartz movement, offering features such as a stopwatch, date display, and moon phase indicator. This manual provides essential instructions for setting up, operating, and maintaining your watch to ensure its longevity and optimal performance.



Figure 1: The SKMEI Model 9235 Multifunctional Quartz Analog Watch.

2. KEY FEATURES

- **Precise Quartz Movement:** Ensures accurate timekeeping.
- **Multifunction Dial:** Includes stopwatch, date display, and moon phase indicator.
- **Durable Construction:** Stainless steel case and band for enhanced longevity.
- **Water Resistance:** 30 meters (3 ATM) suitable for daily use and light water exposure.
- **Luminous Elements:** Hands and markers for visibility in low light.

Key Features

Display
Analog

Dial Shape
Round

Features
Time & Date & Stopwatch

Strap Material
Stainless Steel

Water Resistance
30 m



Figure 2: Visual representation of the watch's key features.

3. SETUP AND INITIAL ADJUSTMENT

3.1 Setting the Time

1. Pull the crown (B) out to position 2.
2. Rotate the crown to set the hour and minute hands to the correct time. Ensure AM/PM is correctly set if your watch has a 24-hour indicator.
3. Push the crown back to position 0 to start timekeeping.

3.2 Setting the Date

1. Pull the crown (B) out to position 1.
2. Rotate the crown clockwise or counter-clockwise (depending on the model) to set the correct date.
3. Push the crown back to position 0.

3.3 Adjusting the Moon Phase Indicator

The moon phase indicator typically advances automatically with the date. If manual adjustment is needed,

consult a professional watchmaker or refer to specific instructions for your movement type. Generally, it is set by rotating the crown in position 1 until the desired moon phase is displayed.



Figure 3: Detail of the watch crown and pushers for adjustments.

3.4 Adjusting the Stainless Steel Band

The stainless steel band features an adjustable clasp for a comfortable and secure fit. If the band requires resizing (removing or adding links), it is recommended to have this done by a qualified jeweler to prevent damage to the watch or band.



The stainless steel bracelet comes with an adjustable clasp for a comfortable and secure fit on any wrist size

Figure 4: The adjustable stainless steel bracelet.

4. OPERATING INSTRUCTIONS

4.1 Timekeeping

Once set, your watch will accurately display the current time using its quartz movement. The large Roman numeral indexes and luminous hands ensure easy readability.

4.2 Using the Stopwatch (Chronograph)

The watch features a chronograph function for measuring elapsed time. The specific operation may vary slightly, but typically involves:

1. Pressing the upper pusher (A) to start the stopwatch.
2. Pressing the upper pusher (A) again to stop the stopwatch.
3. Pressing the lower pusher (C) to reset the stopwatch hands to zero.

4.3 Date Display

The date window displays the current day of the month. It automatically advances every 24 hours. For months with fewer than 31 days, you may need to manually adjust the date at the beginning of the next month (refer to Section 3.2).

4.4 Moon Phase Indicator

The moon phase sub-dial visually represents the current phase of the moon. This indicator cycles automatically with the date, providing a unique celestial touch to your timepiece.

5. WATER RESISTANCE GUIDELINES

Your SKMEI Model 9235 watch is water-resistant up to 30 meters (3 ATM). This rating means the watch is suitable for daily use, including splashes, rain, and washing hands. It is **not** suitable for showering, bathing, swimming, diving, or any water sports. Avoid operating the crown or pushers when the watch is wet or submerged to prevent water ingress.



Figure 5: The watch's water resistance for everyday use.

6. MAINTENANCE AND CARE


- Cleaning:** Wipe the watch case and band regularly with a soft, dry cloth to remove dust and dirt. For the stainless steel band, a slightly damp cloth can be used, followed by immediate drying.
- Avoid Chemicals:** Do not expose your watch to solvents, detergents, perfumes, or cosmetic sprays, as these can damage the case, band, or seals.
- Temperature Extremes:** Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes, which can affect the movement and water resistance.
- Magnetic Fields:** Keep the watch away from strong magnetic fields (e.g., speakers, refrigerators, mobile phones) to prevent interference with the quartz movement.
- Battery Replacement:** When the watch stops or the second hand skips, the battery needs replacement. This should be done by a professional watch repair service to ensure proper sealing and function.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch stops or runs intermittently	Low battery; impact damage; magnetic interference	Replace battery; consult a watch repair service; move away from magnetic sources.
Date does not change at midnight	Time set incorrectly (AM/PM); date mechanism issue	Re-set time, ensuring 12 AM is correctly identified; if issue persists, seek professional help.
Condensation inside the watch	Temperature change; water ingress due to damaged seal or improper crown operation	Immediately take to a professional watch repair service to prevent internal damage.

8. SPECIFICATIONS

Feature	Detail
Model Number	9235
Movement Type	Quartz
Case Material	Stainless Steel
Band Material	Stainless Steel
Case Diameter	4.9 Centimeters
Case Thickness	1.5 Centimeters
Strap/Lug Width	2.2 Centimeters
Item Weight	162 Grams
Water Resistance	30 Meters (3 ATM)
Functions	Time, Date, Stopwatch, Moon Phase

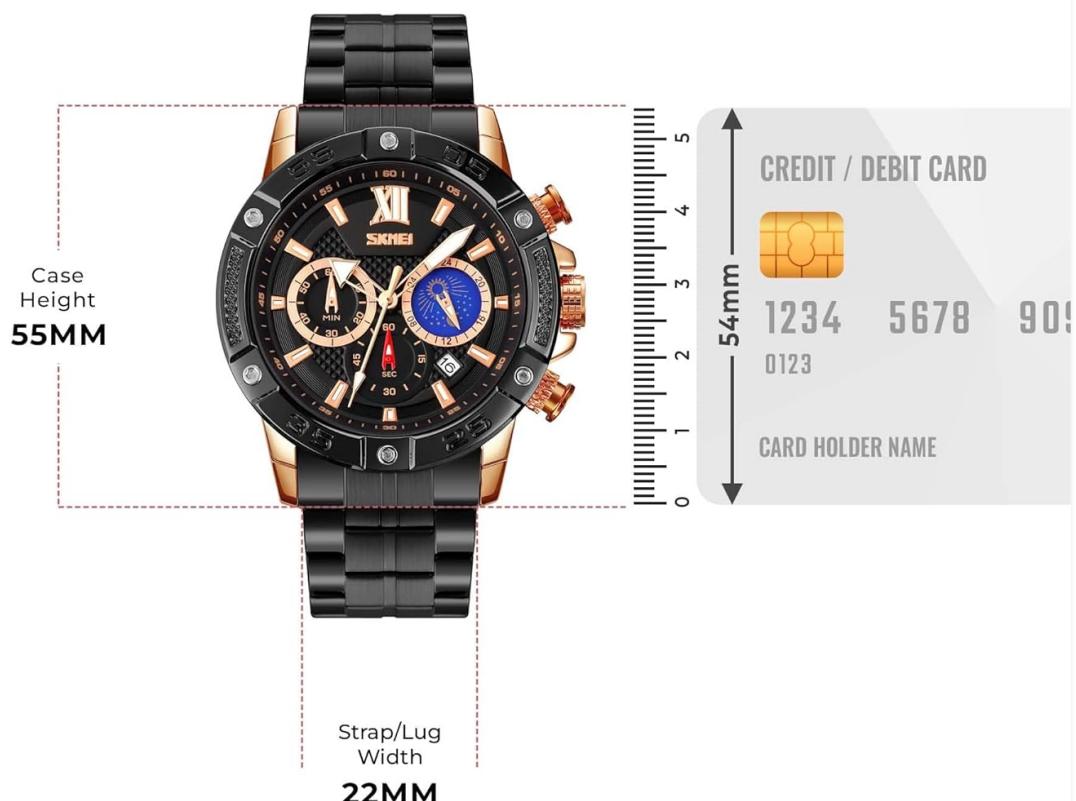

Case Width
49MM



Strap Material
Stainless Steel



Case Thickness
15MM

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This SKMEI watch comes with a **Limited Warranty**. The terms and conditions of this warranty cover manufacturing defects under normal use. Please retain your proof of purchase for any warranty claims. The warranty typically does not cover damage resulting from improper use, accidents, unauthorized repairs, or normal wear and tear.

9.2 Customer Support

For any questions, service, or warranty claims, please contact your retailer or the official SKMEI customer support channel. Refer to the packaging or the official SKMEI website for contact details.