

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### Manuals.plus /

- › [QikCln](#) /
- › QikCln QC-VC06 Cordless Vacuum Cleaner User Manual

## QikCln QC-VC06

# QikCln QC-VC06 Cordless Vacuum Cleaner User Manual

Model: QC-VC06 | Brand: QikCln

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your QikCln QC-VC06 Cordless Vacuum Cleaner. Please read it thoroughly before first use and retain it for future reference.

The QikCln QC-VC06 is a versatile and powerful cordless vacuum cleaner designed for various household cleaning tasks. It features 23Kpa suction power, three operating modes (MIN, MID, MAX), and a runtime of up to 45 minutes, powered by removable 7\*2200mAh lithium-ion batteries. Its advanced 5-stage HEPA filtration system captures particles as small as 0.1 microns, ensuring cleaner air. The lightweight design, flexible LED floor brush, and multi-functional attachments make it suitable for cleaning different surfaces and hard-to-reach areas.

## 2. PACKAGE CONTENTS

---

Verify that all components are present in the package:

- Main Motor (Handheld Unit)
- LED Roller Brush (Floor Head)
- Extension Wand (Telescopic Pole)
- Battery Pack (7\*2200mAh Lithium-Ion)
- Adapter (Charger)
- Charging Dock with Screws (Wall Hanger)
- Crevice Tool
- Dusting Brush (2-in-1 Tool)
- Cleaning Brush (for filter/brush roll)
- Inlet HEPA Filter (pre-installed)
- Outlet HEPA Filter (extra)
- User Manual

# Designed for Pet Hair & Dander



Figure 1: All included components of the QikCln QC-VC06 Cordless Vacuum Cleaner, neatly arranged.

### 3. SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Extension Wand:** Insert the top end of the extension wand into the main motor unit until it clicks securely into place.
2. **Attach the Floor Head:** Connect the LED roller brush (floor head) to the bottom end of the extension wand until it clicks securely.
3. **Install the Battery:** Slide the battery pack into the designated slot on the main motor unit until it locks.

Ensure it is fully seated.

4. **Initial Charge:** Before first use, fully charge the battery. Connect the adapter to the battery pack and plug it into a power outlet. The LED display will indicate charging status.



Figure 2: The QikCln QC-VC06 Cordless Vacuum Cleaner fully assembled, ready for use.

## 4. OPERATING INSTRUCTIONS

### 4.1 Powering On and Suction Modes

To turn on the vacuum, press the power button on the handle. The LED display will illuminate, showing the remaining battery level and current suction mode. Press the 'Mode' button to cycle through the three suction modes: MIN, MID, and MAX. The display will indicate the selected mode.

- **MIN Mode:** Up to 45 minutes runtime, suitable for light cleaning on hard floors.
- **MID Mode:** Up to 30 minutes runtime, for general cleaning on various surfaces.
- **MAX Mode:** Up to 15 minutes runtime, for deep cleaning and stubborn debris.

# Anti-Tangle Tech, Easier Hair-Cleaning



Figure 3: The vacuum's LED display provides real-time information on battery status and selected suction mode.

## 4.2 Adjustable Length and Handheld Use

The extension wand's length can be adjusted by pressing the release button and sliding the pole to your desired height. For handheld use, detach the extension wand and attach desired accessories directly to the main motor unit. This allows for easy cleaning of furniture, car interiors, and other elevated or confined spaces.

# Effortless Versatility for Every Nook and Cranny



Figure 4: The vacuum's versatile design allows for easy conversion to a handheld unit and use with various attachments for comprehensive cleaning.

## 4.3 Using Attachments

- **LED Roller Brush:** Ideal for all floor types, including hardwood and carpets. The integrated LED lights illuminate dust and debris.
- **Crevice Tool:** Perfect for narrow gaps, corners, and edges.
- **Dusting Brush (2-in-1 Tool):** Use the brush for delicate surfaces like curtains or keyboards, and the nozzle for upholstery or car seats.
- **Pet Tool:** Specifically designed for efficient removal of pet hair and dander from various surfaces.



Figure 5: Powerful suction effectively removes various types of debris from carpets, including pet hair and larger particles.

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 5.1 Emptying the Dust Cup

To empty the dust cup, press the release button located on the main motor unit. Hold the dust cup over a trash bin and press the bottom release latch to open the flap and empty the contents. Close the flap securely after emptying.

## 5.2 Cleaning the Filters

The QikCln QC-VC06 features a 5-stage high-efficiency filtration system with dual-layer 10-level HEPA filters. It is recommended to clean the filters every 2-4 weeks, depending on usage.

1. Twist and pull to remove the filter assembly from the dust cup.
2. Separate the HEPA filter from the mesh filter.
3. Tap off loose dust and debris. For a deeper clean, rinse the filters under cold running water until the water runs clear.
4. Allow all filter components to air dry completely for at least 24 hours before reassembling and placing them back into the vacuum. Do not use the vacuum with wet filters.

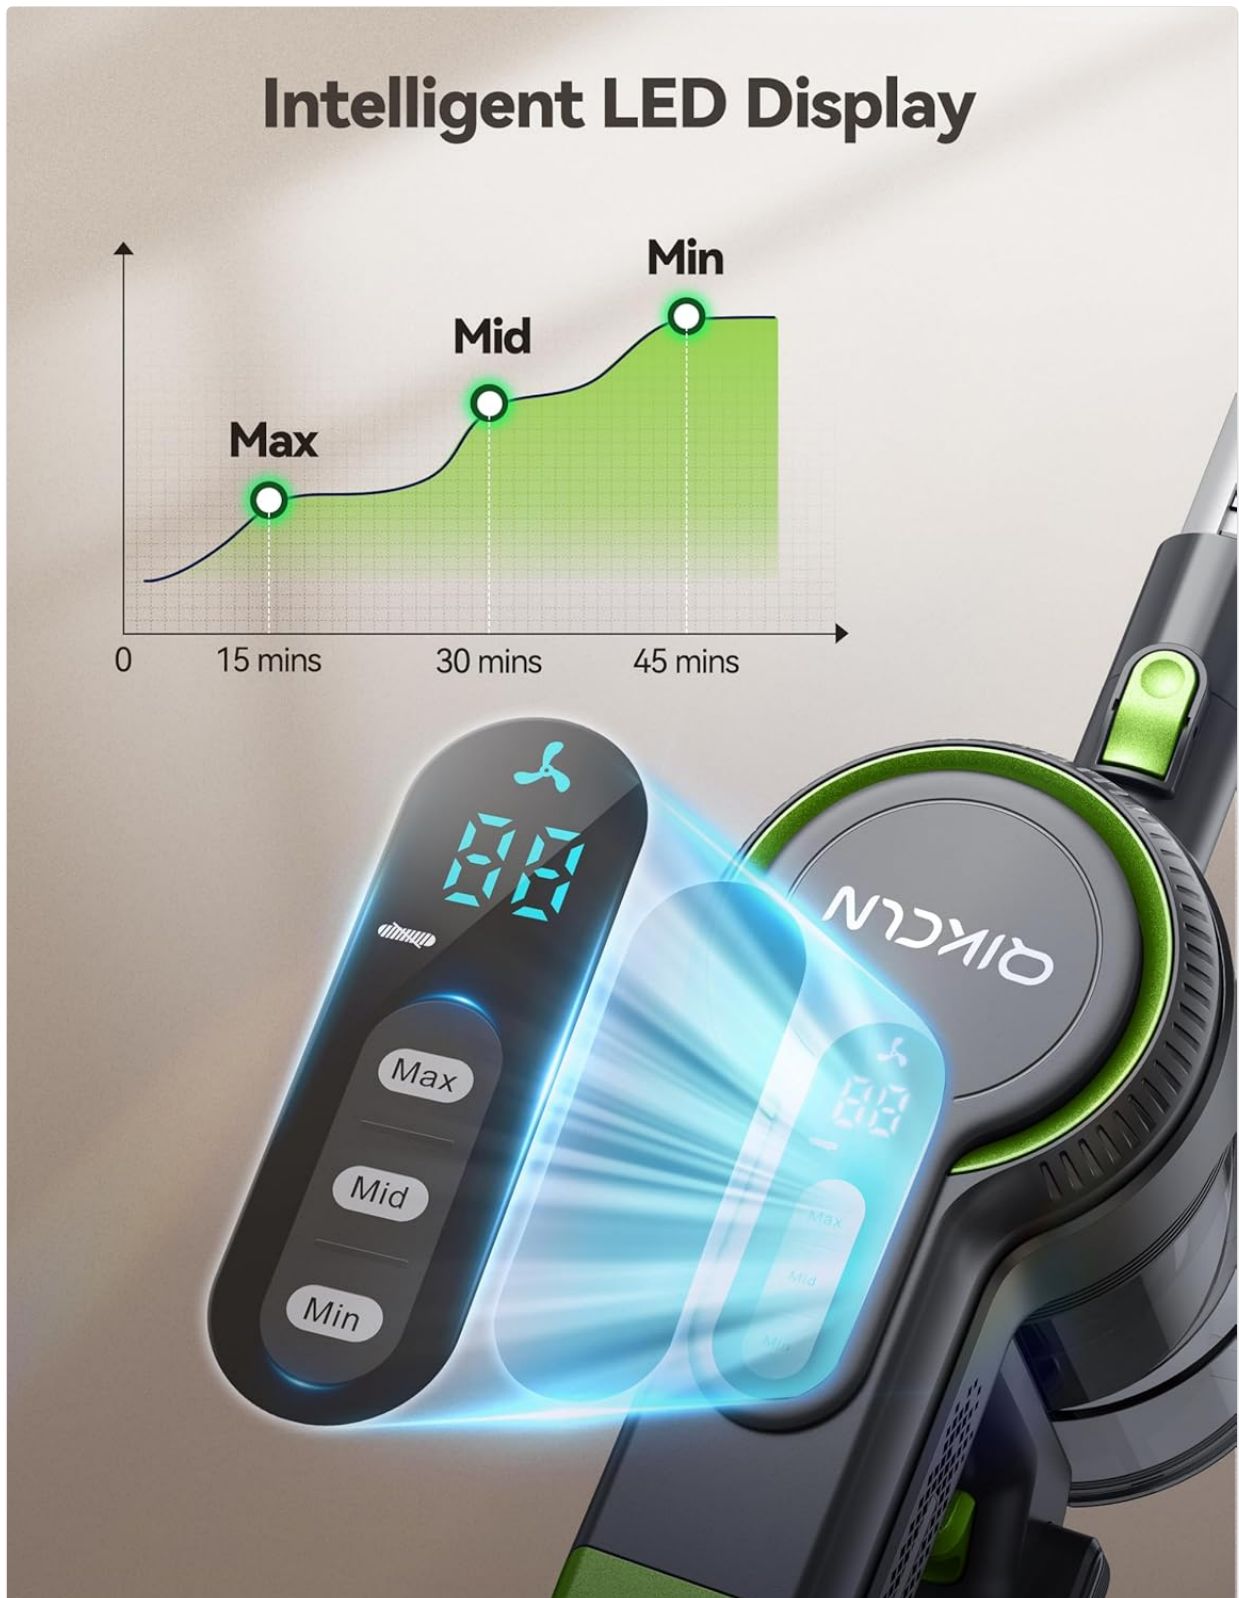


Figure 6: The 5-layer filtration system, including HEPA filters, ensures efficient capture of fine particles.

### 5.3 Cleaning the Brush Roll

The LED roller brush features anti-tangle technology. Periodically check the brush roll for tangled hair or debris. Use the provided cleaning brush or scissors to carefully cut and remove any tangled material. Ensure the brush roll spins freely after cleaning.



Figure 7: The included cleaning brush assists in maintaining the brush roll and filters.

## 6. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not charged or improperly installed	Ensure battery is fully charged and correctly inserted.
Low suction power	Dust cup full, filters clogged, or brush roll obstructed	Empty dust cup, clean filters, remove obstructions from brush roll.
Brush roll not spinning	Obstruction in brush roll or brush roll motor issue	Remove any tangled hair or debris. If issue persists, contact support.
Short runtime	Battery not fully charged or battery degradation	Ensure battery is fully charged. If battery life significantly decreases, consider battery replacement.
LED display shows error	Brush tangle alarm or other internal issue	Check brush roll for tangles. Refer to specific error codes in the full user manual if available, or contact support.

## 7. SPECIFICATIONS

Feature	Detail
Brand	QikCln
Model Name	QC-VC06
Suction Power	Up to 23Kpa
Operating Modes	3 (MIN, MID, MAX)
Battery Type	7*2200mAh Lithium-Ion (Removable)
Max Runtime	45 minutes (MIN mode)
Charging Time	4 Hours
Dust Cup Capacity	0.75 Liters
Filtration System	5-Stage HEPA Filtration (99.99% efficiency)
Special Features	LED Headlight, Telescopic Pole, XL-Dust Cup, One-Click Dust Removal, Anti-Tangle Brush
Weight	3.3 pounds (main unit) / 8.05 pounds (package)
Product Dimensions	10"L x 9"W x 44"H
Noise Level	75 Decibels
Recommended Use	Dry Use Only, Indoor

## 8. SAFETY INFORMATION

---

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia, drain cleaner).
- Do not use in an enclosed space where vapors are given off from oil base paints, paint thinner, mothproofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without dust cup and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.

## 9. WARRANTY AND SUPPORT

---

For warranty information, technical support, or to order replacement parts, please refer to the contact information provided in your product packaging or visit the official QikCIn website. Please have your model number (QC-VC06) and purchase date available when contacting support.