

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DEWENWILS](#) /

› [DEWENWILS 24 Hour Programmable Digital Timer Outlet \(Model B0D2RM248G\) Instruction Manual](#)

DEWENWILS B0D2RM248G

DEWENWILS 24 Hour Programmable Digital Timer Outlet

Model: B0D2RM248G

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your DEWENWILS 24 Hour Programmable Digital Timer Outlet. This device is designed to automate the on/off cycles of your indoor electrical appliances, enhancing convenience and energy efficiency. Please read this manual thoroughly before use and retain it for future reference.



Image: Front view of the DEWENWILS Digital Timer Outlet.

SAFETY INFORMATION

- For indoor use only. Do not expose to rain or moisture.
- Do not exceed the maximum load rating of 125V/15A/1000W.
- Ensure the timer is fully inserted into a grounded outlet.
- Do not use with devices that require continuous supervision, such as power tools or heating appliances without

safety cut-offs.

- Keep out of reach of children.
- Do not disassemble or attempt to repair the device. Contact customer support if service is required.

PRODUCT FEATURES

- **3 Group Daily Repeat Program:** Set up to three daily on/off schedules.
- **Minimalist & Functional Design:** Slim profile ensures other outlets remain accessible.
- **Backup Battery:** Retains programmed settings for up to 3 months during power interruptions.
- **Quiet Performance:** Operates silently, suitable for bedrooms and quiet environments.
- **Energy Efficient:** Automates device operation to save time and energy.
- **Wide Application:** Ideal for lamps, fans, aquariums, plant lights, and holiday decorations.

PACKAGE CONTENTS

- 2 x DEWENWILS 24 Hour Programmable Digital Timer Outlets
- 1 x User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your DEWENWILS Digital Timer Outlet.



Image: The large LCD screen display for easy reading of time and settings.

AUTO/MANUAL CONTROL

Side switch to manually adjust the mode



Image: Side switch for manual control (OFF, AUTO, ON).

SPACE SAVING

Slim design that won't block other outlets



Image: Space-saving design allows access to the second wall outlet.

SETUP

Follow these steps to set up your DEWENWILS Digital Timer Outlet:

- 1. Initial Reset:** Before first use or after a long period of inactivity, use a small pin or paperclip to press the 'R' (Reset) button located on the front of the timer. This clears all previous settings.
- 2. Set Current Time:**

- Press and hold the 'Time' button.
- While holding 'Time', press 'Hour' to adjust the hour.
- While holding 'Time', press 'Min' to adjust the minute.
- Release 'Time' when the correct time is set.

3. Set a Program: The timer allows for up to 3 ON/OFF programs daily.

- Press the 'Prog' button once to enter Program 1 ON setting. The display will show '1 ON'.
- Use 'Hour' and 'Min' buttons to set the desired ON time for Program 1.
- Press 'Prog' again to enter Program 1 OFF setting. The display will show '1 OFF'.
- Use 'Hour' and 'Min' buttons to set the desired OFF time for Program 1.
- Repeat for Program 2 and Program 3 if needed.
- After setting all desired programs, press the 'Time' button to exit programming mode.



Image: Visual guide for resetting, setting the current time, and programming schedules.

OPERATING INSTRUCTIONS

Once programmed, select the desired operating mode using the side switch:

- **AUTO Mode:** Slide the side switch to 'AUTO'. In this mode, the timer will automatically turn the connected device ON and OFF according to your programmed schedules. The display will show 'ON AUTO' or 'OFF AUTO'.
- **ON Mode:** Slide the side switch to 'ON'. The connected device will remain continuously ON, overriding any programmed schedules. The display will show 'ON'.
- **OFF Mode:** Slide the side switch to 'OFF'. The connected device will remain continuously OFF, overriding any programmed schedules. The display will show 'OFF'.

DAILY REPEAT

3 ON/OFF Program per Day



Image: Example of three daily repeat programs set on the timer.

Video Guide: Setup and Operation

Your browser does not support the video tag.

Video: An overview of the DEWENWILS 24 Hour Programmable Digital Timer Outlet, including unboxing, setting the time, programming schedules, and using the manual switch.

MAINTENANCE

- Clean the timer with a dry, soft cloth. Do not use liquid cleaners or sprays.
- Store in a cool, dry place when not in use.
- Periodically check the timer and connected devices for any signs of damage or wear.

TROUBLESHOOTING

- **Device not turning ON/OFF as programmed:**
 - Ensure the side switch is set to 'AUTO'.
 - Verify that the current time is set correctly.
 - Check that the ON and OFF times for your programs are correctly entered and do not overlap unintentionally.
 - Confirm the connected device is functioning properly when plugged directly into a wall outlet.
- **Display is blank or dim:**
 - Ensure the timer is securely plugged into a live electrical outlet.
 - The backup battery may be low. Plug the timer into an outlet for several hours to charge the internal battery.
- **Settings lost after power outage:**
 - The internal backup battery may be depleted. The battery retains settings for up to 3 months. If the outage exceeds this, settings may need to be re-entered.

SPECIFICATIONS

- **Voltage:** 125V AC
- **Frequency:** 60Hz
- **Max Load:** 15A / 1000W
- **Material:** Plastic
- **Product Dimensions:** 4.21"D x 1.85"W x 3.62"H
- **Item Weight:** 7.4 ounces
- **Number of Settings:** 3 daily ON/OFF programs
- **Color:** Black

WARRANTY AND SUPPORT

DEWENWILS products are designed for reliability and performance. For warranty information, technical support, or assistance with your product, please refer to the contact details provided on the product packaging or visit the official DEWENWILS website. Please have your model number (B0D2RM248G) ready when contacting support.