

Aroepurt CPT3

Instruction Manual

Case Compatible for Oukitel C37 Phone Case Cover [with Tempered Glass Screen Protector] PU
Leather Kickstand Magnetic Wallet Case CPT3

Model: CPT3 | Brand: Aroepurt

PRODUCT OVERVIEW

This product is a protective case designed for the Oukitel C37 phone, offering comprehensive protection and enhanced functionality. It includes a tempered glass screen protector for additional display safeguarding. The case features a durable PU leather construction, a convenient kickstand, magnetic closure, and integrated card slots.

- **Can stand and use, convenient for watching movies:**The integrated kickstand allows for hands-free viewing.
- **Beautiful design that won't fade:**Features an aesthetic design that maintains its appearance over time.
- **High quality PU leather, very light, it have card slots, can be put into cards and money:**Constructed from lightweight, high-quality PU leather with practical card and money storage.
- **Flip PU Leather + Silicone ring, Better protection:**Combines flip PU leather with a silicone ring for enhanced device protection.
- **Fine Stitch Edge Sealing:**Edges are precisely stitched for durability and a refined finish.

WHAT'S IN THE BOX

- 1 x Phone Case
- 1 x Tempered Glass Screen Protector

SETUP INSTRUCTIONS

1. Installing the Phone Case

Gently align your Oukitel C37 phone with the case. Ensure all buttons and ports are correctly aligned with the case cutouts. Press the phone firmly into the case until it is securely seated. The flexible silicone ring provides a snug fit.

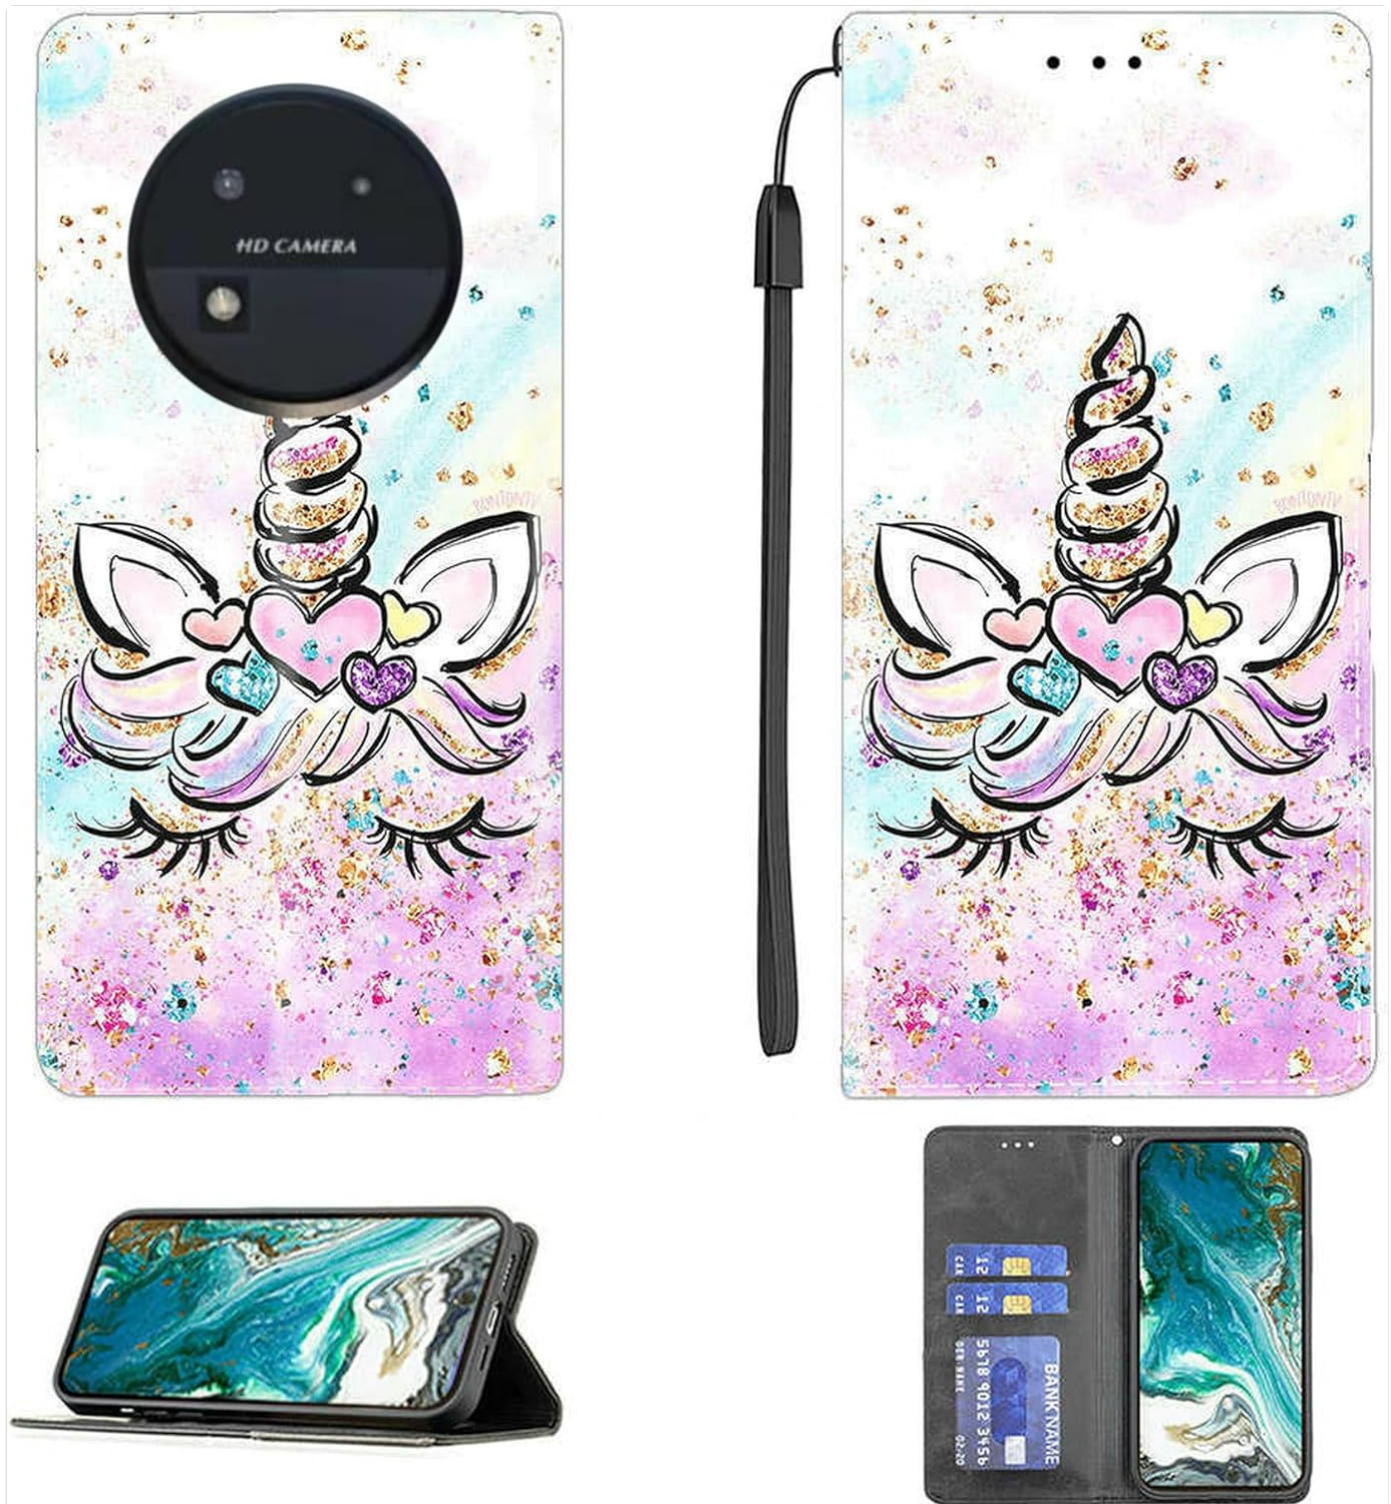


Figure 1: Front and back view of the Oukitel C37 phone case, showcasing its vibrant unicorn design and overall form factor.



Figure 2: The phone case in use, highlighting its magnetic closure for secure storage and the integrated kickstand for hands-free viewing.

2. Applying the Tempered Glass Screen Protector

1. **Clean the Screen:** Use a microfiber cloth to thoroughly clean your phone's screen, removing all dust, smudges, and fingerprints. Ensure the screen is completely dry.
2. **Align the Protector:** Carefully peel off the protective film from the adhesive side of the tempered glass. Align the protector precisely with your phone's screen, paying attention to cutouts for the speaker and camera.
3. **Apply:** Once aligned, gently lower the tempered glass onto the screen. It will adhere automatically. If there are any bubbles, gently push them towards the edges using a soft cloth or a squeegee.

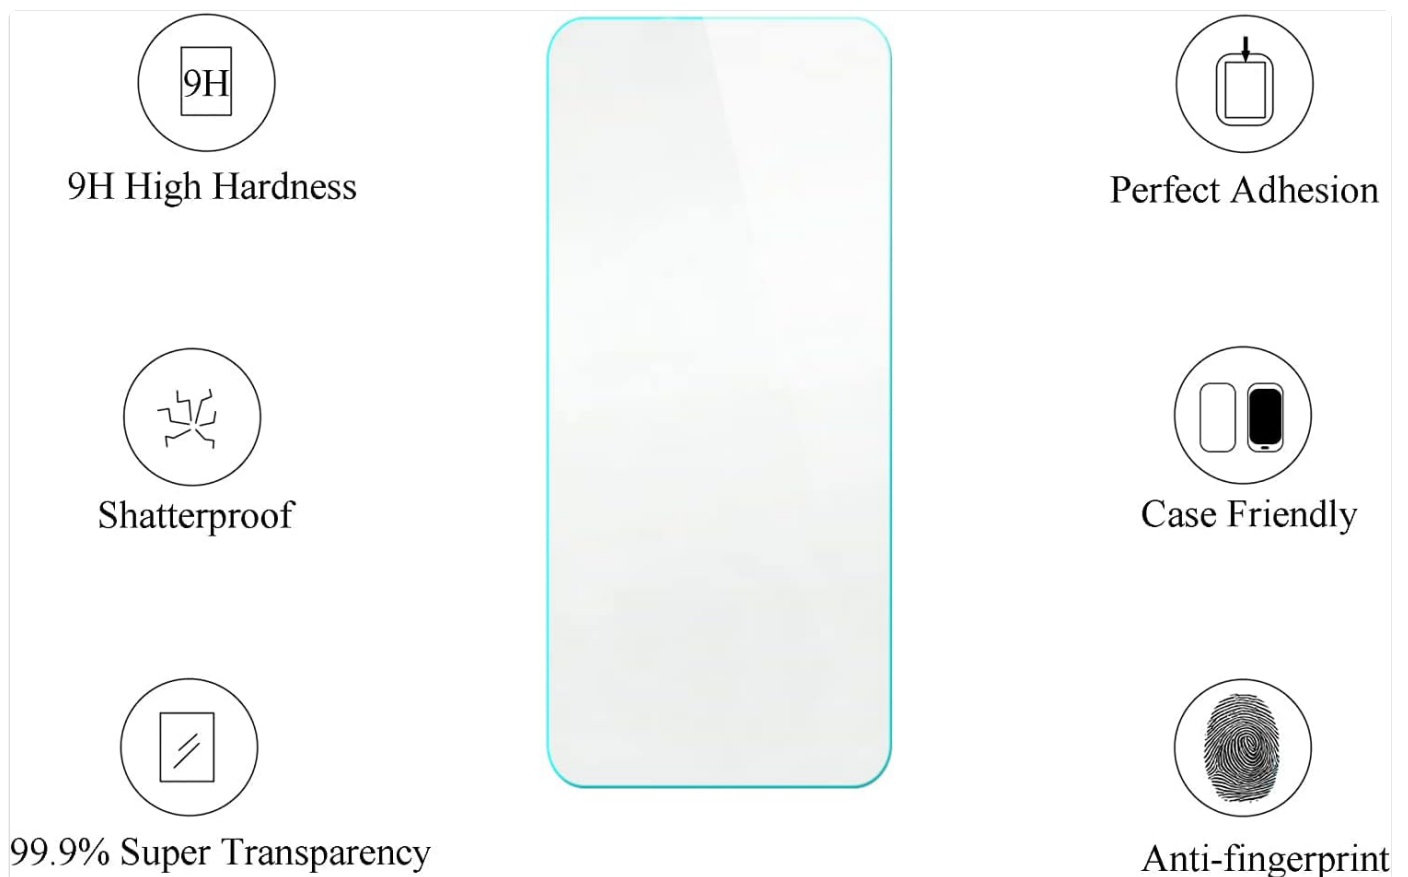


Figure 3: Key features of the tempered glass screen protector, including its hardness, adhesion, shatterproof quality, case compatibility,

transparency, and anti-fingerprint properties.



Scratch Proof

Scratch proof screen effectively avoids sharp objects scratching or abrasion



Figure 4: Visual demonstration of the screen protector's scratch-proof capabilities, indicating its robust protection against sharp objects and abrasion.

OPERATING INSTRUCTIONS

Using the Kickstand Feature

To use the kickstand, simply fold the back cover of the case along the designated crease. This will prop up your phone at an adjustable viewing angle, ideal for watching videos, making video calls, or browsing content hands-free.

Utilizing Card Storage

The wallet case is equipped with multiple card slots on the inside flap. Gently slide your credit cards, ID cards, or small amounts of cash into these designated slots. The design ensures your valuables are kept secure and easily accessible.



Figure 5: Interior view of the phone case, illustrating the integrated card storage feature for convenient carrying of essential cards and cash.

Magnetic Closure

The case features a magnetic closure to keep the front flap securely shut. This helps protect your screen and keeps your cards and money safely inside the wallet section. To open, simply pull the flap away from the phone.

MAINTENANCE

- **Case Cleaning:** For the PU leather case, wipe gently with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the material and design.
- **Screen Protector Care:** Clean the tempered glass screen protector with a clean, dry microfiber cloth. For stubborn smudges, a small amount of screen cleaner can be applied to the cloth (not directly to the screen).
- **Avoid Extreme Conditions:** Do not expose the product to extreme temperatures, direct sunlight for prolonged periods, or excessive moisture.

TROUBLESHOOTING

Case Fit Issues

If the case does not fit correctly, ensure you have the correct model (Oukitel C37). Re-align the phone and gently press it into the case, ensuring all buttons and ports are properly seated.

Screen Protector Bubbles

Small bubbles after installation are common. Use a soft cloth or a credit card wrapped in a cloth to gently push bubbles towards the nearest edge. For persistent bubbles, lift the nearest corner of the protector slightly and re-apply slowly, ensuring no dust is trapped underneath.

Magnetic Closure Weakness

If the magnetic closure seems weak, ensure no excessive items (e.g., too many cards or bulky cash) are stored in the card slots, as this can prevent the magnet from fully engaging.

SPECIFICATIONS

Feature	Detail
Brand	Aroepurt
Compatible Phone Model	Oukitel C37
Item Model Number	CPT3
Material	Polyurethane (PU Leather)
Special Features	Card insertion, Kickstand, Magnetic closure, Stylish design
Product Dimensions	0.39 x 0.39 x 0.39 inches
Item Weight	2.46 ounces
What's in the Box	1*Phone Case, 1*Tempered Glass Screen Protector

WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the product packaging or contact Aroepurt customer service directly. Contact details can typically be found on the manufacturer's official website or within the product documentation.