

[Manuals.plus](#) /

- › [Signature Design by Ashley](#) /
- › Signature Design by Ashley Fyne-Dyme Power Reclining Loveseat User Manual

Signature Design by Ashley Fyne-Dyme

Signature Design by Ashley Fyne-Dyme Power Reclining Loveseat User Manual

Model: Fyne-Dyme (ASIN: B0D2S494WJ)

1. INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Signature Design by Ashley Fyne-Dyme Contemporary Power Reclining Loveseat. This loveseat features power reclining, adjustable headrests, a center console, USB charging ports, and built-in wireless audio connectivity. Please read these instructions carefully before use to ensure proper function and safety.



2. SAFETY INFORMATION

WARNING: This product includes electrical components. Failure to follow safety instructions may result in injury or damage.

- Keep the loveseat away from open flames or high heat sources.
- Supervise children and pets to avoid entrapment risks, especially during reclining operation.
- Follow all assembly instructions carefully to ensure safe use and stability.
- Ensure the power cord is not pinched or damaged. Do not operate with a damaged cord.
- Only use the loveseat for its intended purpose as seating furniture.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Power Reclining Loveseat with Console (main unit)
- Assembly Instructions
- Power Cord (UL listed)

Note: Hardware pack is included, but no additional tools are typically required for assembly.

4. SETUP AND ASSEMBLY

Assembly of this loveseat is designed to be straightforward, primarily involving attaching the seat backs to the main unit. Two people are recommended for assembly due to the item's weight (approximately 295 lbs).

4.1 Unpacking

1. Carefully remove the loveseat from its packaging. Ensure adequate space for unpacking and assembly.
2. Check all packaging materials for small parts before discarding.

4.2 Assembly Steps

1. Position the main loveseat base in its desired location. Ensure the minimum required door width for entry is 32 inches.
2. Align the seat backs with the corresponding brackets on the main unit.
3. Gently push down and snap the seat backs into place. You should hear a clicking sound when fully secured.
4. Locate the power cord. Connect it to the power input on the loveseat and then plug it into a standard wall outlet.



FULLY ASSEMBLED : 74" W x 43" D x 43" H

ARM HEIGHT: 25"

SEAT DEPTH: 22"

FULLY RECLINED LENGTH: 68"

FOOTREST HEIGHT: 18"

DISTANCE BETWEEN ARMS: 61"

SEAT HEIGHT: 21"

DISTANCE BETWEEN RECLINER

AND WALL: 5"



MIN. DOORWAY WIDTH
FOR DELIVERY : 32"

Image 4.1: Loveseat dimensions and minimum wall clearance.

Important: Maintain a minimum distance of 5 inches between the back of the loveseat and any wall to allow for full reclining.

5. OPERATING INSTRUCTIONS

Your Fyne-Dyme loveseat offers several integrated features for enhanced comfort and convenience.

5.1 Power Reclining and Adjustable Headrest

- Use the one-touch power control buttons located on the side of the loveseat to recline the seat and adjust the headrest to your desired position.
- The power footrest extends and retracts in conjunction with the reclining mechanism.

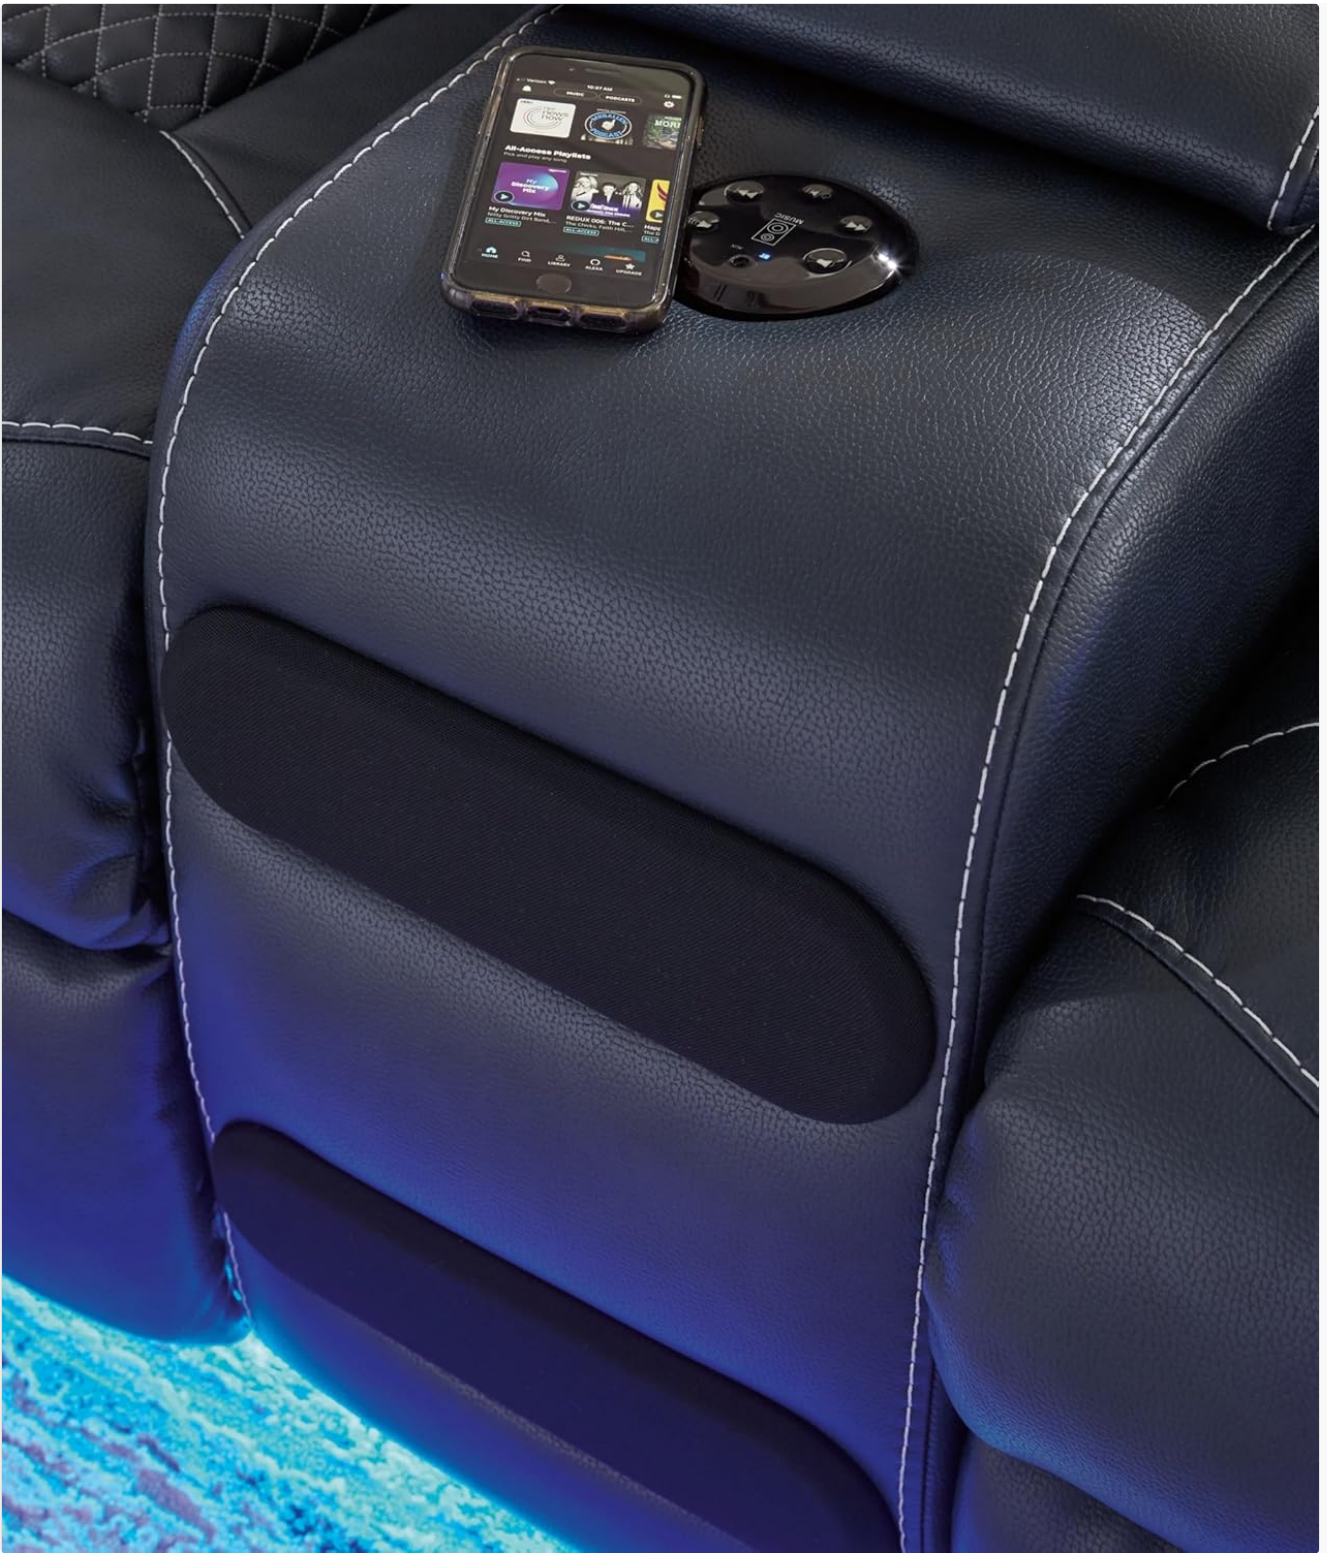


Image 5.1: Detail of the adjustable power headrest.



Image 5.2: View of the loveseat in a reclined position, illustrating the footrest mechanism.

5.2 USB Charging Ports

- The loveseat is equipped with USB charging ports (USB-A and USB-C) to power your devices.
- Simply plug your USB cable directly into the port to begin charging. These ports feature zero-draw technology, meaning they only draw power when a device is connected.



Image 5.3: Detail of the integrated USB charging ports.

5.3 Console, Cup Holders, and Storage

- The center console provides convenient storage space. Lift the console lid to access.
- Integrated cup holders are located within the console and armrests for beverages.
- Flip-top storage armrests offer additional concealed storage.



Image 5.4: View of the open center console storage compartment.



Image 5.5: Detail of a cup holder and adjacent USB charging port.

5.4 Ambient LED Lighting

- The loveseat features ambient blue LED base lighting. Activate or deactivate this feature using the dedicated control button.



Image 5.6: The loveseat with its ambient blue LED lighting illuminated.

5.5 Built-in Wireless Audio Connectivity

- The loveseat includes built-in wireless audio connectivity. Refer to the specific audio system instructions (if provided separately) for pairing and operation.
- Typically, this involves activating Bluetooth on your device and selecting the loveseat from the list of available devices.



Image 5.7: Detail of the console area, showing a phone and audio control dial.

6. MAINTENANCE AND CARE

Proper care will help maintain the appearance and longevity of your loveseat.

- **Cleaning:** Spot clean the faux leather upholstery with a damp cloth. For more stubborn stains, use a water-based cleaner (Upholstery Cleaning Code: W). Test any cleaning solution on an inconspicuous area first.
- **Dusting:** Regularly dust the loveseat with a soft, dry cloth.
- **Electrical Components:** Periodically check the power cord and connections for any signs of wear or damage.
- **Moving:** When moving the loveseat, lift it rather than dragging to prevent damage to the frame and floor.



Image 6.1: Close-up view of the faux leather upholstery texture.

7. TROUBLESHOOTING

If you encounter issues with your loveseat, refer to the following common solutions:

| Problem | Possible Cause | Solution |
|---|---|--|
| Loveseat does not recline or power on. | No power supply. | Ensure the power cord is securely plugged into both the loveseat and a working wall outlet. Check the circuit breaker. |
| USB ports are not charging devices. | Device not properly connected or power issue. | Verify the USB cable is fully inserted. Check if the loveseat has power. Try a different USB cable or device. |
| Headrest or footrest not moving smoothly. | Obstruction or mechanism issue. | Check for any obstructions around the moving parts. Ensure the loveseat is not too close to a wall (minimum 5 inches clearance). |
| Unusual noises during operation. | Loose components or motor issue. | Inspect for any loose connections or hardware. If noises persist, discontinue use and contact customer support. |

If these steps do not resolve the issue, please contact customer support for further assistance.

8. SPECIFICATIONS

| Feature | Detail |
|---------------------------------|---------------------------------------|
| Brand | Signature Design by Ashley |
| Model Name | Fyne-Dyme |
| Type | Power Reclining Loveseat with Console |
| Color | Navy |
| Upholstery Fabric Type | Faux Leather |
| Product Dimensions (D x W x H) | 43" x 74" x 43" |
| Item Weight | 295 Pounds |
| Seat Depth | 22 inches |
| Seat Height | 21 inches |
| Arm Height | 25 inches |
| Fully Reclined Length | 68 inches |
| Wall Clearance Required | 5 inches |
| Minimum Door Width for Delivery | 32 inches |
| Seating Capacity | 2 |

| Feature | Detail |
|---------------------|---|
| Special Features | Adjustable Headrest, Cup Holder, Position Lock, Recliner, USB Charging Ports, Built-in Wireless Audio, LED Lighting |
| Assembly Required | Yes (2 people recommended) |
| Frame Material Type | Engineered Wood, Metal, Wood |
| Certifications | UL Listed (Power Cord) |

9. WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official Signature Design by Ashley website. For customer support, technical assistance, or to report any issues, please contact Signature Design by Ashley customer service.

Contact information can typically be found on the manufacturer's website or on your purchase receipt.