

## iTANSUOMEI QX-018

# iTANSUOMEI Electric Spin Scrubber Model QX-018 User Manual

Your guide to efficient and effective cleaning.

## 1. INTRODUCTION

Thank you for choosing the iTANSUOMEI Electric Spin Scrubber Model QX-018. This cordless power scrubber is designed to simplify your cleaning tasks with its powerful motor, adjustable speeds, and versatile brush heads. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and retain it for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

- **Do Not Submerge:** The product is IPX5 waterproof, meaning it is protected against low-pressure water jets. However, it cannot be completely submerged in water. Avoid immersing the main unit in water to prevent damage and electric shock.
- **Charging:** Use only the provided Type-C charging cable. Ensure the charging port is dry before connecting the cable. Do not operate the scrubber while it is charging.
- **Children and Pets:** Keep the device out of reach of children and pets. This is not a toy.
- **Brush Head Handling:** Always ensure the device is turned off before attaching or detaching brush heads.
- **Surface Compatibility:** Test the scrubber on an inconspicuous area of the surface first to ensure it does not cause damage or scratching, especially with stiffer brush heads.
- **Chemicals:** When using cleaning agents, follow the chemical manufacturer's instructions and wear appropriate protective gear. Avoid mixing incompatible chemicals.
- **Damage:** Do not use the device if it appears damaged, has a frayed cord, or is not functioning correctly. Contact customer support for assistance.

# 8 Brush Head Combination +1 Fix Base



**Pacific brush**  
flat tile/floor/window,etc



**Small brush**  
fan net/car wheel hub,etc



**Pointed brush**  
atcrevices and corners,ect



**Hair brush**  
bathtub/basin/toilet,etc



**Sponge brush**  
glass/tile/car wash,etc



**Scouring pad**  
stove/bathroom tile/wall,etc



**Cloth brush**  
mirror/glass/car surface,etc



**Fiber brush**  
polishing/waxing,ect

**Image: IPX5 Waterproof Rating Warning.** This image illustrates the IPX5 waterproof rating, showing the scrubber being splashed with water (green checkmark) and a clear warning against submerging the entire unit in water (red cross). This highlights the importance of not fully immersing the device.

## 3. PACKAGE CONTENTS

Please verify that all items are present in your package:

- Electric Spin Scrubber Main Unit
- Adjustable Extension Handle (Stainless Steel)
- USB-C Charging Cable
- Wall Mount Hook
- Pacific Brush (Flat Tile/Floor/Window)
- Small Brush (Fan Net/Car Wheel Hub)
- Pointed Brush (Crevices and Corners)
- Hair Brush (Bathtub/Basin/Toilet)
- Sponge Brush (Glass/Tile/Car Wash)
- Scouring Pad (Stove/Bathroom Tile/Wall)
- Cloth Brush (Mirror/Glass/Car Surface)
- Fiber Brush (Polishing/Waxing)
- Fixed Disk (for attaching pads)



**Image: Package Contents.** This image displays all components included with the iTANSUOMEI Electric Spin Scrubber, including the main unit, extension handle parts, USB-C cable, wall hook, and the various brush heads and pads.

## 4. SETUP AND CHARGING

### 4.1 Assembly

- 1. Attach Brush Head:** Select the desired brush head. Align the brush head with the rotating shaft on the main unit and press firmly until it clicks into place. For pads (Sponge, Scouring, Cloth, Fiber), first attach the Fixed Disk to the main unit, then press the pad onto the Fixed Disk.
- 2. Assemble Handle (Optional):** If using the extension handle, screw the handle sections together clockwise until secure. Then, attach the assembled handle to the main unit by screwing it clockwise. The handle length is adjustable from 11 to 45.2 inches.




**Image: Assembly Steps.** This image illustrates the step-by-step assembly process, including attaching a brush head, connecting the extension handle, and charging the device.

### 4.2 Charging the Device

Before first use, fully charge the scrubber. The LED display indicates the battery level.

- Locate the USB-C charging port on the main unit. It may be covered by a protective flap.

- Connect the provided USB-C cable to the scrubber and the other end to a suitable USB power adapter (not included).
- The LED display will show the charging status. A full charge is indicated when the display shows "100".
- Once fully charged, disconnect the charging cable and close the protective flap to maintain water resistance.

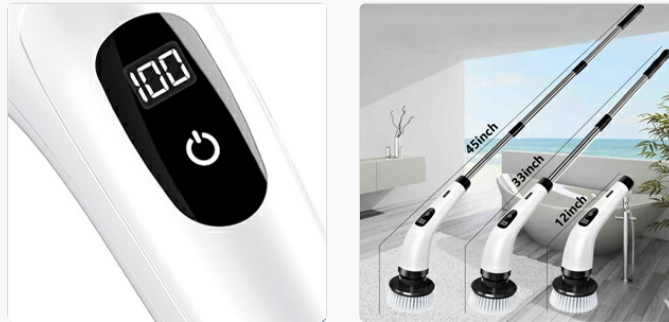

**Images: Charging Port and LED Display.** These images show the USB-C charging port and the LED display, which indicates the current battery level, allowing users to monitor charging status.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off and Speed Adjustment

- **Power On:** Press the power button on the handle to turn on the scrubber. It will start at the default speed.
- **Adjust Speed:** Press the power button again to switch between the two available speeds:
  - **320 RPM:** Suitable for daily cleaning and lighter tasks.
  - **370 RPM:** Provides higher power for quick cleaning and stubborn stains.
- **Power Off:** Press the power button a third time to turn off the device.

### Enjoy Time-saving and Efficient Cleaning



**Image: Two Speed Cleaning Modes.** This image visually demonstrates the two operating speeds of the scrubber: 320 RPM for daily cleaning and 370 RPM for deep cleaning, showing the scrubber in action at both settings.

## 5.2 Brush Head Selection and Application

The iTANSUOMEI Electric Spin Scrubber comes with multiple brush heads designed for various cleaning tasks:

- **Pacific Brush:** Ideal for flat tiles, floors, and windows.
- **Small Brush:** Suitable for intricate areas like fan nets and car wheel hubs.
- **Pointed Brush:** Designed for reaching into crevices, corners, and grout lines.
- **Hair Brush:** Effective for cleaning bathtubs, basins, and toilets.
- **Sponge Brush:** Gentle cleaning for glass, tiles, and car washing.
- **Scouring Pad:** For tougher grime on stoves, bathroom tiles, and walls.
- **Cloth Brush:** Best for mirrors, glass, and delicate car surfaces.
- **Fiber Brush:** Used for polishing and waxing surfaces.

Always choose the appropriate brush head for the surface and type of dirt to ensure effective cleaning and prevent damage.



**Image: Brush Head Applications.** This image showcases the eight different brush heads included with the scrubber, along with visual examples of their recommended uses on various surfaces like tiles, car wheels, corners, and stoves.

## 6. MAINTENANCE AND STORAGE

### 6.1 Cleaning the Scrubber

- After each use, turn off the scrubber and remove the brush head.
- Rinse the brush heads thoroughly under running water to remove dirt and cleaning residues. Allow them to air dry completely before storing.
- Wipe the main unit and handle with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
- Ensure the charging port cover is securely closed after cleaning.

## 6.2 Storage

- Store the scrubber and its accessories in a clean, dry place, away from direct sunlight and extreme temperatures.
- The included wall mount hook can be used for convenient storage, keeping the scrubber accessible and organized.
- For long-term storage, ensure the battery is partially charged (around 50%) to prolong its lifespan. Recharge every few months if not in use.



**Image: Easy Storage.** This image demonstrates how the electric spin scrubber can be easily stored using the included wall mount hook, showing the adjustable handle and the charging port location.

## 7. TROUBLESHOOTING

If you encounter issues with your iTANSUOMEI Electric Spin Scrubber, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Scrubber does not turn on.	Battery is depleted.	Charge the device fully using the provided USB-C cable. Check the LED display for battery level.
Reduced spinning power.	Low battery level or excessive pressure applied.	Recharge the battery. Apply less pressure during cleaning; let the scrubber do the work.
Brush head detaches during use.	Brush head not securely attached.	Ensure the brush head is firmly pressed onto the rotating shaft until it clicks into place.
Device not charging.	Cable or adapter issue, or charging port is wet.	Ensure the USB-C cable is properly connected and the adapter is functional. Verify the charging port is dry. Try a different USB power source.

If the problem persists after trying these solutions, please contact customer support.

## 8. PRODUCT SPECIFICATIONS

- **Brand:** iTANSUOMEI
- **Model Number:** QX-018
- **Color:** White
- **Handle Material:** Stainless Steel
- **Product Dimensions:** 14.37"L x 7.87"W x 3.54"H (Main Unit)
- **Adjustable Handle Length:** 11 to 45.2 inches
- **Item Weight:** 2.6 pounds (approximately 1.18 Kilograms)
- **Battery:** 1 Lithium Ion battery (included)
- **Charging Port:** USB-C
- **Speed Settings:** 2 speeds (320 RPM for daily cleaning, 370 RPM for deep cleaning)
- **Special Features:** LED Display, Lightweight, Long Handle, Cordless
- **Waterproof Rating:** IPX5
- **Manufacturer:** Yongkang Wangchi Industry and Trade Co., Ltd

## 9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or if you require assistance with your iTANSUOMEI Electric Spin Scrubber, please refer to the retailer's return policy or contact iTANSUOMEI customer support directly. Please have your model number (QX-018) and purchase details ready when contacting support.

Contact information for customer support can typically be found on the product packaging or the retailer's website.

