

[Manuals.plus](#) /

› [COLORROOM](#) /

› COLORROOM C5 Android 14 Tablet User Manual

COLORROOM C5

COLORROOM C5 Android 14 Tablet User Manual

Model: C5

1. INTRODUCTION

Thank you for choosing the COLORROOM C5 Android 14 Tablet. This device is designed to provide a powerful and versatile computing experience, featuring an octa-core CPU, a vibrant 11-inch display, and a long-lasting 8000mAh battery. This manual will guide you through the setup, operation, and maintenance of your new tablet to ensure optimal performance and user satisfaction.

2. WHAT'S IN THE BOX

Please check the contents of your package. If any items are missing or damaged, contact customer support.

- COLORROOM C5 Android 14 Tablet
- USB Cable
- User Manual (this document)

Note: The 18W USB-PD fast charging adapter is sold separately.

3. PRODUCT OVERVIEW

Familiarize yourself with the key features and components of your COLORROOM C5 Tablet.




Figure 3.1: COLORROOM C5 Android 14 Tablet with its protective case, showcasing the 11-inch display with "Android 14", "Face Unlock", "11 inch Large Screen", "12GB+128GB", "8000mAh", and "Widevine L1" features highlighted on the screen.

Key Features:

- **Operating System:** Android 14 with AI enhancements
- **Processor:** Octa-core CPU (2 GHz)
- **Display:** 11-inch HD 1280x800 fully-in-cell anti-blue light screen
- **Memory:** 12GB RAM (6GB + 6GB expansion)
- **Storage:** 128GB ROM, expandable up to 1TB via MicroSD card (sold separately)
- **Battery:** 8000mAh, supporting 18W fast charging
- **Connectivity:** WiFi 6 (802.11ax), Bluetooth 5.0
- **Cameras:** Dual cameras (Front: 5MP, Rear: 8MP)
- **Security:** Face Unlock



 Figure 3.2: Diagram illustrating the tablet's core specifications including 11-inch display, Octa-Core 2.0GHz CPU, Dual Cameras, 12GB RAM, 128GB ROM, Bluetooth 5.0, 8000mAh battery, and Android 14 operating system.

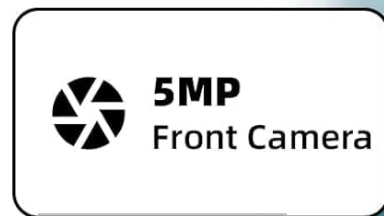

Dual front & rear cameras, capture every beautiful moment

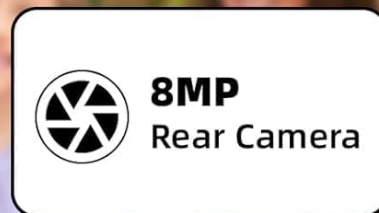 
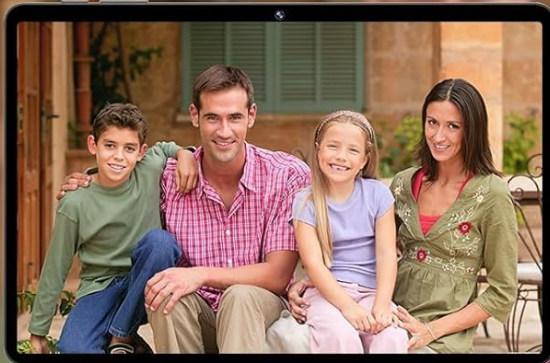 


Figure 3.3: Image showing the tablet's dual camera system, with a 5MP front camera suitable for video calls and an 8MP rear camera for capturing photos, demonstrated with images of people using the tablet for video calls and family photos.

4. SETUP GUIDE

4.1 Initial Charging

Before first use, fully charge your tablet. Connect the provided USB cable to the tablet's charging port and the other end to a compatible USB power adapter (not included). The battery indicator will show charging status. A full charge typically takes several hours.

4.2 Power On/Off

- **To Power On:** Press and hold the Power button until the COLORROOM logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then select "Power off".

- **To Restart:** Press and hold the Power button until the power options menu appears, then select "Restart".

4.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through the initial setup process. Follow the on-screen prompts to:

1. Select your language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one.
4. Set up Face Unlock and other security features.
5. Review and accept terms and conditions.

5. OPERATING YOUR TABLET

5.1 Android 14 Interface

Your tablet runs on Android 14, offering an intuitive and enhanced user experience. Navigate using gestures or on-screen buttons. Swipe down from the top for quick settings and notifications. Swipe up from the bottom to access the app drawer.

5.2 Display and Eye Protection

The 11-inch HD display features anti-blue light technology and automatic brightness adjustment to protect your eyesight. You can adjust display settings (brightness, dark theme, night light) in the Settings app under "Display".

11" Max Display

11inch Bigger than Bigger Anti-blue Display Astonishing performance. Incredibly advanced displays



11inch Fully Laminated

1280X800 HD

Eye-protection Display

Figure 5.1: Visual representation of the tablet's 11.0-inch display, highlighting its fully laminated, 1280x800 HD resolution, and eye-protection features.

5.3 Face Unlock

For convenient and secure access, set up Face Unlock. Go to **Settings > Security & privacy > Device unlock > Face Unlock** and follow the instructions to register your face. Ensure good lighting conditions for optimal performance.

5.4 Storage and Expansion

Your tablet comes with 128GB of internal storage. If you need more space, you can expand it up to 1TB using a MicroSD card (sold separately). Insert the MicroSD card into the designated slot on the tablet.

Storage & Expansion 1TB

The tablet has 12GB(6GB+6GB) RAM + 128GB ROM storage space
and you can also add an SD card to expand the memory to 1TB
The large storage space allows you to never worry about insufficient memory



Figure 5.2: Diagram illustrating the tablet's 12GB (6GB+6GB) RAM and 128GB ROM storage, with an emphasis on its expandability up to 1TB via an SD card, allowing ample space for media and applications.

5.5 Battery Management

The 8000mAh battery provides extended usage. To maximize battery life:

- Adjust screen brightness.
- Disable Wi-Fi and Bluetooth when not in use.
- Close unused applications.
- Utilize battery saver mode in Settings.

8000mAh Large & Powerful

All while enjoying all-day battery life.



Standby
72H



Website Browse
14H



Music
10H



Video
8H

8000mAh



Figure 5.3: Infographic detailing the 8000mAh battery's performance, showing estimated usage times: 72 hours standby, 14 hours website browsing, 10 hours music playback, and 8 hours video playback.

5.6 Parental Control

The Android 14 system includes parental control features to help manage screen time and content access for children. Access these settings through the system settings to create profiles and set restrictions.

6. MAINTENANCE

6.1 Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could damage the surface.

6.2 Software Updates

Regularly check for and install system updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**

6.3 Storage Management

Periodically review your installed apps and files. Uninstall unused apps and delete unnecessary files to free up storage space and maintain optimal performance. You can manage storage in **Settings > Storage**.

7. TROUBLESHOOTING

Problem	Possible Solution
Tablet does not power on.	Ensure the tablet is fully charged. Press and hold the Power button for at least 10 seconds.
Cannot connect to Wi-Fi.	Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are entering the correct password.
Tablet is slow or unresponsive.	Close unused apps. Clear cache. Restart the tablet. Check for system updates.
Face Unlock not working.	Ensure good lighting. Make sure your face is clearly visible to the front camera. Re-register your face if necessary.
Battery drains quickly.	Reduce screen brightness. Disable background app refresh. Turn off Wi-Fi/Bluetooth when not in use.

8. SPECIFICATIONS

Feature	Detail
Brand	COLORROOM
Model Name	C5
Operating System	Android 14 Tablet
Screen Size	11 Inches
Screen Resolution	1280 x 800 pixels (HD)
Processor	Octa-core, 2 GHz
RAM	12 GB (6GB + 6GB)
Internal Storage	128 GB

Feature	Detail
Expandable Storage	Up to 1 TB via MicroSD (sold separately)
Rear Webcam Resolution	8 MP
Front Webcam Resolution	5 MP
Wireless Type	802.11ax (WiFi 6)
Bluetooth	Bluetooth 5.0
Battery Capacity	8000 mAh
Average Battery Life	8 Hours
Item Weight	8.8 ounces
Product Dimensions (LxWxH)	11 x 6.5 x 0.4 inches

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official COLORROOM website. You may also contact the seller directly for assistance.

Protection plans are available for purchase separately to extend coverage for your device. Please refer to the product listing for details on available protection plans.

Seller: [COLORROOM Direct US](#)

© 2025 COLORROOM. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How can I unlock my COLORROOM C5 tablet if my child set a password that they cannot remember and I am unable to access the reset menu?

If you have forgotten the password or PIN for your COLORROOM C5 tablet and cannot access the settings, you will need to perform a factory reset. Please note that this will erase all data...

[Read full answer](#)