

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Samsung](#) /

› [SAMSUNG Galaxy Book4 Laptop User Manual - Model NP750XGK-KS2US-CTO](#)

Samsung NP750XGK-KS2US-CTO

SAMSUNG Galaxy Book4 Laptop User Manual

Model: NP750XGK-KS2US-CTO

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your SAMSUNG Galaxy Book4 laptop, model NP750XGK-KS2US-CTO. Please read these instructions carefully to ensure optimal performance and longevity of your device.



Figure 1: SAMSUNG Galaxy Book4 laptop with Windows desktop.

SETUP

1. Unpacking and Initial Inspection

Carefully remove all components from the packaging. Verify that all items are present:

- SAMSUNG Galaxy Book4 Laptop
- 45W AC Adapter
- ONT 32GB USB Drive
- Documentation (this manual)

Inspect the laptop and accessories for any signs of damage. If any components are missing or damaged, contact customer support immediately.

2. Connecting the Power Adapter

Connect the 45W AC adapter to the USB-C Power Jack on your laptop and then plug the adapter into a power outlet. It is recommended to fully charge the battery before initial use.



Figure 2: SAMSUNG Galaxy Book4 laptop with its 45W AC adapter and USB-C cable.

3. Initial Power On and Windows Setup

Press the power button to turn on the laptop. Follow the on-screen instructions to complete the Windows 10 Pro setup process. This includes selecting your region, language, accepting terms, and setting up user accounts.

The laptop features a fingerprint reader for secure login. You can configure this during the initial Windows setup or later via Windows Settings.

OPERATING INSTRUCTIONS

1. Keyboard and Touchpad

The laptop is equipped with a full-size backlit keyboard and a numeric keypad. The touchpad supports multi-touch gestures for navigation.

- **Backlit Keyboard:** Adjust keyboard backlight intensity using the dedicated function keys (refer to your laptop's specific key layout).
- **Fingerprint Reader:** Located on the keyboard, use it for quick and secure login via Windows Hello.

2. Connecting External Devices (Ports Overview)

Your Galaxy Book4 laptop offers various ports for connectivity:

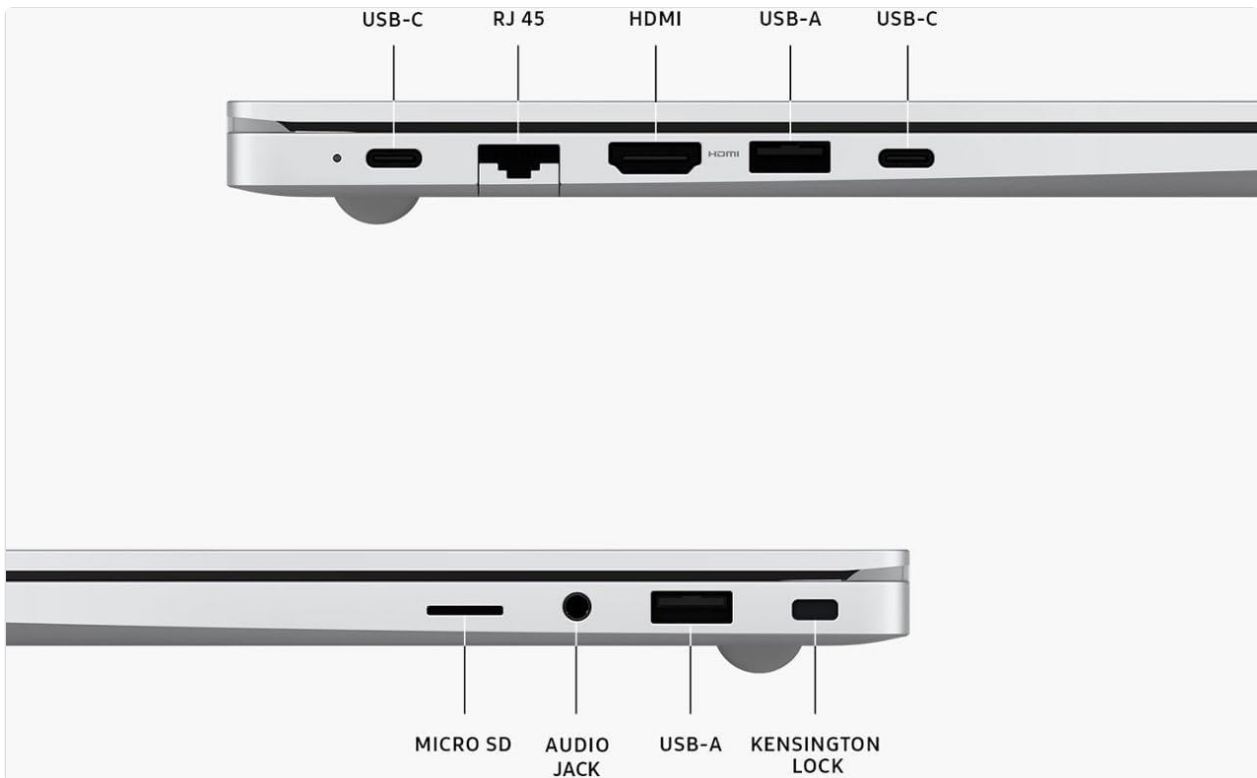


Figure 3: Left side ports including USB-C, RJ45 (Ethernet), HDMI, and USB-A.



Figure 4: Right side ports including Micro SD card reader, Audio Jack, USB-A, and Kensington Lock slot.

- **USB 3.2 Gen 1 Type-C (x2):** Supports data transfer and power delivery.
- **USB 3.2 Gen 1 Type-A (x2):** For connecting standard USB devices.
- **HDMI v2.1 (x1):** For connecting to external displays or projectors.
- **Headphone/Microphone Combo Jack (x1):** For audio input/output.
- **Card Reader (x1):** For Micro SD cards.
- **RJ-45 LAN (x1):** For wired network connection.
- **Kensington Lock Slot (x1):** For physical security.

3. Wireless Connectivity

The laptop supports Intel Wi-Fi 6E AX201 (2x2) for high-speed wireless internet and Bluetooth 5.1 for connecting wireless peripherals.

- **Wi-Fi:** Access Wi-Fi settings via the Windows taskbar network icon to connect to available networks.
- **Bluetooth:** Enable Bluetooth in Windows Settings to pair with devices like headphones, mice, or keyboards.

4. Audio and Camera

The laptop features stereo speakers with Dolby Atmos support and a 720p HD camera with an integrated digital microphone for video conferencing and communication.

MAINTENANCE

1. Cleaning the Laptop

- **Screen:** Use a soft, lint-free cloth specifically designed for electronics. Dampen slightly with water or a screen cleaner if necessary. Avoid harsh chemicals.
- **Keyboard and Chassis:** Use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used. Ensure no liquid enters openings.
- **Ports:** Use compressed air to gently clear dust from ports. Avoid inserting objects into ports.

Caution: Always power off and unplug the laptop before cleaning.

2. Battery Care

The laptop is equipped with a 4-cell 54.4Wh lithium-ion battery. To maximize battery lifespan:

- Avoid extreme temperatures.
- Do not fully discharge the battery frequently.
- If storing the laptop for an extended period, charge it to about 50-60% before turning it off.

Expected battery life is up to 12 hours for non-gaming use.

3. Software Updates

Regularly update your Windows operating system and device drivers to ensure optimal performance, security, and compatibility. Windows Update can be accessed via Windows Settings.

TROUBLESHOOTING

1. Laptop Does Not Power On

- Ensure the AC adapter is securely connected to both the laptop and a working power outlet.
- Verify the power outlet is functional by plugging in another device.
- If the battery is completely drained, allow it to charge for at least 30 minutes before attempting to power on.

2. No Wi-Fi Connection

- Check if Wi-Fi is enabled in Windows settings.
- Restart your router and modem.
- Ensure you are within range of a Wi-Fi network and have the correct password.
- Update Wi-Fi drivers if necessary.

3. Keyboard Backlight Not Working

- Check the function keys (usually Fn + Fx key) for keyboard backlight control.
- Ensure relevant drivers are updated.

4. Slow Performance

- Close unnecessary applications running in the background.
- Check for and install any pending Windows updates.
- Run a disk cleanup and defragmentation (for HDD, though this is SSD).
- Scan for malware or viruses.
- Ensure sufficient free space on the 512GB NVMe M.2 SSD.

SPECIFICATIONS

Feature	Detail
Model Name	SAMSUNG Galaxy Book4 (NP750XGK-KS2US-CTO)
Display	15.6" FHD (1920 x 1080) IPS Anti-Glare, 300 nits, 16:9 Aspect Ratio, 100% sRGB, 60Hz
Processor	Intel Core 7 150U (10-Core, up to 5.4GHz)
Graphics	Intel Graphics (Integrated)
Memory (RAM)	16GB LPDDR4 4267 MHz SDRAM
Storage	512GB NVMe M.2 SSD
Operating System	Windows 10 Pro
Keyboard	Fullsize Backlit Keyboard with Numpad, Fingerprint Reader
Wireless Connectivity	Intel Wi-Fi 6E AX201 (2x2), Bluetooth 5.1
LAN	10/100/1000Mbps (RJ-45)
Camera	720p HD Camera
Audio	Stereo Speakers (2W x 2), Dolby Atmos
Ports	2x USB 3.2 Gen 1 Type-C, 2x USB 3.2 Gen 1 Type-A, 1x HDMI v2.1, 1x Headphone/Microphone Combo Jack, 1x Card Reader (Micro SD), 1x RJ-45 LAN, 1x USB-C Power Jack
Battery	4 Cell 54.4Wh (Up to 12 hours non-gaming)
Dimensions (LxWxH)	14.04 x 9.02 x 0.61 inches
Weight	3.46 lbs
Color	Silver
Included Accessories	45W AC Adapter, ONT 32GB USB Drive

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Samsung support website or contact their customer service. Specific warranty terms may vary by region and retailer.

Online Support: Visit the official Samsung support website for drivers, FAQs, and troubleshooting guides.

Contact Support: Refer to your regional Samsung contact information for phone or chat support.

Note: The product may have been opened for customization upgrades as advertised. This process is professionally handled and resealed.

