

Manuals.plus /

- › WOCKODER /
- › WOCKODER R612 Vinyl Record Player Instruction Manual

WOCKODER R612

WOCKODER R612 Vinyl Record Player Instruction Manual

Model: R612

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your WOCKODER R612 Vinyl Record Player. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Image: The WOCKODER R612 Vinyl Record Player with its two external speakers, showcasing its design.

WHAT'S IN THE BOX

Verify that all components are present upon unboxing:

- Turntable Unit R612 with Detachable Dust Cover
- DC 12V 2000mA Power Adapter
- 45 RPM Adapter
- Instruction Manual (this document)
- Two Dual External Speakers



WIRELESS
CONNECTIVITY



AUX-IN, RCA
OUTPUT & JACK



STEREO DUAL
SPEAKERS



THREE-SPEED
VINYL PLAYER



EXTERNAL SPEAKER
CONNECTION



COME WITH 45
SPEED ADAPTER

Image: Visual representation of the turntable's features and included accessories.

PRODUCT FEATURES

- **Dual Separate Stereo Speakers:** Equipped with a separable pair of speakers for enhanced audio.
- **Bluetooth Wireless Input:** Connect wirelessly to mobile phones and other devices.
- **Vintage Design:** Aesthetic wood black finish with a minimalist, retro design.
- **3-Speed Belt-Driven System:** Supports 33 $\frac{1}{3}$, 45, and 78 RPM vinyl records (7", 10", 12").

- **Auto-Stop Function:** Automatically stops playback at the end of a record to protect vinyl.
- **Multiple Connectivity Options:** AUX input, Headphone input, and RCA line out.
- **Detachable Dust Cover:** Protects the record player when not in use.

SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Place the Turntable:** Position the turntable unit on a stable, level surface.
3. **Connect External Speakers:**
Connect the included external speakers to the RCA Line Out/External Speaker Clip terminals on the back of the turntable. Ensure correct polarity (red to red, black to black).



Image: The record player with its external speakers, highlighting the dual speaker setup.

Your browser does not support the video tag.

Video: Demonstrates the setup and connection of the external speakers to the record player.

4. **Connect Power:** Plug the DC 12V 2000mA Power Adapter into the power jack on the turntable and then into a


wall outlet.

5. **Remove Stylus Protector:** Gently remove the clear plastic protector from the stylus (needle) before use.

OPERATING INSTRUCTIONS

Playing a Vinyl Record

1. **Power On:** Turn the "VOLUME/POWER" knob clockwise to power on the unit. The power indicator will illuminate.
2. **Select Speed:** Adjust the speed selector switch (33 $\frac{1}{3}$, 45, or 78 RPM) to match the record you are playing. Use the 45 RPM adapter for 7-inch records with large center holes.

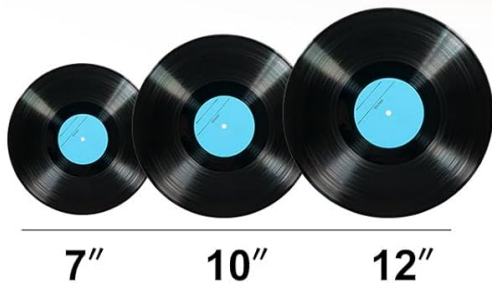

Support 33 $\frac{1}{3}$, 45, 78 RPM,
enjoy the happy time with
your favorite vinyl records

Image: Illustrates the three supported record sizes and the speed selection switch.

3. **Place Record:** Place your vinyl record on the turntable platter.
4. **Lift Tonearm:** Use the tonearm lift lever to gently raise the tonearm.
5. **Position Stylus:** Manually move the tonearm and position the stylus directly over the desired starting groove of the record.
6. **Lower Tonearm:** Gently lower the tonearm using the lift lever. The record will begin to play.
7. **Adjust Volume:** Rotate the "VOLUME/POWER" knob to adjust the playback volume.

8. **Auto-Stop Function:** The turntable features an auto-stop function that will stop the platter rotation when the record reaches its end. To disable this, set the AUTO STOP switch to "OFF".

Bluetooth Wireless Input

1. **Activate Bluetooth Mode:** Ensure the turntable is powered on and in Bluetooth mode (usually indicated by a blue flashing light).
2. **Pair Device:** On your mobile device, enable Bluetooth and search for "Vintage Turntable" or a similar name. Select it to pair.



Image: A smartphone screen showing Bluetooth pairing with the "Vintage Turntable" device.

3. **Play Music:** Once paired, you can stream audio from your device through the turntable's speakers.

AUX Input

Connect an external audio device (e.g., MP3 player, smartphone) to the AUX-in jack on the turntable using a 3.5mm audio cable. The turntable will automatically switch to AUX mode.

Headphone Output

For private listening, plug headphones into the headphone jack on the turntable. The external speakers will be

muted.

RCA Line Out

The RCA line out allows you to connect the turntable to an external amplifier or powered speakers for alternative audio output. Use standard RCA cables (red for right channel, white for left channel).

MAINTENANCE

- **Cleaning the Stylus:** Use a soft brush to gently clean the stylus from back to front. Avoid touching the stylus with your fingers.
- **Cleaning the Turntable:** Wipe the turntable unit and dust cover with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive cleaners.
- **Record Care:** Keep your vinyl records clean and stored vertically in their sleeves to prevent warping and dust accumulation.
- **Dust Cover:** Keep the dust cover closed when not in use to protect the turntable from dust.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; power outlet not active.	Ensure power adapter is securely connected and plugged into a working outlet.
No sound	Volume too low; speakers not connected; wrong input mode.	Increase volume; check speaker connections; ensure correct input mode (e.g., Bluetooth, AUX).
Record skips	Dirty or damaged record; dirty stylus; turntable not level.	Clean record/stylus; ensure turntable is on a level surface.
Bluetooth not pairing	Turntable not in pairing mode; device too far; interference.	Ensure turntable is in Bluetooth mode; move device closer; restart both devices.

SPECIFICATIONS

- **Brand:** WOCKODER
- **Model Name:** R612
- **Item Model Number:** R612
- **Package Dimensions:** 17.75 x 12.3 x 10.2 inches
- **Item Weight:** 10.14 pounds
- **Material:** Plastic
- **Maximum Rotational Speed:** 78 RPM
- **Special Features:** Auto Stop, Removable Dust Cover, Vintage Looking, Built-in Bluetooth Receiver, AUX/Headphone Input, RCA Line Out, Anti-vibration Belt-driven System, Two Dual External Speakers.
- **Compatible Devices:** Headphone

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official WOCKODER website. Keep your proof of purchase for warranty claims.