

[Manuals.plus](#) /

› [Lamshaw](#) /

› Lamshaw 22mm Soft Silicone Magnetic Buckle Sport Wristband Instruction Manual for EIGIIS Smartwatches

Lamshaw Compatible with EIGIIS KE2, KE3, KE5, KE6, K22, K27, K52, K55, K56, K57, DM50, HM09, I32, S35, S66 Smart Watches

Lamshaw 22mm Soft Silicone Magnetic Buckle Sport Wristband Instruction Manual

For EIGIIS Smartwatches and Compatible Models

1. INTRODUCTION

This manual provides instructions for the installation, adjustment, and care of your Lamshaw 22mm Soft Silicone Magnetic Buckle Sport Wristband. This replacement strap is designed for comfort and durability, featuring a magnetic buckle for easy and secure fastening.



Image: The Lamshaw 22mm Soft Silicone Magnetic Buckle Sport Wristband in blue, shown attached to a compatible smartwatch.

2. COMPATIBILITY

This wristband is compatible with various smartwatches that utilize a 22mm strap. Please verify your watch model before installation. Compatible models include:

- EIGIIS KE2, KE3, KE5, KE6
- K22, K27, K52, K55, K56, K57
- DM50, HM09, I32, S35, S66 Military Smart Watches

Compatible with Model



KE3 Watch



KE5 Watch



K56 Watch



K52 Watch



K22 Watch



KE2 Watch



KE6 Watch



K55 Watch



K56 Watch



HM09 Watch



S66 Watch



K57 Watch

Image: A visual guide displaying multiple smartwatch models that are compatible with this 22mm replacement band.

3. PRODUCT FEATURES

- **Material:** Made from soft, durable, and flexible silicone for comfortable wear.
- **Magnetic Buckle:** Features a new upgrade magnetic folding buckle design for secure and convenient fastening without traditional holes or clasps.
- **Adjustable Size:** Easily adjustable to fit various wrist circumferences.

Magnetic Folding Buckle



New Upgrade Magnetic Folding Buckle Design

Pretty, convenient and stable

No need to deal with holes and clasp, adjust the length as you wish

Image: A detailed view of the magnetic folding buckle, highlighting its design and magnetic connection.

4. INSTALLATION

To attach the wristband to your smartwatch:

1. Locate the quick-release pins on each end of the wristband.
2. Insert one end of the pin into the lug hole on your smartwatch.
3. Pull the quick-release lever to retract the pin, then align the other end with the opposite lug hole.
4. Release the lever to secure the pin in place. Gently tug on the band to ensure it is properly locked.
5. Repeat for the other side of the wristband.



Image: The silicone wristband displaying its quick-release pins, which facilitate easy attachment and removal from a smartwatch.

5. ADJUSTMENT

The magnetic buckle allows for precise adjustment to achieve a comfortable fit:

1. Open the button located on the back of the magnetic buckle.
2. Slide the buckle along the strap to adjust the length to your desired wrist circumference.
3. Once the desired length is achieved, press the button firmly to lock the buckle in its new position.
4. Ensure the buckle is securely fastened before wearing the watch.



【How to adjust】

Open the button on the back of the strap, adjust it to suit your wrist circumference, press the button, and the adjustment is complete

Image: A visual guide demonstrating the process of adjusting the wristband's length using the buckle's release mechanism.

6. WEARING THE BAND

Once adjusted, simply wrap the band around your wrist and allow the magnetic buckle to secure itself. The strong magnets ensure a firm hold during daily activities and sports.

7. CARE AND MAINTENANCE

To ensure the longevity and appearance of your silicone wristband:

- **Cleaning:** Wipe the band regularly with a soft, damp cloth. For deeper cleaning, use mild soap and water, then rinse thoroughly and dry completely.
- **Avoid Harsh Chemicals:** Do not expose the band to strong chemicals, solvents, or abrasive cleaners, as these can damage the silicone material.

- **Storage:** Store the band in a cool, dry place away from direct sunlight when not in use.
- **Magnetic Care:** Keep the magnetic buckle free from metallic debris that could interfere with its function.

8. TROUBLESHOOTING

- **Band feels loose/tight:** Re-adjust the magnetic buckle following the 'Adjustment' section to find your optimal fit.
- **Band detaches easily:** Ensure the quick-release pins are fully engaged in the watch lugs. Check that the magnetic buckle is clean and free of obstructions.
- **Skin irritation:** If irritation occurs, clean the band thoroughly. If irritation persists, discontinue use and consult a healthcare professional.

9. SPECIFICATIONS

Feature	Detail
Material	Soft Silicone
Buckle Type	Magnetic Folding Buckle
Band Width	22mm
Wrist Circumference	Approximately 5.51" - 8.46" (140mm - 215mm)



Image: A diagram illustrating the minimum and maximum wrist sizes compatible with the band's adjustment range.

10. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Lamshaw wristband, please refer to the retailer's return policy or contact the seller directly. Specific warranty details may vary by purchase location.

© 2024 Lamshaw. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D2W5PTX4>

More documents and user manuals: **<https://manuals.plus/>**