

[Manuals.plus](#) /

> [Dpofirs](#) /

> Dpofirs 1080P HD Thumb Camera with 1.44-inch Color Screen User Manual

Dpofirs Dpofirsotus7g9408-11

Dpofirs 1080P HD Thumb Camera User Manual

Model: Dpofirsotus7g9408-11

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Dpofirs 1080P HD Thumb Camera. Please read this manual thoroughly before operating the device and retain it for future reference.

The Dpofirs 1080P HD Thumb Camera is a compact video recorder featuring 1080P high-definition video recording, a 1.44-inch color screen for real-time previews, and a 180mAh battery. It supports automatic loop recording and OTG connection for easy data transfer to Android 8.0 and above systems.

Your browser does not support the video tag.

Video 1.1: This video provides a quick overview of the Dpofirs 1080P HD Thumb Camera, demonstrating its compact size and basic handling.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Dpofirs Thumb Camera.





Figure 2.1: The Dpofirs 1080P HD Thumb Camera, shown with its charging case and a USB cable. The camera features a small screen on its side and a flip-up flash unit.

- **High Definition Lens:** Captures 1080P video and clear images.
- **1.44-inch Color Screen:** Provides real-time preview for framing shots.
- **Flip-up Flashlight:** Enhances photo quality in low-light conditions.
- **180mAh Battery:** Integrated battery for portable use.
- **Charging Case:** Extends battery life up to one week.
- **USB Port:** For charging and data transfer.

3. SETUP

3.1 Charging the Camera

Before first use, fully charge the camera and its charging case.

1. Connect the camera to the charging case.
2. Connect the charging case to a power source using the provided USB cable.
3. The charging indicator will show the charging status. Refer to the camera's screen for battery level.

Automatic loop recording No frame drops, no seconds missed



Figure 3.1: The camera is shown connected to its charging case, which is plugged in via a USB cable. Blue light indicators on the case suggest charging activity.

3.2 Inserting a Memory Card

The camera requires a microSD card (not included) for storing photos and videos.

1. Locate the microSD card slot on the camera.
2. Gently insert the microSD card with the gold contacts facing down until it clicks into place.
3. To remove, press the card gently until it springs out.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Power On:** Press and hold the Power button until the screen illuminates.
- **Power Off:** Press and hold the Power button until the screen turns off.

4.2 Taking Photos

The 1.44-inch screen provides a real-time preview.



Figure 4.1: The camera's screen shows a live preview, indicating its readiness for capturing images or video.

1. Turn on the camera.
2. Frame your shot using the 1.44-inch color screen.
3. Press the Shutter button to take a photo.

Your browser does not support the video tag.

Video 4.2: This video demonstrates using the camera for taking selfies, highlighting its compact design and ease of use for personal photography.

4.3 Recording Videos

The camera supports 1080P HD video recording with automatic loop recording.



Figure 4.2: The camera is shown with its flash unit extended, highlighting its automatic loop recording feature, which ensures continuous recording without missing frames.

1. Turn on the camera.
2. Switch to video recording mode (refer to on-screen icons or specific button if available).
3. Press the Record button to start recording. Press again to stop.
4. The camera will automatically save segmented videos and overwrite the oldest files when the memory card is full.

4.4 Using the Flashlight

The integrated flip-up flashlight improves visibility in low-light conditions.

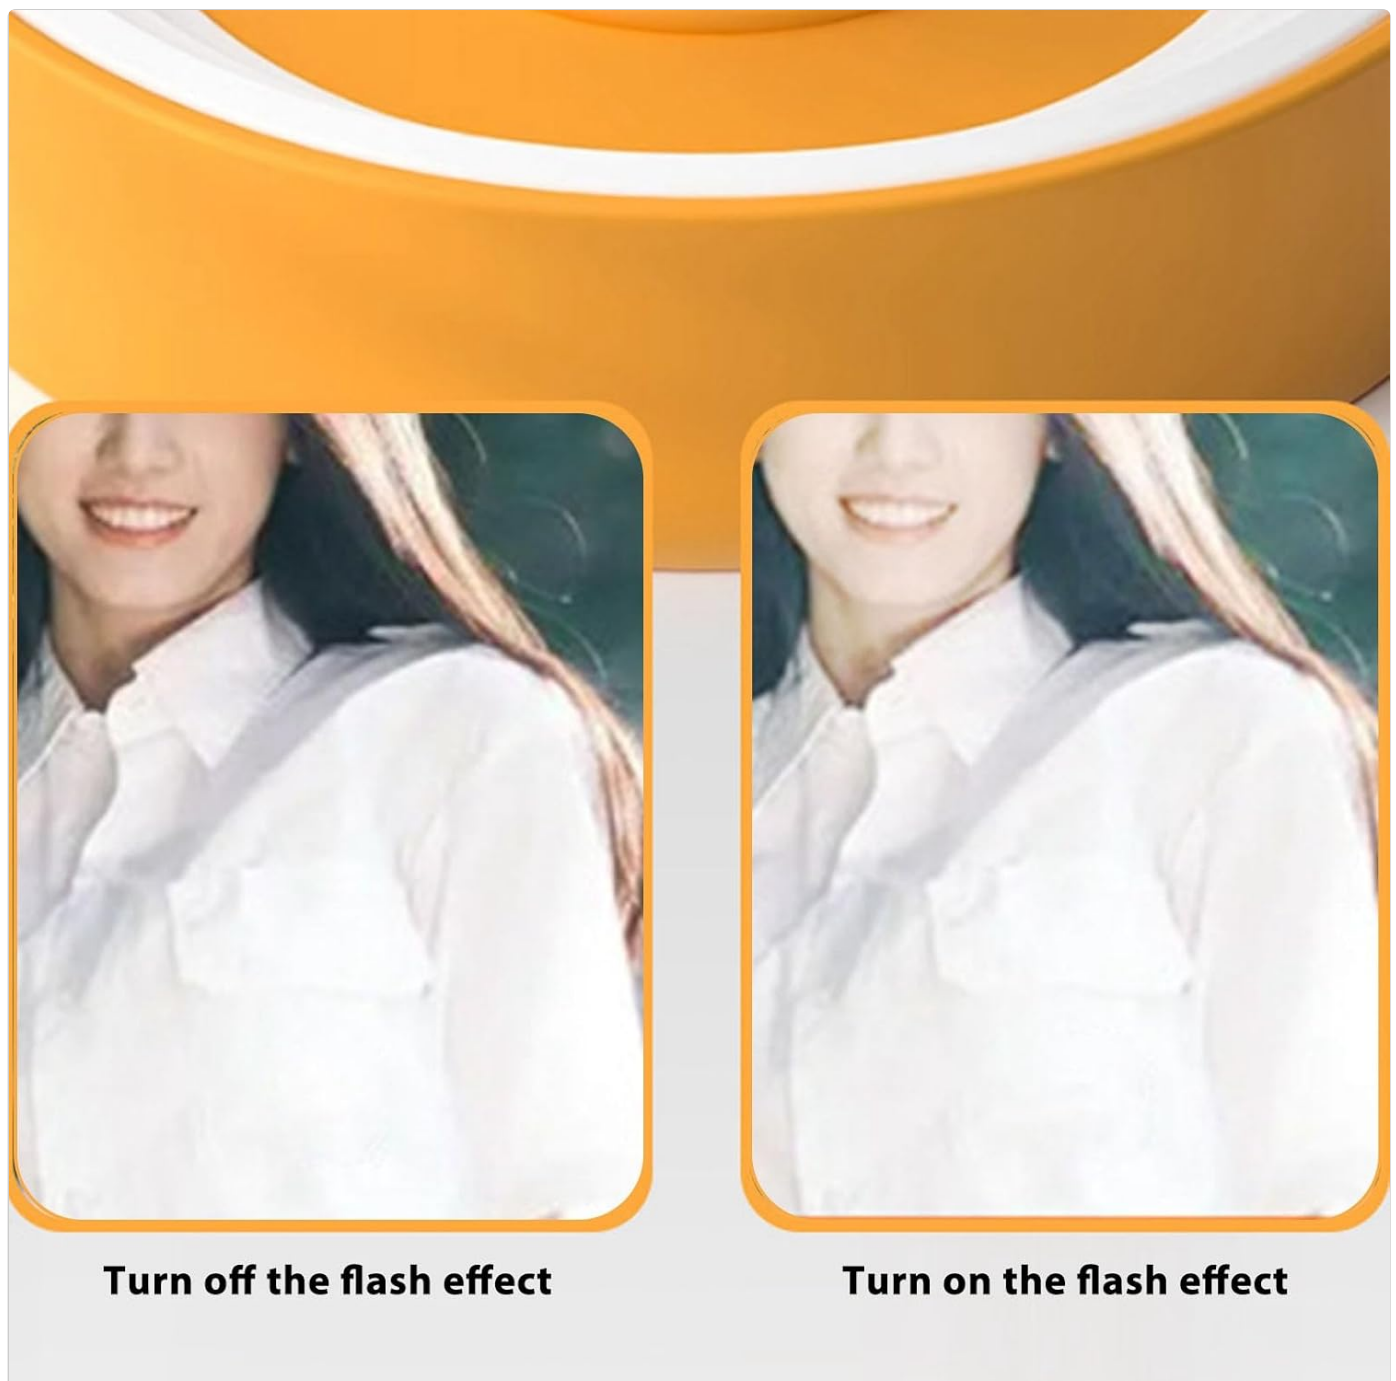


Figure 4.3: Two images side-by-side demonstrate the effect of the flash. The left image is darker (flash off), while the right image is brighter and clearer (flash on).

- To activate the flashlight, flip it up.
- To deactivate, fold it down.
- The flashlight can be reversed for different lighting needs.

4.5 OTG Connection for Data Transfer

Transfer photos and videos directly to your Android 8.0+ smartphone using OTG.

Your browser does not support the video tag.

Video 4.3: This video demonstrates connecting the camera's memory card to an Android smartphone via an OTG adapter for direct file transfer and viewing.

1. Remove the microSD card from the camera.
2. Insert the microSD card into an OTG card reader (not included).
3. Connect the OTG card reader to your Android 8.0 or higher smartphone.
4. Access your files through your phone's file manager.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. For the lens, use a specialized lens cleaning cloth and solution.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use for extended periods.
- **Firmware Updates:** Check the manufacturer's website periodically for any available firmware updates to ensure optimal performance.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Low battery.	Charge the camera and charging case fully.
Cannot take photos/record videos.	No microSD card or card is full/corrupted.	Insert a formatted microSD card or free up space/replace card.
Poor image/video quality.	Dirty lens, insufficient lighting, or incorrect settings.	Clean the lens. Use the flash in low light. Check camera settings.
OTG connection not working.	Incompatible phone OS, faulty OTG adapter, or incorrect connection.	Ensure phone is Android 8.0+. Try a different OTG adapter. Reconnect securely.

7. SPECIFICATIONS

- **Model:** Dpofirsotus7g9408-11
- **Video Resolution:** 1080P HD
- **Screen Size:** 1.44 inches (Color Display)
- **Battery Capacity:** 180mAh (Camera), additional capacity with charging case
- **Storage:** microSD Card (not included)
- **Connectivity:** OTG (for Android 8.0+ devices)
- **Special Features:** Flip-up Flashlight, Automatic Loop Recording
- **Dimensions:** Approximately 4.49 x 3.27 x 2.05 inches (Package Dimensions)
- **Weight:** Approximately 2.89 ounces

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the product packaging or contact Dpofirs customer service directly. Contact details can typically be found on the official Dpofirs website or through your purchase platform.

Online Support: Visit the [Dpofirs Store on Amazon](#) for additional product information and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question