

SANODESK 79x32 Inch

# SANODESK Electric Standing Desk 79x32 Inch Instruction Manual

Model: 79x32 Inch (Black Frame + Black Top)  
Brand: SANODESK

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- Always follow the assembly instructions carefully.
- Keep children and pets away from the desk during assembly and use.
- Do not exceed the maximum weight limit of **176 pounds (80 kg)**.
- Always use the desk on a stable, level surface.
- Be cautious when adjusting the height to prevent injury or pinching. Ensure no objects are in the path of the moving desk.
- Do not sit or stand on the desk.
- In case of any issues, contact customer service for assistance. Do not attempt to repair the desk yourself.

## 2. PRODUCT OVERVIEW

The SANODESK Electric Standing Desk is designed to provide a versatile and ergonomic workspace, allowing seamless transitions between sitting and standing positions. This model features a spacious 79x32 inch desktop, electric height adjustment, and a robust steel frame for stability.



Image 2.1: The SANODESK Electric Standing Desk in a typical office setup, showcasing its large surface area and integrated control panel.

## Key Features:

- **Electric Height Adjustment:** Smoothly adjust desk height from 28.7 inches to 48 inches.
- **Memory Presets:** Three programmable height settings for quick adjustments.
- **Sedentary Reminder:** Promotes healthy work habits by reminding you to change positions.
- **Child Lock Function:** Enhances safety by preventing accidental adjustments.
- **Anti-Collision System:** Automatically stops movement if an obstruction is detected.
- **Spacious Desktop:** 79x32 inch surface provides ample room for multiple monitors and accessories.
- **Sturdy Construction:** Industrial-grade steel frame ensures stability and durability.



Image 2.2: The desk integrated into a home office setting, demonstrating its aesthetic appeal and functional design.

### 3. SETUP AND ASSEMBLY

The SANODESK Electric Standing Desk is designed for straightforward assembly. All required hardware and assembly instructions are included with your purchase. It is recommended to have a clear, open space for assembly.

#### Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the included parts list.
2. **Assemble Legs:** Attach the feet to the lifting columns using the provided screws.
3. **Connect Frame:** Secure the crossbar and side brackets to the lifting columns.
4. **Attach Desktop:** Place the desktop onto the assembled frame and secure it with screws. Ensure the desktop is properly aligned.
5. **Install Control Panel:** Mount the control panel to the underside of the desktop in the designated location.

6. **Connect Cables:** Connect all motor and control panel cables to the control box according to the wiring diagram in the detailed assembly guide.
7. **Initial Power-Up:** Plug the desk into a power outlet. Perform an initial reset if instructed by the detailed guide.

## **Simple Installation**

### **Installation within 30 minutes**



Image 3.1: Detail of the desk frame connection, illustrating the simple installation process.

## **4. OPERATING INSTRUCTIONS**

Your SANODESK Electric Standing Desk offers intuitive controls for height adjustment and personalized settings.

### **Height Adjustment:**

- Use the **Up (▲)** and **Down (▼)** arrow buttons on the control panel to manually adjust the desk height.
- The desk can be adjusted from a minimum height of **28.7 inches** to a maximum height of **48 inches**.

## Height adjustment from 28.7-48"



Image 4.1: Visual representation of the desk's adjustable height range, from minimum sitting height to maximum standing height.

### Control Panel Functions:

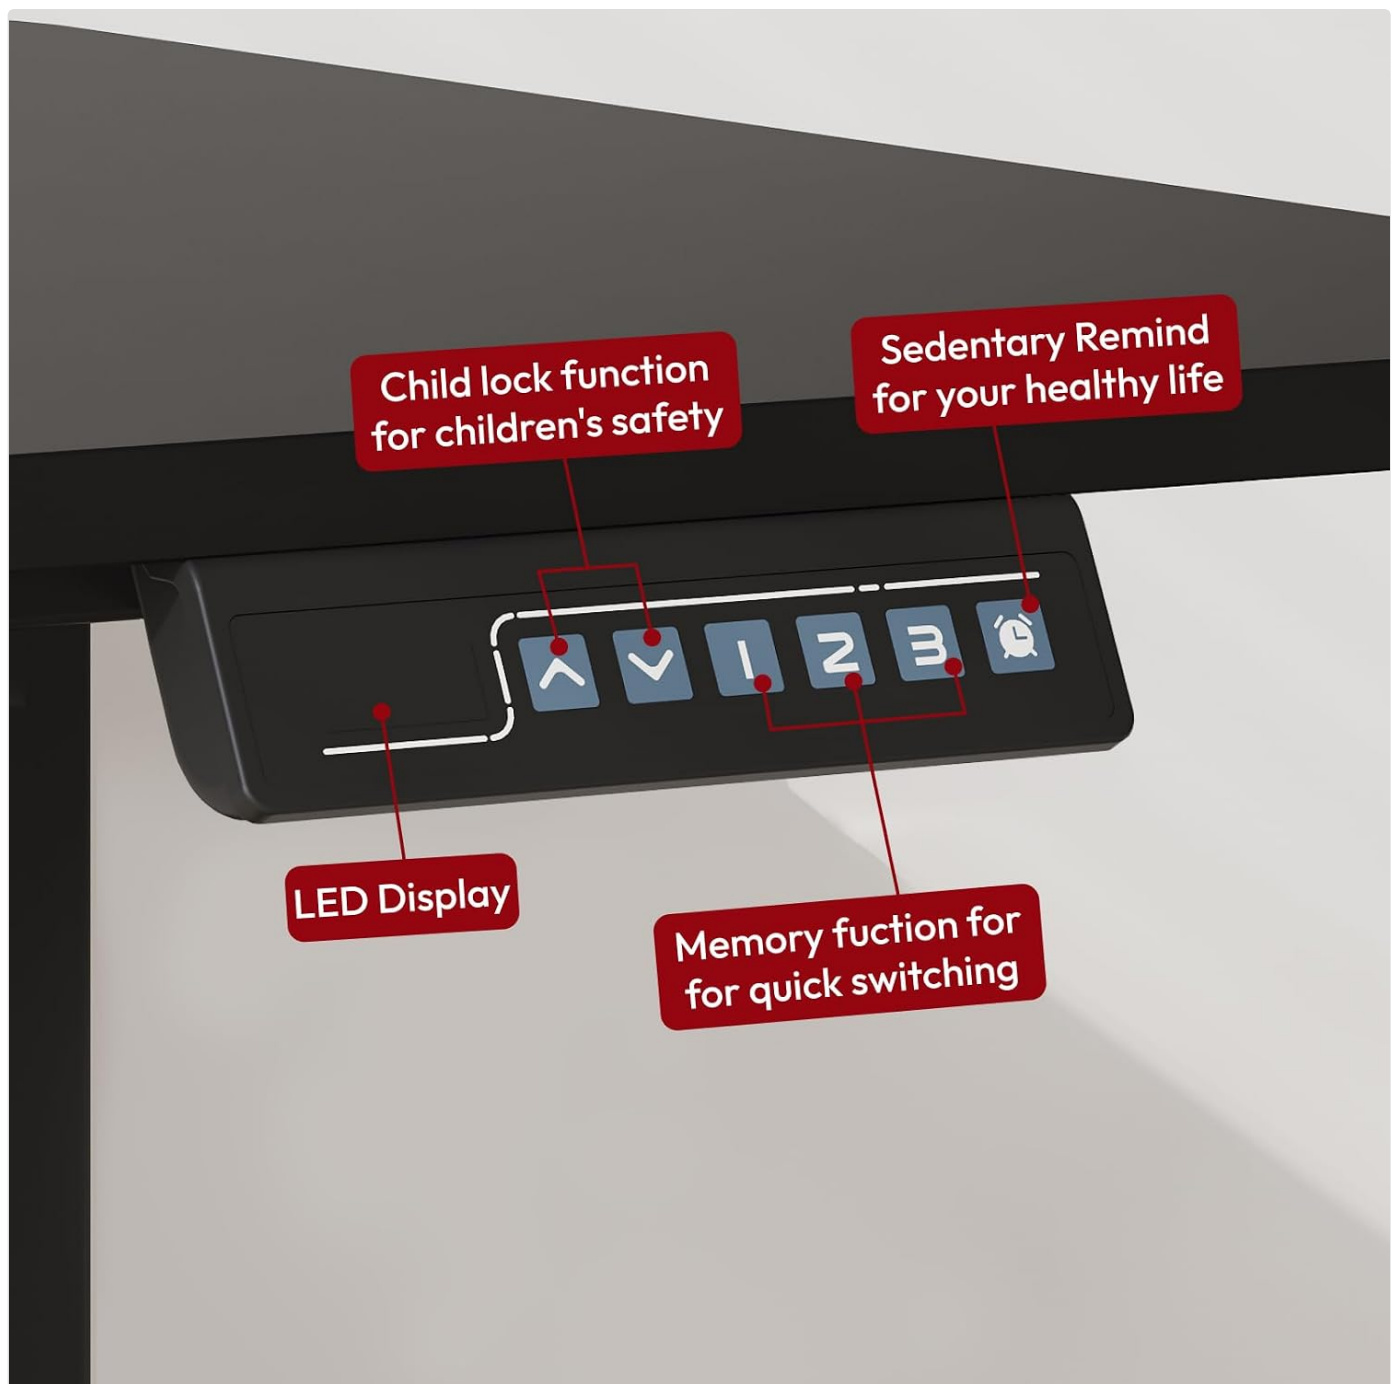


Image 4.2: The digital control panel, highlighting the LED display, memory buttons (1, 2, 3), child lock, and sedentary reminder functions.

- **LED Display:** Shows the current desk height in inches.
- **Memory Presets (1, 2, 3):**

To save a height: Adjust the desk to your desired height, then press the **M** button followed by the desired number button (1, 2, or 3). The display will show 'S-' then the number, indicating the height is saved.

To recall a height: Press the corresponding number button (1, 2, or 3). The desk will automatically move to the saved position.
- **Sedentary Reminder (Alarm Clock Icon):**

To activate: Press the alarm clock button. The display will show 'A-1' (or similar) indicating the reminder is set. The desk will beep after a set period (e.g., 45 minutes) to remind you to change positions.

To deactivate: Press the alarm clock button again.
- **Child Lock Function (Lock Icon):**

To activate: Press and hold the lock button for 3 seconds. The display will show 'LOC', and the desk will not respond to other button presses.

To deactivate: Press and hold the lock button for 3 seconds again. The display will show the current height, and the

desk will be operational.

## Anti-Collision Function:

The desk is equipped with an anti-collision system. If the desk encounters an obstruction while moving up or down, it will automatically stop and reverse slightly to prevent damage or injury.

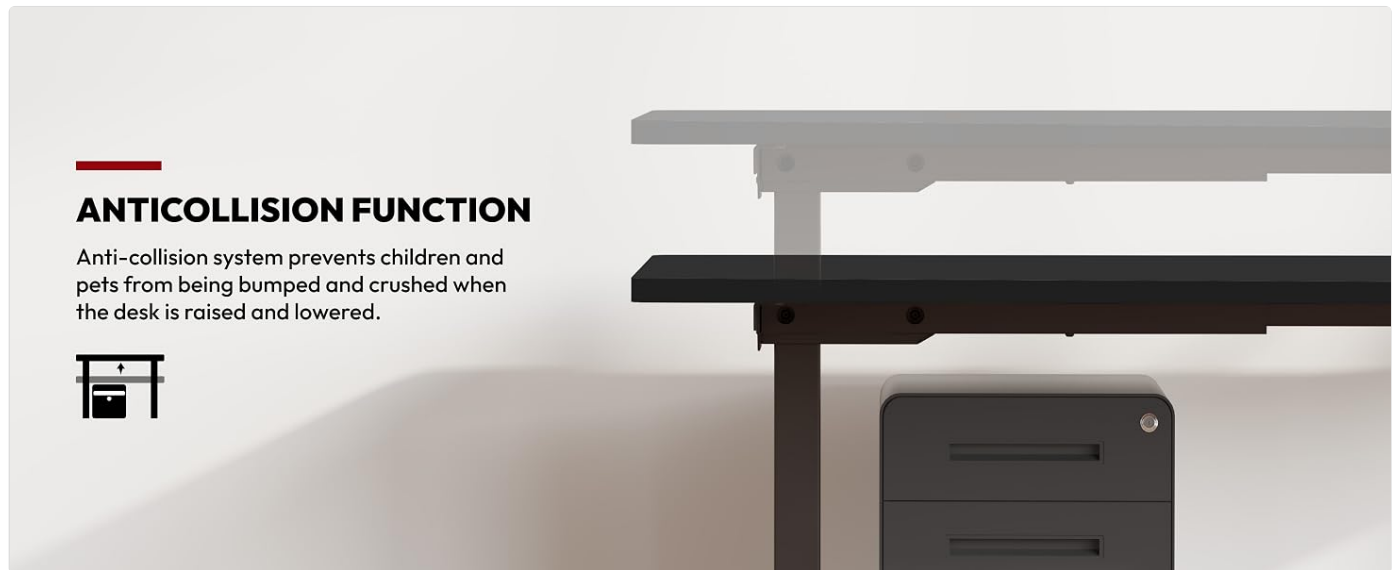


Image 4.3: The anti-collision system detects obstacles during height adjustment, stopping and reversing to prevent damage.

## 5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your SANODESK Electric Standing Desk.

### Cleaning:

- Wipe the desktop and frame with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- Ensure the desk is unplugged before cleaning electrical components.

### Regular Checks:

- Periodically check all screws and bolts to ensure they are tight. Retighten if necessary.
- Inspect cables for any signs of wear or damage.
- Ensure the desk is not overloaded. The maximum weight capacity is **176 pounds (80 kg)**.



Image 5.1: The desk's dimensions and maximum weight capacity of 176 lbs, highlighting important usage limits.

## Desktop Durability:

The desktop features rounded corners and is designed to be scratch-proof and waterproof, contributing to its longevity and ease of maintenance.

## 6. TROUBLESHOOTING

If you encounter issues with your SANODESK Electric Standing Desk, refer to the following common troubleshooting steps.

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                                       | Possible Cause                                            | Solution                                                                                                                                    |
|-----------------------------------------------|-----------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Desk does not move.                           | Power cable disconnected, child lock active, motor error. | Check power connection. Deactivate child lock (press and hold lock button for 3 seconds). Perform a reset (see below).                      |
| Display shows an error code (e.g., E01, E02). | Overload, motor overheating, sensor malfunction.          | Reduce weight on the desk. Unplug the desk for 20 minutes to allow motors to cool. Perform a reset. If the issue persists, contact support. |
| Desk moves unevenly.                          | Uneven weight distribution, loose connections.            | Ensure weight is evenly distributed. Check all frame connections and tighten screws. Perform a reset.                                       |
| Memory presets not working.                   | Presets not saved correctly.                              | Resave your desired heights (adjust to height, press M, then 1/2/3).                                                                        |

Reset Procedure:

If the desk is not functioning correctly, a reset may resolve the issue. Consult your detailed assembly manual for specific reset instructions. A common reset procedure involves:

- 1. Unplug the power cord from the wall outlet.
- 2. Wait for at least 30 seconds.
- 3. Plug the power cord back into the outlet.
- 4. Press and hold the **Down (▼)** button until the desk reaches its lowest position and slightly rebounds, then releases the button. This indicates a successful reset.

If the problem persists after attempting these solutions, please contact SANODESK customer support.

7. SPECIFICATIONS

| Feature                        | Specification                          |
|--------------------------------|----------------------------------------|
| Brand                          | SANODESK                               |
| Model                          | 79x32 Inch Electric Standing Desk      |
| Product Dimensions (D x W x H) | 32"D x 79"W x 29"H (at lowest setting) |
| Adjustable Height Range        | 28.7 inches - 48 inches                |
| Maximum Weight Capacity        | 176 Pounds (80 kg)                     |
| Desktop Material               | Wood (Splice Board)                    |
| Frame Material                 | Alloy Steel                            |
| Color                          | Black Frame + Black Top                |
| Noise Level                    | Less than 50 dB                        |

| Feature           | Specification                                           |
|-------------------|---------------------------------------------------------|
| Assembly Required | Yes (Assembly Instructions, Required Hardware included) |
| UPC               | 810072862037                                            |
| ASIN              | B0D2X8ZNPS                                              |

 
# DIMENSIONS



Desktop

Size: 79.0"\*32.0"

Wire Hole

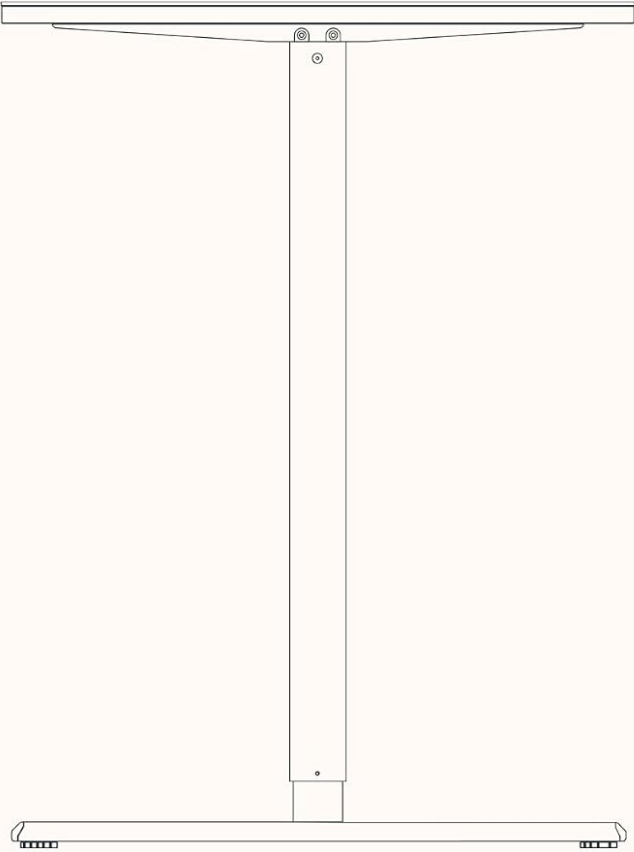

Desk Frame

Adjustable Height:  
28.7"-48.0"

Inverted Lifting Columns

2-Stage Leg

Image 7.1: Detailed technical drawing showing desktop size, adjustable height range, and frame components.

## **| Silent and stable operation**



Image 7.2: Illustration of the desk's quiet operation, maintaining a noise level below 50 decibels during adjustment.

## **8. WARRANTY INFORMATION**

The SANODESK Electric Standing Desk comes with a **Limited Warranty**. Specific terms and conditions of the warranty are provided with your purchase documentation. Please retain your proof of purchase for warranty claims.

The warranty typically covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, unauthorized modifications, or failure to follow assembly and operating instructions.

## **9. CUSTOMER SUPPORT**

For any questions, concerns, or assistance with your SANODESK Electric Standing Desk, please contact our customer support team.

- Refer to the contact information provided in your purchase documentation or on the official SANODESK website.
- When contacting support, please have your product model (79x32 Inch) and purchase details readily available.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0D2X8ZNPS>

More documents and user manuals: <https://manuals.plus/>