

[manuals.plus](#) /

› [EagleStone](#) /

› [EagleStone Automatic Realistic Toy Gun M416 Instruction Manual](#)

EagleStone D016

EagleStone Automatic Realistic Toy Gun M416 Instruction Manual

Model: D016

1. INTRODUCTION

This manual provides essential information for the safe and proper assembly, operation, and maintenance of your EagleStone Automatic Realistic Toy Gun M416. Please read all instructions carefully before use to ensure optimal performance and safety.

2. WHAT'S IN THE Box

Your package includes the following components:

- Electric Toy Gun (Main Body) x1
- Rechargeable Battery (7.4V 600 mAh) x1
- USB Charger x1
- 10-Dart Magazines x2
- Soft Foam Darts x150
- Electroplate Shells x30
- Adjustable 6X Sight x1
- Safety Goggles x1
- Front Anchor (Vertical Grip) x1
- Adjustable Rear Support (Stock) x1
- Tactical Clip x1
- Muzzle x1
- Guide Rail x1
- Front Sight x1
- Rear Sight x1

AUTOMATIC GUN TOY



Image: Overview of all included components for the EagleStone M416 toy gun.

3. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your toy gun:

- 1. Install the Sight:** Attach the adjustable 6X sight to the top rail of the gun.
- 2. Install the Rear Sight:** Secure the rear sight onto the designated slot at the back of the top rail.
- 3. Install the Front Sight:** Attach the front sight to the front section of the top rail.
- 4. Install the Grip:** Slide the vertical grip onto the bottom rail until it clicks into place.
- 5. Install the Gun Stock:** Attach the adjustable rear support (stock) to the back of the gun body.
- 6. Connect the Battery:** Connect the rechargeable battery wires to the corresponding wires inside the stock compartment. Secure the battery within the stock.
- 7. Insert the Magazine:** Load the prepared magazine into the magazine well until it locks securely.



Image: Visual guide for easy assembly of the EagleStone M416.

4. BATTERY INSTALLATION & CHARGING

The toy gun is powered by a 7.4V 600 mAh rechargeable Lithium Ion battery. To install, open the battery compartment located in the gun stock, connect the battery wires, and secure the battery. Use the provided USB charge cable to recharge the battery. A few hours of charging will provide several hours of play. The toy gun can also be operated manually without batteries by pulling back and firing.



Image: Rechargeable battery and its connection for the toy gun.

5. LOADING MAGAZINES

The toy gun comes with two 10-dart magazines. To load, insert the soft foam darts into the electroplate shells, ensuring they are fully seated. Then, load these prepared shells into the magazine. The transparent design of the magazines allows you to monitor the remaining ammunition.



Image: Transparent magazines loaded with darts and shells.

Video: Demonstration on how to load soft bullets into the toy gun's magazine.

6. OPERATING MODES

Your EagleStone M416 features three distinct shooting modes:

- **Full Auto:** Hold the trigger to fire multiple darts continuously.
- **Safe (Manual):** Engage this mode for a manual single-shot experience, requiring you to pull back the mechanism after each shot.
- **Semi-Auto:** Press the trigger once to fire a single dart.

To operate, select your desired mode using the switch, hold down the accelerator, and press the trigger to fire darts. The toy gun has a shooting range of up to 40-50 feet with accuracy. The unique shell ejection design simulates realistic battle scenarios, with empty shells ejecting from the barrel after each shot.

EMPTY SHELL EJECTING

Realistic shooting experience



Image: Empty shell ejection feature of the toy gun.

2 MODES BURST FOR MORE FUN



Image: Two modes of operation for the toy gun.

Video: Demonstration of the toy gun's firing function and shell ejection.

Video: Overview of the three electric and manual modes of the toy gun.

7. MAINTENANCE TIPS

- If the toy gun experiences a jam, immediately release the trigger and carefully remove the stuck shell.
- Avoid continuously holding the trigger if a jam occurs, as this can damage the internal bullet latch mechanism.
- Always ensure that darts are fully inserted into their shells and that shells are properly loaded into the magazine to prevent feeding issues.

8. SAFETY GUIDELINES

- Do not aim or fire the toy gun at people or animals.
- Always wear the provided safety goggles during play to protect your eyes.
- Use only the soft foam darts provided or approved by the manufacturer. Do not modify darts or use

other projectiles.

- Adult supervision is recommended, especially for younger users.
- Keep the toy gun away from sensitive areas like eyes and face.

9. SPECIFICATIONS

- **Product Dimensions:** 5 x 8 x 15 inches
- **Item Weight:** 3.3 pounds
- **Item Model Number:** D016
- **Manufacturer:** EagleStone
- **Recommended Age:** 6 years and up
- **Batteries:** 1 Lithium Ion battery required (included)

10. WARRANTY AND SUPPORT

For any questions, troubleshooting, or support regarding your EagleStone Automatic Realistic Toy Gun M416, please contact the manufacturer directly. Refer to the product packaging or the official EagleStone website for contact information and detailed warranty terms.