



Manuals.plus /

› YEEHAO /

› YEEHAO Kids Instant Print Camera User Manual

## YEEHAO DHC503

# YEEHAO Kids Instant Print Camera User Manual

Model: DHC503

Brand: YEEHAO

## 1. INTRODUCTION

Thank you for choosing the YEEHAO Kids Instant Print Camera. This camera is designed to provide a fun and educational photography experience for children aged 3-12. It combines the functionality of a digital camera, camcorder, and instant printer, allowing kids to capture memories and print them instantly without ink. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and enjoyment of your new camera.

## 2. WHAT'S IN THE BOX

Please verify that all items listed below are included in your package:

- 1 x Instant Camera
- 1 x 32GB TF Card
- 3 x Print Paper Rolls
- 6 x Color Pens
- 1 x Type-C Charge Cable
- 1 x Lanyard
- 1 x User Manual



Figure 2.1: Package Contents. The image displays the camera, thermal paper rolls, colored pens, charging cable, 32GB TF card, and lanyard.

### 3. PRODUCT OVERVIEW

#### 3.1. Camera Components



Figure 3.1: Key Features. This diagram illustrates the camera's intuitive interface, cost-effective thermal paper, ergonomic size, and dual output of physical prints and digital copies.

The YEEHAO Kids Instant Print Camera is designed with simplicity and durability in mind. Its compact yet robust build is suitable for young users.

### 3.2. Controls and Indicators

- **Power Button:** Located on the top, used to turn the camera on/off.
- **Shutter Button:** Used to take photos or start/stop video recording.
- **Navigation Buttons:** Up, Down, Left, Right, and OK button for menu navigation and selection.
- **Mode Button (M):** Switches between photo, video, and playback modes.
- **Print Button:** Initiates instant printing of the current photo.
- **Zoom Buttons (+/-):** Adjusts digital zoom (up to 16X).
- **LED Fill Light:** Provides illumination for low-light conditions.
- **Display Screen:** 2.4-inch LCD for viewing photos, videos, and menus.
- **Selfie Mirror:** Small mirror on the front for self-portraits.
- **Tripod Hole:** Located at the bottom for mounting on a tripod (not included).
- **Type-C Port:** For charging and data transfer.

- **TF Card Slot:** For memory card insertion.

## Best Novel Gift for Kids



Figure 3.2: Camera Controls and Features. This image highlights the screen, navigation buttons, print button, tripod mount, and selfie mirror.

## 4. SETUP

### 4.1. Charging the Camera

Before first use, fully charge the camera. Connect the included Type-C USB cable to the camera's Type-C port and the other end to a USB power adapter (not included) or a computer USB port. The charging indicator light will show the charging status. A full charge provides approximately 8 hours of continuous use.

# Print Anytime & DIY Fun Time



## How to Install Printer Paper?

01



Open the cover of the paper storage bin.

02



Load the paper with the smooth side facing down.

03



Leave part of the paper outside of the storage bin and close the cover.

Figure 4.1: Type-C Charging and USB Transfer. This image demonstrates how to charge the camera and transfer files to a computer using the Type-C cable.

## 4.2. Inserting the TF Card

The camera comes with a pre-installed 32GB TF card. If you need to remove or re-insert it, locate the TF card slot on the side of the camera. Gently push the card until it clicks into place. To remove, push it again until it springs out.

## 4.3. Loading Print Paper

The camera uses ink-free thermal paper for instant prints. Follow these steps to load the paper correctly:

1. Open the cover of the paper storage bin on the side of the camera.
2. Load the paper roll with the smooth side facing down. Ensure the paper feeds correctly into the mechanism.
3. Leave a small part of the paper outside of the storage bin and close the cover firmly.



Figure 4.2: Printer Paper Installation Steps. Images show opening the bin, inserting the paper smooth-side down, and closing the cover with paper protruding.

## 5. OPERATING INSTRUCTIONS

### 5.1. Power On/Off

Press and hold the Power Button for a few seconds to turn the camera on or off. The screen will display a welcome message upon startup.

### 5.2. Switching Modes

Press the **Mode Button (M)** to cycle through the available modes: Photo, Video, and Playback.

### 5.3. Taking Photos

In Photo mode, frame your shot using the display screen. Press the **Shutter Button** to capture a 12MP color digital photo.

### 5.4. Recording Videos

In Video mode, press the **Shutter Button** once to start recording 1080P HD video. Press it again to stop recording.

### 5.5. Instant Printing

After taking a photo, or while viewing a photo in Playback mode, press the **Print Button** to instantly print a black and white version of the image. Ensure sufficient paper is loaded.



Figure 5.1: Camera Capabilities. This image highlights the camera's 1080P video, 12MP photo, 16X digital zoom, and LED fill light features.

### 5.6. Digital Zoom and LED Fill Light

Use the **Zoom Buttons (+/-)** to apply up to 16X digital zoom in Photo or Video mode. The built-in LED Fill Light can be activated to improve image quality in low-light environments.

### 5.7. Creative Features

Explore various photo frames and filters available in the camera's settings to add a creative touch to your pictures. Use the navigation buttons to select and apply them.

## 5.8. Playback Function

In Playback mode, use the navigation buttons to browse through captured photos and videos. You can view, delete, or print images directly from this mode.

## 5.9. USB Transfer

Connect the camera to a computer using the provided Type-C cable to transfer photos and videos. The camera will appear as a removable disk drive on your computer.

Video 5.1: Instant Print Camera Features. This video demonstrates the various functions of the YEEHAO Kids Instant Print Camera, including photo, video, and instant printing capabilities.

## 6. MAINTENANCE

### 6.1. Cleaning

Use a soft, dry cloth to clean the camera body. For the lens and screen, use a microfiber cloth specifically designed for optics. Do not use liquid cleaners or abrasive materials.

### 6.2. Storage

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.

### 6.3. Battery Care

To maximize battery life, avoid fully discharging the camera frequently. Charge the camera regularly, especially if it has been stored for a long time. Printing is not supported when the battery is low or charging.

### 6.4. Paper Handling

Always handle thermal paper with clean hands. Store unused paper rolls in a dry place away from heat and light to prevent degradation. Ensure the smooth side of the paper faces down when loading for proper printing.

## 7. TROUBLESHOOTING

If you encounter issues with your YEEHAO Kids Instant Print Camera, please refer to the following common problems and solutions:

<b>Problem</b>	<b>Possible Cause / Solution</b>
Camera does not turn on.	Battery is depleted. Charge the camera fully using the provided Type-C cable.
Cannot print photos.	Paper loaded incorrectly (smooth side must face down). No paper in the compartment. Battery is low or charging (printing is disabled).
Printed photos are unclear or too light/dark.	Adjust the printing density in the camera settings according to light conditions. Ensure sufficient lighting when taking the photo. Thermal paper quality may vary or be old.
Camera freezes or is unresponsive.	Perform a soft reset by pressing the reset button (if available) or holding the power button until it turns off, then restart. Ensure the automatic shutdown function is set to prevent freezing from inactivity.
Cannot transfer files to computer.	Ensure you are using the included Type-C USB cable, as some cables may not support data transfer. Check computer's USB port and drivers.
Poor video or photo quality.	Ensure adequate lighting. Clean the camera lens. Avoid excessive digital zoom, which can reduce quality.

## 8. SPECIFICATIONS

Feature	Detail
Brand	YEEHAO
Model Name	DHC503
Maximum Webcam Image Resolution	12 MP
Video Resolution	1080p
Screen Size	2.4 Inches
Digital Zoom	16x
Memory Storage Capacity	32 GB (TF Card included)
Battery Type	Lithium Polymer
Battery Average Life	8 Hours
Connectivity Technology	USB (Type-C)
Image Stabilization	Digital
Supported File Format	JPEG (Photos), AVI (Videos)
Item Weight	0.9 Pounds
Dimensions (LxWxH)	2.16"D x 4.72"W x 3.74"H
Special Features	Instant Print, LED Fill Light, Selfie Mirror, No Games, Multiple Frames/Filters

## 9. WARRANTY AND SUPPORT

### 9.1. Product Warranty

The YEEHAO Kids Instant Print Camera comes with a **1-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

### 9.2. Extended Protection Plans

Extended protection plans may be available for purchase to provide additional coverage beyond the standard manufacturer's warranty. Please refer to your retailer for details on available plans.

- 2-Year Protection Plan: Available for \$3.99
- 3-Year Protection Plan: Available for \$5.99
- Complete Protect: Monthly plan for \$16.99/month (renews until cancelled)

### 9.3. Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact YEEHAO customer support. You can find more information and contact details by visiting the official YEEHAO Store on Amazon: [YEEHAO Store](#).

