

[Manuals.plus](#) /

> [ANDYCINE](#) /

> ANDYCINE Quick Release Plate A-QRP-04 Instruction Manual

ANDYCINE A-QRP-04

ANDYCINE Quick Release Plate A-QRP-04 Instruction Manual

Model: A-QRP-04

PRODUCT OVERVIEW

The ANDYCINE Quick Release Plate A-QRP-04 is designed to provide seamless and rapid attachment and detachment of various camera accessories. Constructed from durable aluminum and stainless steel, it features a precision-engineered, black anodized finish for corrosion and abrasion resistance. This plate is ideal for connecting LCD monitors, magic arms, LED lights, flashes, and other equipment to your camera rig or support system.



Image 1: Top view of the ANDYCINE Quick Release Plate, showing its compact design and screw holes.



Image 2: Bottom view of the ANDYCINE Quick Release Plate, highlighting the 1/4-inch screw for attachment.

Key Features:

- **Seamless Connectivity:** Originally designed for LCD monitors and friction articulating arms.
- **Durable Construction:** Made from aluminum and stainless steel, with a black anodized finish.
- **Versatile Attachment:** Equipped with two 1/4"-20 screws for various accessories.
- **Dual Plate System:** Includes one plate for monitors and another for magic arms, tripods, or camera lenses.
- **Secure Locking:** Features a red locking knob for secure fastening and quick release.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- Quick Release Plate Assembly (Base and Top Plate)
- 1/4"-20 Screws (Quantity: 2)
- Hex Key (for screw installation)
- Rubber Washer (Quantity: 1)



Image 3: All components included in the package: the quick release plate, two screws, a hex key, and a rubber washer.

SETUP INSTRUCTIONS

Follow these steps to properly set up your ANDYCINE Quick Release Plate:

1. **Identify Components:** Separate the quick release base from the top plate by pressing the red locking knob and sliding the top plate off.
2. **Attach Base Plate:** Secure the base plate to your desired mounting point (e.g., magic arm, tripod, camera cage) using one of the provided 1/4"-20 screws. Use the hex key to tighten the screw firmly. Ensure the rubber washer is placed between the base plate and the mounting surface for added grip and protection.



Image 4: The base plate of the quick release system attached to a magic arm, ready for an accessory.

3. **Attach Top Plate to Accessory:** Mount your accessory (e.g., camera monitor, LED light) to the top plate using the other 1/4"-20 screw. Tighten securely with the hex key.



Image 5: A camera monitor securely attached to the top plate, which is then mounted onto a magic arm via the quick release base.

OPERATING INSTRUCTIONS

The quick release plate allows for fast and secure attachment and detachment of your equipment.

1. **Attaching the Accessory:** Align the top plate (with your accessory attached) with the base plate. Slide the top plate into the base plate until you hear a click and the red locking knob automatically engages, securing the connection.
2. **Detaching the Accessory:** To remove the accessory, press the red locking knob firmly. While holding the knob, slide the top plate out of the base plate.



Image 6: Illustration of the red locking knob, indicating the "Unlock" and "Lock" positions for the quick release mechanism.

Always ensure the red locking knob is fully engaged after attaching an accessory to prevent accidental detachment.

MAINTENANCE

To ensure the longevity and optimal performance of your quick release plate, follow these maintenance guidelines:

- **Cleaning:** Wipe the plate with a soft, dry cloth to remove dust and debris. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws and connections for tightness. Ensure the locking mechanism operates smoothly.
- **Storage:** Store the quick release plate in a dry, clean environment when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Accessory feels loose after attachment.	Top plate not fully engaged or screws are loose.	Ensure the top plate is fully slid into the base until the red knob clicks. Tighten all 1/4"-20 screws on both plates.
Difficulty detaching the top plate.	Red locking knob not fully depressed or mechanism is stiff.	Press the red locking knob firmly and slide the plate out. If stiff, ensure no debris is obstructing the mechanism.

Problem	Possible Cause	Solution
Screws do not tighten securely.	Incorrect screw size or stripped threads.	Verify you are using the correct 1/4"-20 screws. If threads are stripped, contact customer support.

SPECIFICATIONS

Model Number	A-QRP-04
Brand	ANDYCINE
Material	Aluminum, Stainless Steel
Item Weight	10.6 ounces (0.3 Kilograms)
Package Dimensions	5.91 x 3.15 x 0.79 inches
Screw Type	1/4"-20
Included Components	Quick release plate, 2x 1/4"-20 screws, Hex key, Rubber washer

WARRANTY INFORMATION

This ANDYCINE Quick Release Plate A-QRP-04 comes with a **1-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the official ANDYCINE website or contact customer support.

CUSTOMER SUPPORT

For any questions, technical assistance, or support regarding your ANDYCINE Quick Release Plate, please contact ANDYCINE customer service through their official website or the retailer where the product was purchased.
ANDYCINE Official Store: [Visit the ANDYCINE Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question