

[Manuals.plus](#) /

› [VOWNER](#) /

› VOWNER Rattan TV Stand (Model VOWNER-285) Instruction Manual

VOWNER VOWNER-285

VOWNER Rattan TV Stand Instruction Manual

Model: VOWNER-285

INTRODUCTION

Thank you for purchasing the VOWNER Rattan TV Stand, Model VOWNER-285. This manual provides essential information for the safe assembly, operation, and maintenance of your new TV stand. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image: The VOWNER Rattan TV Stand, Model VOWNER-285, displayed in a modern living room with a television and media devices.

SAFETY INFORMATION

- Always assemble the product according to the provided instructions.
- Ensure the product is stable and secure before use.
- Keep fingers and other body parts away from moving parts during assembly.
- Do not exceed the weight limit of the product to prevent accidents. The countertop can hold up to 150 pounds.
- This TV stand is designed for televisions up to 55 inches.

SPECIFICATIONS

Brand	VOWNER
-------	--------

Model Name	VOWNER Rattan TV Stand
Item Model Number	VOWNER-285
Product Dimensions	15"D x 47.2"W x 25"H
Material	Engineered Wood
Color	Natural
Item Weight	60.5 Pounds
Mounting Type	Floor Mount, Freestanding
Number of Shelves	3 (2 adjustable inside cabinets, 1 open top)
Special Feature	Scratch Resistant, Adjustable Shelf



Image: Detailed dimensions of the TV stand, including overall width (47.2"), depth (15"), height (25"), and internal shelf measurements.

SETUP

Assembly of the VOWNER Rattan TV Stand requires careful attention to detail. All necessary accessories and detailed assembly instructions are included in the product packaging. Please follow these general steps:

- Unpack Components:** Carefully remove all parts from the packaging. Verify that all components and hardware listed in the included manual are present.
- Identify Parts:** Familiarize yourself with each part by comparing them to the diagrams in the assembly guide.
- Assemble Frame:** Begin by assembling the main frame of the TV stand, ensuring all connections are secure.
- Attach Legs:** Securely attach the four angled wooden legs and the additional mid-leg for support.
- Install Shelves:** Insert the adjustable shelves into the cabinets. The height can be customized to fit your items.
- Mount Doors:** Attach the rattan-decorated doors using the soft-close hinges and install the metal handles.
- Final Check:** Once assembled, ensure all screws are tightened and the stand is stable.



Image: The TV stand with its cabinet doors open, highlighting the adjustable shelves inside, which can be positioned at different heights.



Solid Legs

Soft Close Hinge



Metal Handles



Image: Detailed views of the TV stand's construction, including the solid wooden legs, soft-close door hinges, and elegant metal handles.

OPERATING

The VOWNER Rattan TV Stand is designed for practical use in your living space.

- **Placement:** Position the TV stand on a flat, level surface to ensure stability.
- **Television Placement:** Place your television on the top surface. Ensure the TV base fits within the stand's dimensions and does not exceed the 150-pound weight capacity. While the product title mentions 'for 55 Inch', one image indicates 'Fits TVs up to 50"'. Please verify your TV's base dimensions and weight for compatibility.
- **Storage:** Utilize the two open storage shelves for media devices such as a TV box or DVD player. The two cabinets with adjustable shelves provide concealed storage for other items.
- **Cable Management:** Use the cable holes located on the back panel to organize and route power cords and signal cables neatly, reducing clutter.



Image: A visual guide demonstrating that the TV stand is suitable for televisions up to 50 inches, with outlines for 32", 42", and 50" TVs.

MAINTENANCE

To ensure the longevity and appearance of your VOWNER Rattan TV Stand, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the engineered wood and rattan finish.
- **Dusting:** Regularly dust the stand with a dry, soft cloth to prevent buildup.
- **Spills:** Immediately clean up any spills to prevent staining or damage to the wood.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure, which can cause fading or discoloration of the wood and rattan.
- **Humidity:** Maintain a stable humidity level in the room to prevent warping or cracking of the wood.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

If you encounter any issues with your VOWNER Rattan TV Stand, consider the following common solutions:

- **Instability:** If the stand feels wobbly, ensure it is placed on a level surface. Check all assembly screws and tighten them securely.
- **Doors Not Closing Properly:** Verify that the hinges are correctly installed and adjusted. Ensure no items inside the cabinet are obstructing the door's path.
- **Damaged Parts:** If any part arrives damaged or breaks during assembly, do not attempt to force it. Contact customer support for replacement parts.
- **Missing Hardware:** If you find any hardware missing, refer to the included parts list and contact customer support for assistance.

WARRANTY & SUPPORT

VOWNER is committed to providing quality products. While specific warranty details are not provided in this manual, if you have any questions, concerns, or require assistance with your VOWNER Rattan TV Stand, please feel free to contact us. Our customer support team is available to provide you with a solution. Please refer to your purchase documentation or the VOWNER brand store on Amazon for contact information and further details regarding product support and warranty policies.

[Visit the VOWNER Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D2Z1XPM3>

More documents and user manuals: <https://manuals.plus/>