

Toozezy B7

Toozezy Quiet Dog Clippers

Model B7 User Manual

INTRODUCTION

Thank you for choosing the Toozezy Quiet Dog Clippers, Model B7. This professional-grade pet grooming tool is designed for efficient and quiet trimming of various pet hair types. Featuring a powerful motor, durable battery, and versatile comb attachments, it provides a smooth and stress-free grooming experience for your beloved pets. Please read this manual carefully before use to ensure proper operation, maintenance, and safety.

SAFETY INFORMATION

Please observe the following safety precautions:

- Use this product with caution when near the face and eyes of your pet.
- Keep small parts away from children and pets to prevent choking hazards.
- Clean the device thoroughly after each use to maintain hygiene and performance.
- Ensure appropriate age restrictions and supervision are in place during use, especially for beginners.
- Do not use the clipper if the blades are damaged or bent.
- Avoid exposing the device to water or excessive moisture, except for the washable blade head.

WHAT'S IN THE BOX

Your Toozezy Quiet Dog Clippers package includes:

- 1 x Toozezy Pet Hair Clipper
- 1 x Cleaning Brush
- 6 x Comb Attachments (3mm, 6mm, 9mm, 12mm, 15mm, 18mm)
- 1 x Comb
- 1 x Scissor
- 1 x Lubricant Oil
- 1 x Charger (USB cable)
- 1 x User Manual



Image: Contents of the Toozey Quiet Dog Clippers package, including the clipper, various comb attachments, scissors, comb, cleaning brush, lubricant, and charging cable.

SETUP AND CHARGING

1. **Initial Charge:** Fully charge the battery before using the clipper for the first time. The 2000 mAh Lithium-Ion battery provides 3-4 hours of continuous operation after a 3-hour charge.

2. **Connect Charger:** Connect the provided USB charging cable to the clipper and a suitable power adapter (not included).
3. **Monitor Charge:** The LCD display will show the charging status and remaining power percentage.



Toozey

33-Zahn-Keramikklinge
Effizienter,
sauberer

3-Gang-Drehzahl
• 6500 RPM
• 7000 RPM
• 7500 RPM

**2000mAh
Lithium-Akku**
Betriebszeit
3,5 Stunden

LCD-Bildschirm

SONSTIGES

22-Zahn-Keramikklinge
Leicht
eingeklemmt

**Nur 1-Geschwindigkeit
RPM
5500 RPM**

**1200mAh
Akku**

**Lad
Estandsanzeige**

Image: Close-up of the Toozey clipper's LCD display, indicating battery percentage and available time, along with lubrication and charging warnings.

6 LEITKÄMME

Erfüllen die verschiedenen Frisur Bedürfnisse



Image: Diagram showing the internal 2000mAh Lithium-Ion battery of the Toozey clipper, highlighting its long-lasting power.

OPERATING INSTRUCTIONS

1. **Prepare Your Pet:** Ensure your pet's fur is clean, dry, and free of tangles. Use the included comb to detangle the fur before clipping.
2. **Select Comb Attachment:** Choose the desired cutting length using one of the 6 guide combs (3mm, 6mm, 9mm, 12mm, 15mm, 18mm). Snap the comb securely onto the clipper blade. The clipper also features 5 adjustable hair

volume trim modes (0.8mm, 1.1mm, 1.4mm, 1.7mm, 2.0mm) by rotating the collar below the blade.

3. **Power On and Adjust Speed:** Press the power button to turn on the clipper. Use the speed adjustment buttons to select one of the three speeds:
 - **6500 RPM:** For sensitive areas or pets.
 - **7000 RPM:** For fine trimming at medium speed.
 - **7500 RPM:** For fast and efficient trimming.
4. **Begin Trimming:** Gently guide the clipper through your pet's fur in the direction of hair growth. Maintain a steady, even pressure. For first-time users or anxious pets, reward them with a snack to create a positive association.
5. **Use Scissors and Comb:** For areas requiring precision or to smooth out fur, use the included comb and scissors.
6. **Monitor Display:** The LCD display provides real-time information on RPM gear, battery percentage, and warnings for lubrication and charging.

LANGLEBIGE BATTERIE

 
2000mAh Lithium-Ionen

Arbeitszeiten 3,5 Stunden

 


Image: A person using the Tooze clipper on a dog, demonstrating the grooming process with the attached guide comb.

5-HAAR VOLUMEN TRIMM-MODI

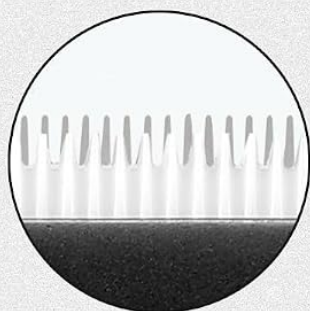

0.8mm

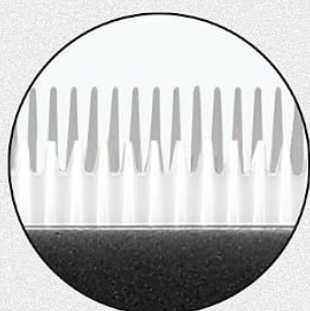

2.0mm

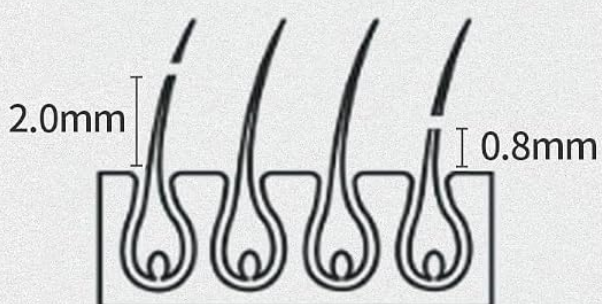 


Image: The Toozey clipper shown with its six different guide comb attachments (3mm, 6mm, 9mm, 12mm, 15mm, 18mm) for varying hair lengths.



Image: A close-up of the Toozey clipper's blade showing the 5-hair volume trim modes (0.8mm to 2.0mm) for precise length adjustments.

MAINTENANCE

1. Cleaning After Each Use:

- Turn off the clipper and remove the comb attachment.
- Use the cleaning brush to remove any trapped hair from the blade and clipper body.
- The blade head is detachable and washable. Rinse the blade head under running water. Ensure it is

completely dry before reattaching.

- 2. **Lubrication:** Apply a few drops of the included lubricant oil to the blades after each cleaning, especially if the clipper feels sluggish or noisy. This ensures smooth operation and extends blade life. The LCD display will show a lubrication warning when needed.
- 3. **Storage:** Store the clipper and its accessories in a clean, dry place, away from direct sunlight and extreme temperatures.



Image: The detachable and washable blade head of the Toozey clipper, shown with water droplets, indicating ease of cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper not turning on.	Battery is low or depleted.	Charge the clipper fully.
Clipper is noisy or sluggish.	Blades are dirty or not lubricated.	Clean the blades and apply lubricant oil.
Hair is getting caught or pulled.	Blades are dull, dirty, or fur is tangled.	Clean blades, ensure fur is detangled, consider replacing blades if dull.
Clipper not holding charge.	Battery degradation or faulty charger.	Ensure correct charger is used. If issue persists, contact customer support.

SPECIFICATIONS

- **Model Name:** Leise Hundeschermaschin (Quiet Dog Clippers)
- **Model Number:** B7
- **Motor Speed:** 3-speed adjustable (6500 RPM, 7000 RPM, 7500 RPM)
- **Blade Material:** Titanium-Ceramic (33-tooth detachable ceramic blades)
- **Battery Type:** 2000 mAh Lithium-Ion
- **Run Time:** 3-4 hours (approx. 3.5 hours)
- **Charge Time:** 3 hours
- **Power Source:** Battery Powered
- **Dimensions:** 25.4 x 17.6 x 5.8 cm (Packaging); Clipper: 190mm (Length) x 46mm (Blade Width)
- **Weight:** 560 grams (Packaging)
- **Origin:** China

Toozey

**33-Zahn-
Keramikklinge**

Effizienter,
sauberer

**3-Gang-
Drehzahl**

- 6500 RPM
- 7000 RPM
- 7500 RPM

**2000mAh
Lithium-Akku**

Betriebszeit
3,5 Stunden

LCD-Bildschirm

SONSTIGES

**22-Zahn-
Keramikklinge**

Leicht
eingeklemmt

**Nur 1-
Geschwindigkeit
RPM**
5500 RPM

**1200mAh
Akku**

**Lad
Estandsanzeige**



Image: A comparison graphic highlighting the Toozey clipper's features like 33-tooth ceramic blade, 3-speed motor (up to 7500 RPM), 2000mAh battery, and LCD display, compared to generic clippers.

LCD VISUELLE ANZEIGE

Mehr Übersichtlichkeit für Ihre Bedürfnisse

RPM-Gang
-Anzeige

Prozentsatz
der Batterie

Schmiermittelzusatz-
Warnung

Ladewarnung



Image: A detailed view of the Toozey clipper's 33-tooth ceramic blade, emphasizing its design for smooth and safe cutting without hair jamming.

 
LEISTUNGSSTÄRKER UND EFFIZIENTER

6500/7000/7500RPM

 


Image: An illustration showing the powerful motor of the Toozey clipper, capable of 6500/7000/7500 RPM for efficient grooming.

5-HAAR VOLUMEN TRIMM-MODI

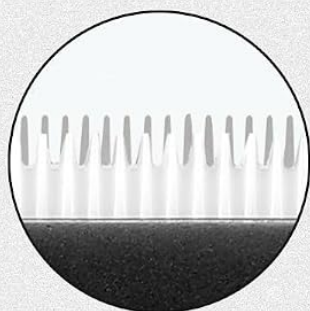

0.8mm

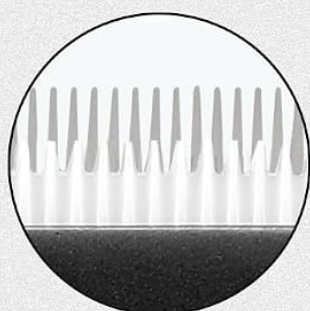

2.0mm

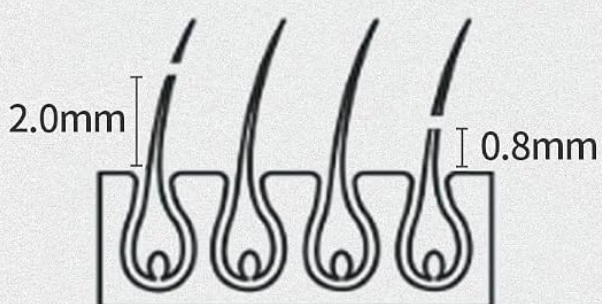 


Image: The Toozey clipper shown with its six different guide comb attachments (3mm, 6mm, 9mm, 12mm, 15mm, 18mm) for varying hair lengths.



Image: A close-up of the Toozey clipper's blade showing the 5-hair volume trim modes (0.8mm to 2.0mm) for precise length adjustments.

33-ZAHN- KERAMIKKLINGE

Kein Verklemmen der Haare, schneller und sicherer



Image: Dimensions of the Toozey clipper, showing its length (190mm) and blade width (46mm).

WARRANTY AND SUPPORT

Toozey products are manufactured with high quality standards. While specific warranty details are not provided in this manual, please retain your proof of purchase. For any product inquiries, technical support, or warranty claims, please contact the seller or visit the official Toozey brand store on Amazon:

[Visit the Toozey Store](#)

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question