

[Manuals.plus](#) /

› [Lafocuse](#) /

› Lafocuse 12-Inch Waterproof Outdoor Wall Clock with Thermometer and Hygrometer (Model ZH0133A)

Lafocuse ZH0133A

Lafocuse 12-Inch Waterproof Outdoor Wall Clock with Thermometer and Hygrometer

Model: ZH0133A

INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your new Lafocuse 12-inch Waterproof Outdoor Wall Clock. This clock features an integrated thermometer and hygrometer, a silent quartz movement, and is designed for both indoor and outdoor use.

KEY FEATURES

- **Waterproof Design:** Constructed from high-quality waterproof materials with a sealed dial for stable operation in various outdoor environments. Suitable for covered outdoor walls.
- **Integrated Thermometer & Hygrometer:** Displays temperature from -30°F to 130°F (measurement inaccurate below 14°F) and humidity from 0% to 100% RH. Allow several minutes for accurate readings after relocation. (Temperature error: $\pm 2^{\circ}\text{C}$. Humidity error: $\pm 8\%$)
- **Vintage Aesthetic:** Features a distressed bronze frame, classic black clock hands, and Arabic numerals on a white dial for a farmhouse and antique appearance.
- **Accurate Timekeeping:** Equipped with a precise quartz movement for accurate time display. Requires one AA battery (not included).
- **Versatile Application:** With a 12-inch (30 cm) diameter, it is suitable for gardens, patios, porches, balconies, garages, swimming pools, bathrooms, living rooms, kitchens, dining rooms, and bedrooms.
- **3-Year Movement Assurance:** The clock movement is covered by a 3-year assurance period for quality issues.

WHAT'S INCLUDED

Upon unpacking, please ensure all items are present:

- 1 x Lafocuse 12-Inch Waterproof Outdoor Wall Clock with Thermometer and Hygrometer

- 1 x Instruction Manual

Note: 1 AA battery is required for operation and is not included.



Image: The LaFocuse 12-inch waterproof outdoor wall clock, featuring a bronze frame, white dial, and integrated thermometer and hygrometer.


SETUP INSTRUCTIONS

1. Battery Installation


1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.



Easy-to-read numbers

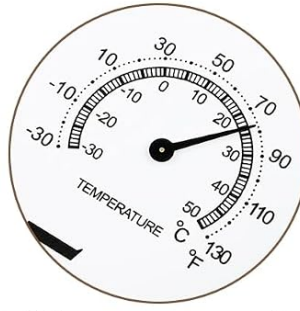

With thermometer

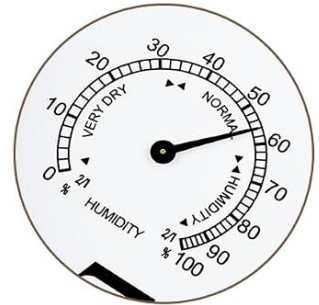

With hygrometer



Silent clock movement

Image: The rear view of the clock, highlighting the battery compartment and the silent quartz movement.

2. Setting the Time

1. Locate the time setting knob on the back of the clock, usually near the battery compartment.
2. Rotate the knob clockwise or counter-clockwise to set the correct time.
3. Ensure the minute and hour hands are correctly aligned.

3. Mounting the Clock

1. Choose a suitable location for your clock. For outdoor use, it is recommended to hang it on a roofed outdoor wall to maximize longevity and protection from extreme weather.
2. Securely install a nail or screw into the wall at the desired height.
3. Hang the clock using the integrated hanging slot on the back. Ensure it is stable and level.



Image: The clock mounted on an outdoor wooden wall, demonstrating its suitable placement.

OPERATING INSTRUCTIONS

Reading the Time

The clock displays time using traditional analog hour, minute, and second hands. The silent quartz movement ensures no ticking sound.

Reading Temperature and Humidity

The integrated thermometer and hygrometer gauges are located on the clock face:

- The thermometer displays temperature in Fahrenheit (°F).
- The hygrometer displays relative humidity (RH) as a percentage.

Allow several minutes for the thermometer and hygrometer to adjust and display accurate readings after the clock is moved to a new environment.



Image: A detailed view of the clock face, clearly showing the thermometer and hygrometer dials with their respective scales.

MAINTENANCE

Cleaning

- Wipe the clock surface with a soft, dry cloth.
- Avoid using abrasive cleaners or solvents, as these may damage the finish or the waterproof seal.

Battery Replacement

- Replace the AA battery annually or when the clock hands stop moving.
- Follow the battery installation steps outlined in the Setup section.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working / hands not moving.	Battery is dead or incorrectly installed.	Replace the AA battery, ensuring correct polarity (+/-).
Time is inaccurate.	Battery is low.	Replace the AA battery.
Thermometer/Hygrometer readings are inaccurate.	Recently moved the clock; not enough time to adjust.	Allow several minutes (up to 30 minutes) for the gauges to stabilize in the new environment. Note specified error margins.
Water inside the clock (despite being waterproof).	Exposure to direct, heavy rain or submersion.	The clock is designed for waterproof use but should ideally be hung on a roofed outdoor wall to prevent direct exposure to extreme weather conditions. Contact support if the issue persists under recommended usage.

SPECIFICATIONS

Feature	Detail
Brand	Lafocuse
Model Number	ZH0133A
Color	Bronze
Display Type	Analog
Style	Antique, Farmhouse
Special Features	Outdoor/Indoor, Silent non-ticking, Waterproof, Thermometer, Hygrometer
Product Dimensions	12"W x 12"H (Diameter: 30 cm)
Power Source	Battery Powered (1 AA battery required, not included)
Room Type	Kitchen, Patio, Garden, Porch, Garage, Bathroom, Living Room, Dining Room, Bedroom, Pool
Shape	Round
Indoor/Outdoor Usage	Indoor, Outdoor
Mounting Type	Wall Mount
Watch Movement	Quartz
Material Type	Plastic
Frame Material	Plastic

PRODUCT VIDEOS

Waterproof Wall Clock Overview

Your browser does not support the video tag.

Video: This video demonstrates the waterproof capabilities and overall design of the Lafocuse outdoor wall clock.

Outdoor Wall Clock Features

Your browser does not support the video tag.

Video: This video showcases the clock's features, including the thermometer and hygrometer, and its suitability for outdoor environments.

WARRANTY AND SUPPORT

Warranty Information

Your Lafocuse wall clock comes with a **3-Year Movement Assurance**. If the clock movement experiences any quality problems within 3 years from the date of purchase, please contact us for a solution.

Customer Support

For any questions, concerns, or support needs, please contact Lafocuse customer service. You can visit the official [Lafocuse Store on Amazon](#) for more information or to reach out to the seller, Quarebest.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question