

[Manuals.plus](#) /

› [Andoer](#) /

› Andoer Mini Compact Digital Camera User Manual

Andoer ded11659-e9f8-4b07-a44a-8be1159f3ded

Andoer Mini Compact Digital Camera User Manual

Model: ded11659-e9f8-4b07-a44a-8be1159f3ded

1. INTRODUCTION

This manual provides comprehensive instructions for the Andoer Mini Compact Digital Camera. This portable device is designed for capturing 1080P photos and videos, featuring a built-in LCD screen, flash, and rechargeable battery. It is suitable for beginners and casual users seeking a simple and functional camera.



Image: The Andoer Mini Compact Digital Camera, demonstrating its compact size when held in a hand.

2. WHAT'S IN THE BOX

Upon opening the package, verify that all components are present:

- Camera Body
- Accessories (e.g., USB charging cable, strap)

3. PRODUCT FEATURES

The Andoer Mini Compact Digital Camera offers the following key features:

- Super mini size, with a net weight of only 18g, ensuring portability.
- Capable of capturing both still images and 1080P videos.
- Integrated LCD screen for direct viewing of photos and videos.
- Built-in flash for improved low-light photography.
- Includes 5 filter effects for creative photo enhancements.
- Built-in rechargeable battery, chargeable via the included USB cable.

4. SETUP

4.1 Charging the Battery

The camera is equipped with a built-in rechargeable lithium-ion battery. Before initial use, fully charge the battery.

1. Locate the USB charging port on the camera.
2. Connect one end of the provided USB charging cable to the camera's port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., computer USB port, USB wall adapter).
4. The charging indicator light will illuminate during charging and typically turn off or change color when fully charged.

Built-in Rechargeable Battery

Long working time and can be recharged via USB interface



Image: Illustration of the camera's built-in rechargeable battery and the location of the USB charging port.

4.2 Inserting a Micro SD Card

A Micro SD card (not included) is required to store photos and videos. The camera supports Micro SD cards.

1. Locate the Micro SD card slot on the camera, usually on the side or bottom.
2. Insert the Micro SD card with the metal contacts facing downwards (or as indicated by a diagram near the slot) until it clicks into place.
3. To remove the card, gently push it in until it springs out.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the power button (typically located on the top or side) for a few seconds to turn the camera on or off.

5.2 Taking Photos

1. Ensure the camera is in photo mode. This is usually indicated by an icon on the LCD screen.
2. Frame your desired shot using the LCD screen.
3. Press the shutter button (usually a larger button on the top) to capture the photo.



Image: The camera's rear view, highlighting the LCD screen for framing and reviewing shots.

5.3 Recording Videos

1. Switch the camera to video recording mode.
2. Press the record button (often marked with a red dot or video camera icon) to begin recording.
3. Press the record button again to stop recording. The camera records videos in 1080P resolution.

5.4 Using the Built-in Flash

The camera features a built-in flash to assist in low-light conditions.

- Access the camera's menu or dedicated flash button to cycle through flash modes (e.g., Auto Flash, Fill Flash, Flash Off).
- Select the appropriate mode based on your lighting environment.

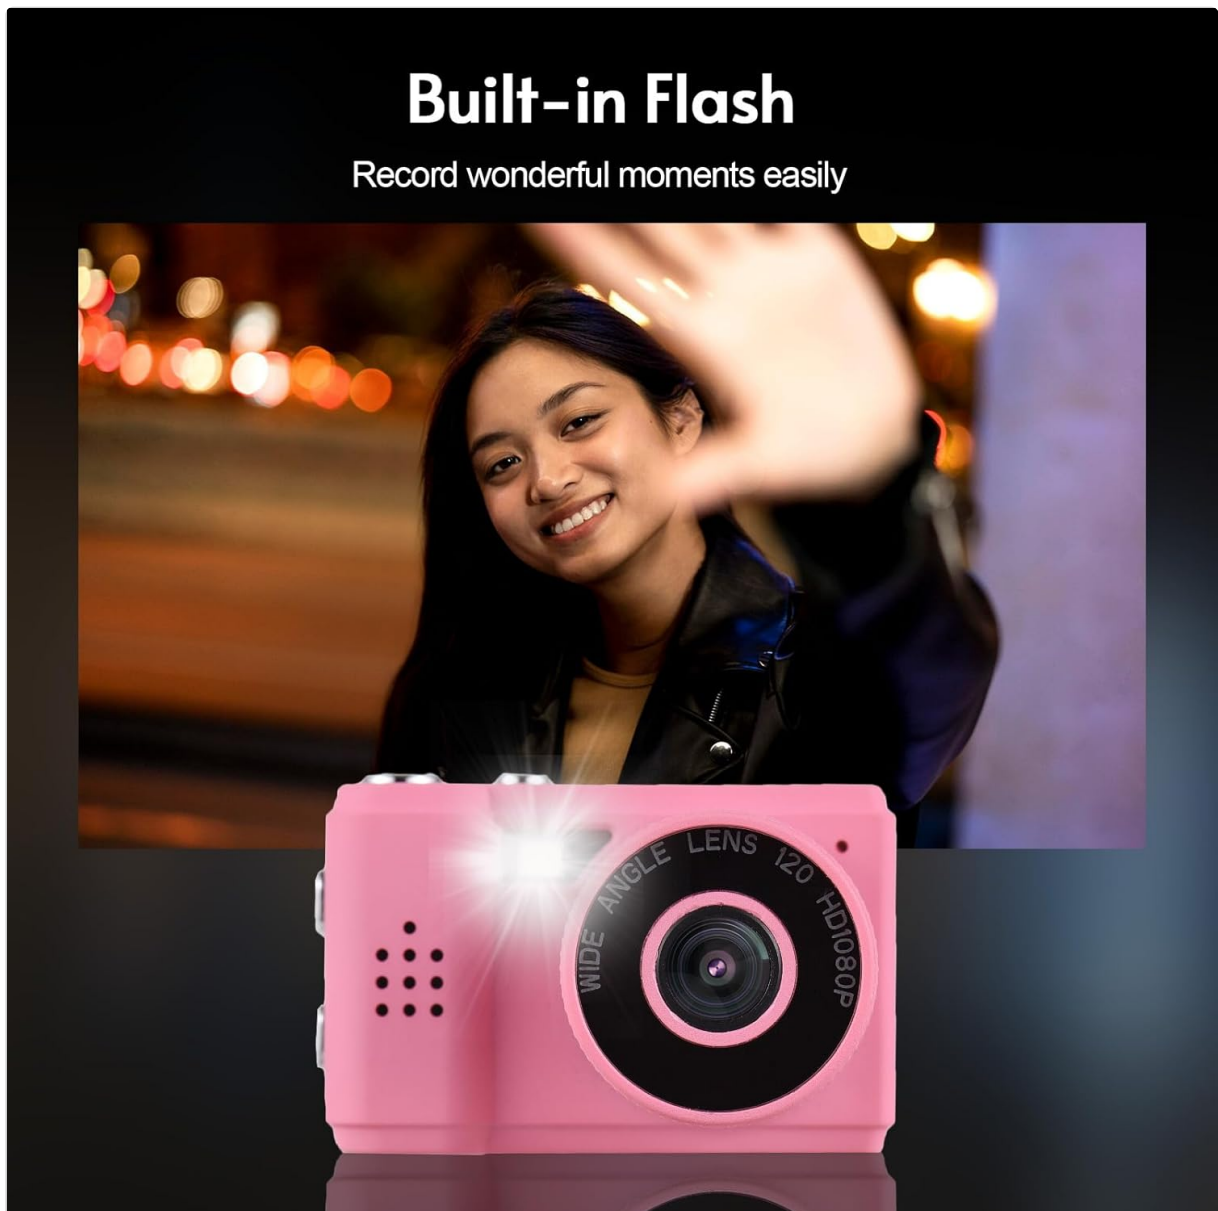


Image: The camera with its built-in flash activated, demonstrating its use in a low-light setting.

5.5 Viewing Photos and Videos

To review your captured media:

1. Enter playback mode (usually indicated by a play icon).
2. Use the navigation buttons (up/down/left/right) to scroll through your photos and videos on the LCD screen.

3. Press the 'OK' or 'Play' button to view a video.

5.6 Connecting to a Computer

To transfer files to a computer:

1. Ensure the camera is powered on.
2. Connect the camera to your computer using the provided USB cable.
3. The camera should appear as a removable disk or mass storage device on your computer.
4. Open the camera's folder to access and transfer your photos (JPEG) and videos (MJPEG).

6. MAINTENANCE

6.1 Cleaning

- Use a soft, dry, lint-free cloth to clean the camera body.
- For the lens and LCD screen, use a specialized lens cleaning cloth and a small amount of lens cleaning solution. Avoid applying liquid directly to the screen or lens.
- Do not use abrasive cleaners, solvents, or harsh chemicals.

6.2 Storage

- Store the camera in a cool, dry place, away from direct sunlight, high humidity, and extreme temperatures.
- If storing for an extended period, remove the Micro SD card.

6.3 Battery Care

- Charge the battery regularly, even if the camera is not in frequent use, to help maintain its lifespan.
- Avoid fully discharging the battery frequently, as this can reduce its overall capacity over time.

7. TROUBLESHOOTING

Refer to the following solutions for common issues:

7.1 Camera Not Turning On

- Ensure the battery is sufficiently charged. Connect the camera to a power source using the USB cable and try again.
- Press and hold the power button for a longer duration (5-10 seconds).

7.2 Cannot Take Photos or Record Videos

- Verify that a Micro SD card is inserted correctly.
- Check if the Micro SD card has sufficient free space. Delete unnecessary files or insert a new card if full.
- Ensure the camera is in the correct mode (photo or video).

7.3 Poor Image Quality

- Clean the camera lens with a suitable lens cleaning cloth.
- Ensure adequate lighting. Use the built-in flash in low-light conditions.
- Hold the camera steady during capture to prevent blur.

7.4 Files Not Transferring to Computer

- Ensure the USB cable is securely connected to both the camera and the computer.
- Try connecting to a different USB port on your computer or using a different USB cable.
- Verify that the camera is powered on and recognized as a storage device by your computer's operating system.

8. SPECIFICATIONS

Detailed technical specifications for the Andoer Mini Compact Digital Camera:

Feature	Specification
Brand	Andoer
Model Name	Mini
Model Number	ded11659-e9f8-4b07-a44a-8be1159f3ded
Photo Sensor Resolution	2.1 MP (Total Still Resolution: 2 MP)
Video Resolution	1080p
Display Type	LCD
Connectivity Technology	USB
Battery Type	Lithium Ion (Built-in)
Flash Memory Type	Micro SD
Supported File Format	JPEG (Image), MJPEG (Video)
Image Stabilization	Digital
Item Dimensions (D x W x H)	1"D x 1.7"W x 1"H
Net Weight	18 Grams
Color	Pink

9. WARRANTY

This product is sold without an explicit manufacturer's warranty. For information regarding returns or exchanges, please refer to the return policy of the retailer from whom you purchased this device.

10. SUPPORT

For further assistance, technical support, or any inquiries not covered in this manual, please contact Andoer customer support through their official channels. You may also visit the official Andoer Store on Amazon for additional product information and resources:

[Andoer Official Store on Amazon](#)

