

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SENCOR](#) /

› [SENCOR SRV 9185BK Robot Vacuum and Mop Instruction Manual](#)

SENCOR SRV 9185BK

SENCOR SRV 9185BK Robot Vacuum and Mop Instruction Manual

Model: SRV 9185BK



INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your SENCOR SRV 9185BK Robot Vacuum and Mop. Please read this manual thoroughly before using the product and retain it for future reference. The SENCOR SRV 9185BK is designed for comprehensive floor cleaning, featuring powerful suction, mopping capabilities, LiDAR navigation, and an automatic emptying station.

PACKAGE CONTENTS

Before setup, ensure all components are present in the package:

- 1x SENCOR SRV 9185BK main unit (including battery)
- 1x Automatic Emptying Station
- 1x Mopping cloth holder (part of the robot)
- 1x Mopping cloth
- 1x Charging adapter
- 1x Filter
- 1x Dust reservoir
- 1x Remote control

SETUP

1. Positioning the Automatic Emptying Station

Place the automatic emptying station against a wall in an open area, ensuring there are no obstacles within 1 meter to the front and 0.5 meters to the sides. Connect the charging adapter to the station and plug it into a power outlet.



The SENCOR SRV 9185BK robot vacuum and mop, shown with its automatic emptying station, ready for operation.

2. Initial Charging

Place the robot onto the charging station. Ensure the charging contacts on the robot align with those on the station. The robot will begin charging automatically. A full charge takes approximately 3 hours. The battery indicator on the robot will show charging status.

3. App Connection (Optional)

For advanced control and scheduling, download the SENCOR Home app from your smartphone's app store. Follow the in-app instructions to connect your SRV 9185BK robot. This allows for scheduling cleaning times, selecting suction strengths, and choosing mopping levels.

OPERATING INSTRUCTIONS

1. Starting a Cleaning Cycle

- **One-Button Operation:** Press the power button on the robot once to start an automatic cleaning cycle.
- **Remote Control:** Use the included remote control to start, stop, or direct the robot.
- **SENCOR Home App:** Use the app to initiate cleaning, select specific modes, or set schedules.



The SENCOR SRV 9185BK robot vacuum cleaning a living room, with blue lines indicating its systematic LiDAR-guided cleaning pattern.

2. Cleaning Modes

- **Vacuuming:** The robot utilizes its 3000Pa suction power and dual rotating side brushes to effectively clean various floor types, including carpets and hard floors.
- **Mopping:** Attach the mopping cloth holder with the special antistatic mopping cloth. The robot will then vacuum and mop simultaneously. Adjust mopping levels via the app.



The SENCOR SRV 9185BK robot vacuum actively cleaning a floor, showing its effectiveness in picking up dirt and debris.

3. Navigation and Obstacle Avoidance

The SRV 9185BK uses LiDAR navigation to map your home and optimize cleaning routes. It is equipped with sensors to prevent falls and intelligently avoids obstacles. The robot can navigate over thresholds up to 1 cm high (without the mopping cloth attached).



The SENCOR SRV 9185BK robot vacuum demonstrating its ability to navigate over thresholds up to 20mm high.

4. Automatic Emptying

Upon returning to its station, the robot automatically transfers collected debris into a 3-liter bag within the emptying station, providing up to 60 days of hands-free dust disposal.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your SENCOR SRV 9185BK.

1. Emptying the Dust Reservoir

Although the robot features an automatic emptying station, the internal dust reservoir (200 ml capacity) should be checked and manually emptied periodically, especially if the automatic emptying function is not used or if large debris is collected.

2. Cleaning the HEPA Filter

The HEPA filter captures 99.9% of allergens and fine particles. Tap the filter gently to remove dust or use a small brush. Replace the filter every 3-6 months, depending on usage.

3. Cleaning Side Brushes and Main Wheels

Regularly remove hair and debris from the two rotating side brushes and the main wheels. The main wheels are detachable for easier cleaning. This prevents blockages and ensures smooth movement.

4. Cleaning the Mopping Cloth

After each mopping cycle, remove the mopping cloth and wash it thoroughly. Allow it to air dry completely before reattaching.

5. Replacing the Automatic Emptying Station Dust Bag

When the 3-liter dust bag in the automatic emptying station is full (indicated by the app or station light), replace it with a new one.



A user demonstrating the process of replacing the 3-liter dust bag within the automatic emptying station of the SENCOR SRV 9185BK robot vacuum.

TROUBLESHOOTING

If you encounter issues with your SENCOR SRV 9185BK, refer to the following common problems and solutions:

- **Robot not starting:** Ensure the robot is fully charged. Check if the power button is pressed correctly.
- **Robot not charging:** Verify the charging contacts on both the robot and the station are clean and aligned. Ensure the charging adapter is properly connected to the station and power outlet.
- **Poor cleaning performance:** Empty the dust reservoir, clean or replace the HEPA filter, and remove any tangled hair from the side brushes and main brush.
- **Robot getting stuck frequently:** Clear obstacles from the cleaning path. Ensure the robot can pass over thresholds (max 1 cm without mopping cloth). Clean the anti-fall sensors.
- **Abnormal noise:** Check for any foreign objects caught in the brushes or wheels. Ensure all components are correctly assembled.
- **Automatic emptying not working:** Check if the 3L dust bag in the station is full and needs replacement. Ensure the robot is correctly docked.
- **App connectivity issues:** Ensure your Wi-Fi network is stable and the robot is within range. Restart the robot and your router if necessary.

For issues not covered here, please refer to the SENCOR Home app for further diagnostics or contact customer support.

SPECIFICATIONS

Feature	Specification
Model Number	SRV 9185BK
Brand	SENCOR
Suction Power	3000 Pa
Battery Type	2600 mAh Li-ion
Battery Life	Up to 140 minutes
Charging Time	Approx. 3 hours (full charge)
Dust Reservoir Capacity (Robot)	200 ml
Automatic Emptying Station Bag Capacity	3 Liters (up to 60 days)
Noise Level	63 dB (operating)
Navigation Type	LiDAR
Threshold Climbing Ability	Up to 1 cm (without mopping cloth)
Filter Type	HEPA
Control Methods	SENCOR Home App, Remote Control, On-device button, Amazon Alexa
Product Dimensions (Robot)	35L x 35B x 9.8H cm
Weight	7.4 kg

Note: Specifications are subject to change without prior notice.

WARRANTY AND SUPPORT

SENCOR offers a 30-day "Satisfaction or Money Back" guarantee for this product. For warranty claims, technical support, or further assistance, please refer to the contact information provided with your purchase documentation or visit the official SENCOR website.



© 2024 SENCOR. All rights reserved.