

Manuals.plus /

› BOMOVA /

› BOMOVA Heated Electric Throw Blanket (Model B0D31SDDSR) - User Manual

## BOMOVA B0D31SDDSR

# BOMOVA Heated Electric Throw Blanket - User Manual

Brand: **BOMOVA** | Model: **B0D31SDDSR**

## 1. INTRODUCTION

Thank you for choosing the BOMOVA Heated Electric Throw Blanket. This manual provides essential information for the safe and efficient use of your new blanket. Please read all instructions carefully before use and retain this manual for future reference.

This electric throw blanket is designed to provide warmth and comfort with its soft flannel material and Sherpa lining. It features multiple heating levels and an automatic shut-off function for your convenience and safety.

## 2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of burns, electric shock, fire, or injury, this product must be used in accordance with the following instructions:

- **DO NOT** use with infants, children, incapacitated persons, or anyone insensitive to heat.
- **DO NOT** use if the blanket is wet.
- **DO NOT** use with damaged cords or plugs. If the cord or plug is damaged, contact customer service.
- **DO NOT** submerge the controller in water or other liquids. The controller must never come into contact with water or other liquids. To clean the controller, use a dry, lint-free cloth.
- **DO NOT** use pins or other metallic objects with this blanket. They may damage the electrical wiring.
- **DO NOT** fold, crease, or bunch the blanket tightly during use, as this may cause overheating. Ensure the blanket is spread flat.
- **DO NOT** dry clean this product. Dry cleaning solvents may damage the insulation of the heating element.
- Always disconnect the power cord from the wall outlet when not in use or before cleaning.
- The blanket features an automatic shut-off function after 8 hours of continuous use for safety.

## 3. PRODUCT FEATURES

- **Soft Material:** Made from plush flannel with a cozy Sherpa lining for ultimate comfort.
- **Adjustable Heat:** 10 heating levels ranging from 83°F to 113°F.
- **Auto-Off Timer:** Programmable timer for 1, 2, 4, 6, or 8 hours. Default auto-off is 8 hours.
- **Detachable Controller:** Allows for safe and easy machine washing of the blanket.
- **Long Power Cord:** 7.87ft power cord for flexible placement.



*Figure 1: BOMOVA Heated Electric Throw Blanket (Ash Gray) with controller.*

#### 4. SETUP GUIDE

1. **Unpack:** Carefully remove the blanket and controller from the packaging.
2. **Inspect:** Check the blanket and power cord for any signs of damage. Do not use if damaged.
3. **Connect Controller:** Locate the connector port on the blanket (typically at the foot end). Align the controller's plug with the port and push firmly until it clicks into place.
4. **Position Blanket:** Spread the blanket flat on a bed, couch, or chair, ensuring there are no folds, creases, or bunches.
5. **Plug In:** Insert the power plug into a standard 110V-120V AC wall outlet.



Figure 2: Detailed view of the LED controller showing power, temperature, and timer adjustments.



Figure 3: The detachable connector for the power cord, allowing for easy removal before washing.

## 5. OPERATING INSTRUCTIONS

The LED controller allows you to easily manage the blanket's settings:

- **Power On/Off:** Press the power button (usually a circular button in the center) to turn the blanket on or off.
- **Adjust Heating Level:** Use the '+' and '-' buttons to cycle through the 10 available heating levels. The current level (L1-L10) will be displayed in red on the LED screen.
- **Set Auto-Off Timer:** Use the timer button to select the desired auto-off duration. Options include 1,

2, 4, 6, or 8 hours. The selected time will be displayed in green on the LED screen. The blanket will automatically shut off after the set time.

**Note:** The blanket is designed with built-in safety features and will automatically shut down after 8 hours of use, even if a specific timer is not set.

## 6. CARE AND MAINTENANCE

---

Proper care ensures the longevity and performance of your heated blanket.

### Washing Instructions:

1. **Disconnect:** Always disconnect the controller from the blanket and unplug the power cord from the wall outlet before washing.
2. **Pre-soak:** Pre-soak the blanket for 15 minutes in mild soap and cold water.
3. **Machine Wash:** Machine wash in mild soap and cold water on a slow cycle.
4. **Rinse:** Rinse in fresh cold water.
5. **Stretch:** Gently stretch the blanket to its original size. Do not put through a wringer.

### Drying Instructions:

- **Tumble Dry:** For best results, air dry or tumble dry on low temperature setting for 10 minutes.
- **Air Dry:** Remove while still damp and stretch to original size. Air dry over a line or shower rail.
- **DO NOT** use commercial dryers or dryers at your local laundromat, as they may get too hot and damage the wiring.
- **DO NOT** re-connect or use until completely dry.

### Storage:

Store the product only after it cools down completely and is dry. Store in an airy, dry environment. Do not use mothballs or sprays of any kind.

## 7. TROUBLESHOOTING

---

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
Product does not produce enough heat or does not work.	Heating products provide safe heat and protect consumer skin within temperature ranges based on international safety standards. The product may be placed flat without being folded for normal use.	If you don't feel heat, you can fold the product and test it for 30 minutes to see whether it works or not. (But please make sure that the product is placed flat without being folded for normal use.) If you still can't feel the heat after the test, please contact the customer service.
Product does not work upon arrival.	There exist product malfunctions.	When receiving the product, please take it out from the packing and place it flat (do not fold). Check the coupler and mains plug have been connected properly, then switch on to check whether the product works normally or not. For products unable to work normally, please contact our customer service.
Product is folded or the heating wire is coiled during the use.	Please place the underblanket flat for using. The temperature of the body areas that contact the heating zones is higher than the areas do not, which is a normal phenomenon.	Ensure the blanket is spread flat and not folded or coiled during use.
Product is not used or washed properly.	Please contact our customer service.	Review care instructions or contact customer service.

## 8. SPECIFICATIONS

---

Feature	Detail
Brand	BOMOVA
Model	B0D31SDDSR
Dimensions	50"L x 60"W
Material	Flannel, Fleece (Sherpa)
Color	Ash Gray (Other colors available)
Heating Levels	10 (83°F-113°F)
Auto-Off Timer	1/2/4/6/8 hours (Default 8 hours)
Power Cord Length	7.87 ft
Care Instructions	Machine Washable (Detachable Controller)
Item Weight	3.25 pounds
UPC	732262972282

## 9. WARRANTY AND SUPPORT

---

For warranty information or any product-related inquiries, please refer to the documentation included with your purchase or contact BOMOVA customer service directly. Keep your proof of purchase for warranty claims.

You can also visit the BOMOVA store on Amazon for additional product information and support: Visit [BOMOVA Store](#)