

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cello](#) /

› [Cello C2224WSF Trav 22" Full HD SMART/DVD Camping Travel TV Integrated DVD Player Frameless Triple Tuner Bluetooth WebOS by LG Pitch Perfect Speaker Motorhome Truck \[2024\] 22" 12V/SMART/DVD User Manual](#)

Cello C2224WSF TRAV

Cello C2224WSF Traveller Smart/DVD TV User Manual

Model: C2224WSF TRAV

PRODUCT OVERVIEW

The Cello C2224WSF Traveller Smart/DVD TV is a versatile entertainment solution designed for travel, including caravans, motorhomes, boats, and trucks. It combines a Full HD Smart TV powered by LG's WebOS Hub with an integrated DVD player, offering entertainment options even without a stable internet connection. This model features Pitch Perfect Sound technology for enhanced audio and flexible power options (12V DC and mains AC).

Its lightweight and frameless design makes it ideal for space-constrained environments and wall mounting.



Figure 1: Cello C2224WSF Traveller Smart/DVD TV with WebOS Hub interface and integrated DVD player.

KEY FEATURES

- **Integrated Smart TV & DVD Player:** Combines LG WebOS Hub for streaming apps (Netflix, Prime Video, Disney+, YouTube, BBC iPlayer, ITVX) with a built-in DVD player for offline entertainment.
- **Pitch Perfect Sound:** Patented Cello technology with a speaker enclosure below the TV for enhanced bass, clearer mids, and defined highs, providing an immersive audio experience.



The illustration shows a Cello TV with the LG WebOS Hub interface. The screen displays a sunset scene with the text 'Hub From LG'. Below the screen, there is a speaker enclosure. The interface includes icons for various streaming apps: Netflix, Disney+, Apple TV, Amazon Prime Video, YouTube, and a grid of other apps. The TV is shown in a dark setting, highlighting the screen and the speaker enclosure.

PITCH PERFECT
S O U N D

Cello's patented design has a speaker enclosure below the TV to deliver enhanced bass, clearer mids, and more defined highs, resulting in **a truly immersive listening experience.**

Perfect Pitch Sound

Figure 2: Illustration of Cello's Pitch Perfect Sound technology, highlighting the speaker enclosure for improved audio.

- **Triple Tuner:** Built-in DVB-C/-S2/-T2 tuner for crystal-clear HD resolution and access to digital channels. Supports USB recording (DVR) and media playback.
- **Universal Compatibility:** Designed for 12V operation in caravans, motorhomes, boats, and trucks, with an integrated regulator for 10V to 27V DC input. Also operates on mains AC power.
- **Bluetooth Connectivity:** Allows easy connection to Bluetooth soundbars for enhanced audio without cables.
- **Lightweight and Frameless Design:** Compact dimensions (49 x 30 x 8 cm, 2.4 kg) and ultra-thin bezel for seamless integration and wall mounting in small spaces.



Figure 3: The Cello C2224WSF TV seamlessly integrated into a small living space, highlighting its compact design.

SETUP GUIDE

1. Unpacking and Initial Inspection

Carefully remove the TV and all accessories from the packaging. Check for any signs of damage. Retain the packaging for future transport or service.

2. Mounting Options

The TV can be placed on its included stand or wall-mounted. Ensure the mounting surface is stable and can support the TV's weight (2.4 kg).

- **Stand Installation:** Attach the stand securely to the base of the TV using the provided screws.
- **Wall Mounting:** Use a VESA-compatible wall mount (not included). Refer to the wall mount's instructions for proper installation. Ensure adequate ventilation around the TV.

3. Power Connection

The TV supports both 12V DC and mains AC power.

- **12V DC Power:** Connect the supplied 12V power adapter cable to the TV's 12V input port and to your vehicle's 12V power source. The integrated regulator handles voltage fluctuations (10V to 27V DC).
- **Mains AC Power:** Connect the supplied AC power cable to the TV's AC input and then to a standard wall outlet.

4. Antenna/Cable Connection

Connect your antenna or cable source to the RF input port on the TV for digital terrestrial (DVB-T2), satellite (DVB-S2), or cable (DVB-C) reception.

5. Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup wizard. This includes:

- Language selection
- Network connection (Wi-Fi or Ethernet)
- Channel scanning for DVB-T2/S2/C
- Time and date settings

OPERATING INSTRUCTIONS

1. Remote Control Functions

Familiarize yourself with the provided remote control. Key buttons include Power, Volume Up/Down, Channel Up/Down, Source, Home (for WebOS), Navigation (arrows, OK), and specific app buttons.

2. Smart TV (WebOS Hub) Usage

Press the **Home** button on the remote to access the WebOS Hub. This interface provides quick access to:

- **Streaming Apps:** Netflix, Prime Video, Disney+, YouTube, etc. (requires internet connection).
- **Catch-up TV:** BBC iPlayer, ITVX (UK specific, requires internet connection).
- **Web Browser:** For general internet browsing.
- **Input Selection:** Switch between TV, HDMI, USB, and DVD inputs.
- **Settings:** Configure picture, sound, network, and system settings.



Product Dimensions

Figure 4: The WebOS Hub interface, showcasing available streaming applications and smart features.



No subscription needed

Figure 5: The Freeview Play interface, providing access to catch-up TV services without subscription.

3. DVD Player Operation

Insert a DVD disc into the slot on the side of the TV. The TV will automatically switch to the DVD input or prompt you to do so. Use the remote control for playback functions (Play, Pause, Stop, Skip, Fast Forward/Rewind).

4. Connecting External Devices

The TV is equipped with multiple ports:

- **HDMI:** 1 port for connecting devices like gaming consoles, set-top boxes, or laptops.
- **USB:** 2 ports for media playback (photos, videos, music) or USB recording (DVR).
- **Optical:** 1 port for digital audio output to a sound system.
- **RF:** For antenna/cable connection.
- **Ethernet:** For wired internet connection.

To switch inputs, press the **Source** button on the remote and select the desired input.

5. Bluetooth Audio

To connect a Bluetooth soundbar or headphones:

1. Go to **Settings > Sound > Bluetooth**.
2. Enable Bluetooth and put your audio device into pairing mode.
3. Select your device from the list to pair.

MAINTENANCE

1. Cleaning the TV

Use a soft, dry cloth to clean the screen and cabinet. For stubborn marks, slightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Do not use alcohol, benzene, thinners, or other volatile substances.

2. Software Updates

The WebOS system may receive software updates. It is recommended to keep the TV connected to the internet to receive these updates, which can improve performance and add new features. You can check for updates in the **Settings** menu.

3. DVD Player Care

Only insert clean, undamaged discs into the DVD player. Avoid touching the disc's playback surface. If the player experiences issues, try cleaning the disc or using a dedicated DVD lens cleaner disc.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; no power from outlet/12V source.	Check power connections. Ensure outlet/12V source is active.
No picture/sound from TV channels	Antenna/cable not connected; incorrect input selected; no channels scanned.	Check antenna/cable connection. Select correct input. Perform channel scan.
No internet connection	Wi-Fi signal weak; incorrect Wi-Fi password; router issue.	Check Wi-Fi signal strength. Re-enter password. Restart router. Try wired Ethernet connection.
DVD not playing	Disc dirty/damaged; incorrect input selected.	Clean disc. Try another disc. Select DVD input.
Poor sound quality	Volume too low; sound settings incorrect; external speakers not connected properly.	Adjust volume. Check sound settings (e.g., EQ, balance). Ensure external speakers/soundbar are connected and selected.
Remote control not working	Batteries dead/incorrectly inserted; obstruction between remote and TV.	Replace batteries. Remove obstructions. Point remote directly at TV.

SPECIFICATIONS

- **Model:** C2224WSF TRAV
- **Screen Size:** 22 inches
- **Display Technology:** LED
- **Resolution:** 1080p (Full HD)
- **Refresh Rate:** 60 Hz
- **Operating System:** WebOS Hub (by LG)
- **Integrated Features:** DVD Player, Triple Tuner (DVB-C/-S2/-T2)
- **Audio:** Pitch Perfect Sound, Integrated Speaker
- **Connectivity:**
 - 1 x HDMI Port
 - 2 x USB Ports
 - 1 x Optical Port
 - 1 x RF Port (Antenna/Cable)
 - Ethernet
 - Bluetooth
 - Wi-Fi
- **Power Input:** 12V DC (10V-27V range) / Mains AC
- **Dimensions (W x H x D):** Approximately 49 cm x 30 cm x 8 cm (excluding stand)
- **Weight:** Approximately 2.4 kg
- **Special Features:** Frameless Design, USB Recording (DVR), Miracast, Web Browser
- **Country of Origin:** United Kingdom



100% faster than other brands



Ultrafast LG WebOS Smart TV

Figure 6: Product dimensions of the Cello C2224WSF TV.

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Cello website.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Cello customer service. Contact details can typically be found on the manufacturer's website or in the product packaging.

Please have your model number (C2224WSF TRAV) and purchase date available when contacting support.

© 2024 Cello. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

