

[Manuals.plus](#) /

› [Cello](#) /

› Cello C5024WSF 50-inch Smart DVD TV User Manual

Cello C5024WSF

Cello C5024WSF 50-inch Smart DVD TV User Manual

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Cello C5024WSF 50-inch Smart DVD TV. This television combines a fast LG WebOS Smart TV system with an integrated DVD player, a triple tuner, and versatile connectivity options including Bluetooth, HDMI, and USB. Please read this manual thoroughly before using your TV to ensure proper function and safety.



100% plus rapide que les autres marques



Smart TV LG WebOS ultra-rapide

The Cello Smart TV displaying the LG WebOS Hub interface with various streaming application icons, indicating its smart capabilities.

PRODUCT OVERVIEW

The Cello C5024WSF is designed for ease of use and integrated entertainment. Key features include:

- **Smart TV with Integrated DVD:** Enjoy the speed of LG WebOS for streaming and the convenience of a built-in DVD player for disc media.
- **Elegant Design:** A slim frame and lightweight design make it suitable for any room, whether wall-mounted or placed on a stand.
- **Triple Tuner:** Access digital channels with exceptional HD clarity via integrated DVB-C/S2/T2 tuners.
- **Universal Connectivity:** Equipped with 2 HDMI ports, 2 USB ports, 1 optical port, and 2 RF ports for connecting various devices. Integrated Bluetooth allows for wireless audio connections.



Dimensions du produit

Diagram illustrating the physical dimensions of the Cello 50-inch TV: 1130mm width and 712mm height.



Lecteur DVD intégré

The integrated DVD player allows for direct playback of movies and TV series from discs.



Boostez votre connectivité

Connect various devices using the available HDMI and USB ports.



Bluetooth connectivity enables wireless pairing with compatible audio devices like soundbars.

SETUP INSTRUCTIONS

1. Unboxing and Initial Placement

Carefully remove the TV from its packaging. Choose a stable, flat surface for placement or prepare for wall mounting. Ensure adequate ventilation around the TV.



Montage mural

The Cello TV can be wall-mounted using a VESA compatible bracket (400 x 200 mm).

2. Connecting Power

Connect the provided power cable to the TV's power input and then to a wall outlet. The TV operates on 100-240V AC, 50-60Hz.

3. Connecting External Devices

Use the HDMI ports (2 available) to connect devices such as gaming consoles, set-top boxes, or streaming devices. USB ports (2 available) can be used for media playback or recording.

4. Antenna/Cable Connection

Connect your antenna or cable to the RF input on the TV to receive digital terrestrial (DVB-T2), satellite (DVB-S2), or cable (DVB-C) broadcasts.

5. Network Connection (Wi-Fi)

Upon first power-on, the TV will guide you through connecting to your home Wi-Fi network. This is essential for accessing Smart TV features and applications.

6. Initial Setup Wizard

Follow the on-screen instructions to complete the initial setup, including language selection, channel scanning, and time zone settings.

OPERATING YOUR TV

1. Remote Control Functions

The TV comes with an infrared remote control. Insert 2 AAA batteries (not included) into the remote. Familiarize yourself with the buttons for power, volume, channel, input selection, and Smart TV navigation.

2. Smart TV Features (WebOS)

Press the 'Home' button on your remote to access the WebOS interface. From here, you can launch pre-installed applications like Netflix, Prime Video, Disney Plus, and YouTube. You can also download additional apps from the LG Content Store.

- **Screen Sharing (Miracast):** Use the Miracast feature to wirelessly mirror content from compatible mobile devices to your TV.

3. Using the Integrated DVD Player

Insert a DVD disc into the slot on the side or back of the TV. The TV should automatically switch to DVD mode. Use the remote control for playback functions (play, pause, stop, skip).

4. Media Playback via USB

Insert a USB drive containing compatible media files (photos, music, videos) into one of the USB ports. The TV's media player will detect the drive, allowing you to browse and play content.

5. Bluetooth Audio Pairing

To pair a Bluetooth soundbar or headphones, navigate to the TV's settings menu, select 'Sound', then 'Bluetooth'. Enable Bluetooth and select your device from the list to pair.

MAINTENANCE

1. Cleaning the Screen and Casing

Always unplug the TV before cleaning. Use a soft, dry, lint-free cloth to gently wipe the screen and casing. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Avoid harsh chemicals, abrasives, or direct spraying of liquids onto the TV.

2. Software Updates

Ensure your TV is connected to the internet to receive automatic software updates. You can also manually check for updates in the TV's settings menu under 'General' > 'About This TV' > 'Check for Updates'. Keeping your software updated ensures optimal performance and access to the latest features.

TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common solutions:

Problem	Possible Solution
No Power	Check if the power cable is securely connected to both the TV and the wall outlet. Ensure the outlet is functional.
No Picture / Black Screen	Verify the correct input source is selected. Check all cable connections (HDMI, antenna). Try restarting the TV.
No Sound	Check volume levels and mute settings. Ensure external audio devices (soundbars, headphones) are correctly connected or paired via Bluetooth. Check audio output settings in the TV menu.
Remote Control Not Working	Replace the batteries in the remote. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot Connect to Wi-Fi	Ensure your Wi-Fi router is on and within range. Re-enter the Wi-Fi password. Try restarting both the TV and your router.
DVD Playback Issues	Ensure the DVD disc is clean and free of scratches. Verify the disc is inserted correctly. Try a different DVD.

SPECIFICATIONS

Below are the detailed technical specifications for the Cello C5024WSF 50-inch Smart DVD TV:

Feature	Detail
Model Number	C5024WSF
Screen Size	50 Inches (127 cm)
Display Technology	LED
Resolution	1080p (Full HD, 1920 x 1080)
Refresh Rate	60 Hz
Operating System	WebOS
Special Features	Bezel-Less Design, Integrated Speaker, Miracast, USB Recording (DVR), Integrated DVD Player
Connectivity Technology	Bluetooth (v5.1), HDMI (2 ports), USB (2 ports), Wi-Fi, Ethernet, Optical, RF
Audio Output Mode	Digital
Speaker Description	Integrated speakers with 16W audio output
Surround Sound Format	Dolby Digital
Power Consumption	71 Watts (71 kWh/1000h)
VESA Mounting Standard	400 x 200 mm
Item Weight	9.5 Kilograms

Feature	Detail
Dimensions (D x W x H)	25P x 113l x 71H centimeters
Included Components	Power Cable, Remote Control
Remote Control Batteries	2 x AAA (not included)
Model Year	2024



ENERG⚡




cello

C5024WSF



71 kWh/1000h

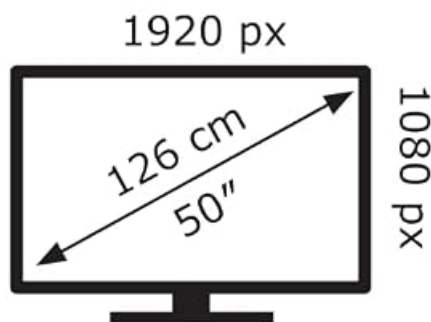

2019/2013

EU Energy Label for the Cello C5024WSF TV, showing energy efficiency class G.

Fiche d'information sur le produit				i DC Power Adapter		
RÈGLEMENT DÉLÉGUÉ (UE) 2019/2013 DE LA COMMISSION en ce qui concerne l'étiquetage énergétique des dispositifs d'affichage électronique				ii Tension d'entrée		230 V
				iii Tension de sortie		12,0 V
				26. Alimentation externe normalisée (ou appropriée si non incluse dans l'emballage du produit)		
				i -		
				ii Tension de sortie requise		- V
				iii Intensité du courant à fournir (minimale)		- A
				iv Fréquence du courant requise		- Hz
				Model placed on the Union market from 01/02/2024.		
						
				EPREL registration number: 1883478 https://eprel.ec.europa.eu/qr/1883478		
				Supplier: Cello Electronics GmbH (Importer) Website: www.celloelectronics.de		
				Customer care service:		
				Name: Cello sales service Website:		
				Email: consumersupport@celloelectronics.com Phone: 03334330312		
				Address: Dovecot Hill, Bishop Auckland DL14 6XW Durham Royaume-Uni		
Paramètre	Paramètre ou valeur et précision	Unité				
1. Nom ou marque commerciale du fournisseur.	cello					
Adresse du fournisseur.	Cello sales service, Dovecot Hill, Bishop Auckland, DL14 6XW Durham England, UK					
2. Référence du modèle	C5024WSF					
3. Classe d'efficacité énergétique pour la gamme dynamique standard (SDR)	G					
4. Puissance appelée en mode marche en SDR		71,0	W			
5. Classe d'efficacité énergétique pour la haute gamme dynamique (HDR)	s.o.					
6. Puissance appelée en mode marche pour la haute gamme dynamique (HDR), le cas échéant		s.o.	W			
7. Puissance appelée en mode arrêt, le cas échéant		s.o.	W			
8. Puissance appelée en mode veille, le cas échéant		0,4	W			
9. Puissance appelée en mode veille avec maintien de la connexion au réseau, le cas échéant		s.o.	W			
10. Catégorie de dispositif d'affichage électronique			Téléviseur			
11. Rapport de taille	16 : 9					
12. Résolution d'écran	1 920 x 1 080		pixels			
13. Diagonale de l'écran		126,0	cm			
14. Diagonale de l'écran		50	pouces			
15. Surface visible de l'écran		67,5	dm²			
16. Technologie d'affichage utilisée		LED LCD				
17. Réglage automatique de la luminosité (ABC) disponible		Non				
18. Capteur de reconnaissance vocale disponible		Non				
19. Capteur de présence disponible		Non				
20. Taux de fréquence de rafraîchissement de l'image (par défaut)		50	Hz			
21. Disponibilité minimale garantie des mises à jour du logiciel et du micrologiciel (à compter de la date de fin de mise sur le marché)		5	Années			
22. Disponibilité minimale garantie des pièces de rechange (à compter de la date de fin de commercialisation)		5	Années			
23. Assistance produit minimale garantie		1	Années			
Durée minimale de la garantie générale offerte par le fournisseur		1	Années			
24. Type d'alimentation	Externe					
25. Alimentation externe (incluse dans l'emballage du produit)						

Page 1 / 2

Page 2 / 2

Detailed product information sheet from EPREL. For more details, visit: eprel.ec.europa.eu/qr/1883478

WARRANTY INFORMATION

The Cello C5024WSF 50-inch Smart DVD TV comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims. For full terms and conditions, refer to the warranty card included with your product or contact customer support.

CUSTOMER SUPPORT

For technical assistance, troubleshooting, or warranty inquiries, please contact Cello customer support:

Email: consumersupport@celloelectronics.com

Website: www.celloelectronics.de

Phone: 03334330312 (Please check for local rates and operating hours)

When contacting support, please have your TV model number (C5024WSF) and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question