

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ELYONA](#) /

› [ELYONA 35.5-inch Wood Linear LED Pendant Light \(Model UP3012\) Instruction Manual](#)

## ELYONA UP3012

# ELYONA 35.5-inch Wood Linear LED Pendant Light (Model UP3012) Instruction Manual

## 1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your ELYONA 35.5-inch Wood Linear LED Pendant Light, Model UP3012. Please read this manual thoroughly before installation and retain it for future reference. This fixture features integrated LED lighting with stepless dimming, adjustable color temperature, and dual control options via remote and touch.



Figure 1: ELYONA 35.5-inch Wood Linear LED Pendant Light, showcasing its design, remote control, and touch sensor functionality.

## 2. SAFETY INFORMATION

**WARNING:** Risk of electric shock. Disconnect power at the circuit breaker before installation or servicing.

- Ensure all electrical connections comply with local codes and ordinances, as well as the National Electric Code (NEC).
- If you are unfamiliar with electrical wiring, consult a qualified electrician.
- Do not install this fixture on a sloped ceiling without appropriate adapters.
- Handle the fixture with care to prevent damage. Do not bend or twist the LED light bar.
- This product is for indoor use only.

## 3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation.

- Pendant Lamp Fixture
- Remote Control
- User Manual (this document)
- Mounting Hardware (screws, wire nuts, canopy, etc.)

## 4. PRODUCT FEATURES

---

- **Integrated LED Light:** 20W power, 2000 lumens maximum output. No bulb replacement required.
- **Stepless Dimming:** Adjust brightness from 30% to 100%.
- **Adjustable Color Temperature:** Seamlessly transition between 2700K (warm white) and 6500K (cool white).
- **Dual Control:** Operate via the included remote control or the integrated touch sensor.
- **Solid Wood Construction:** Crafted from FSC-certified solid wood, ensuring unique grain patterns and environmental responsibility.
- **Adjustable Hanging Height:** Cords allow for height adjustment up to a maximum of 73 inches.

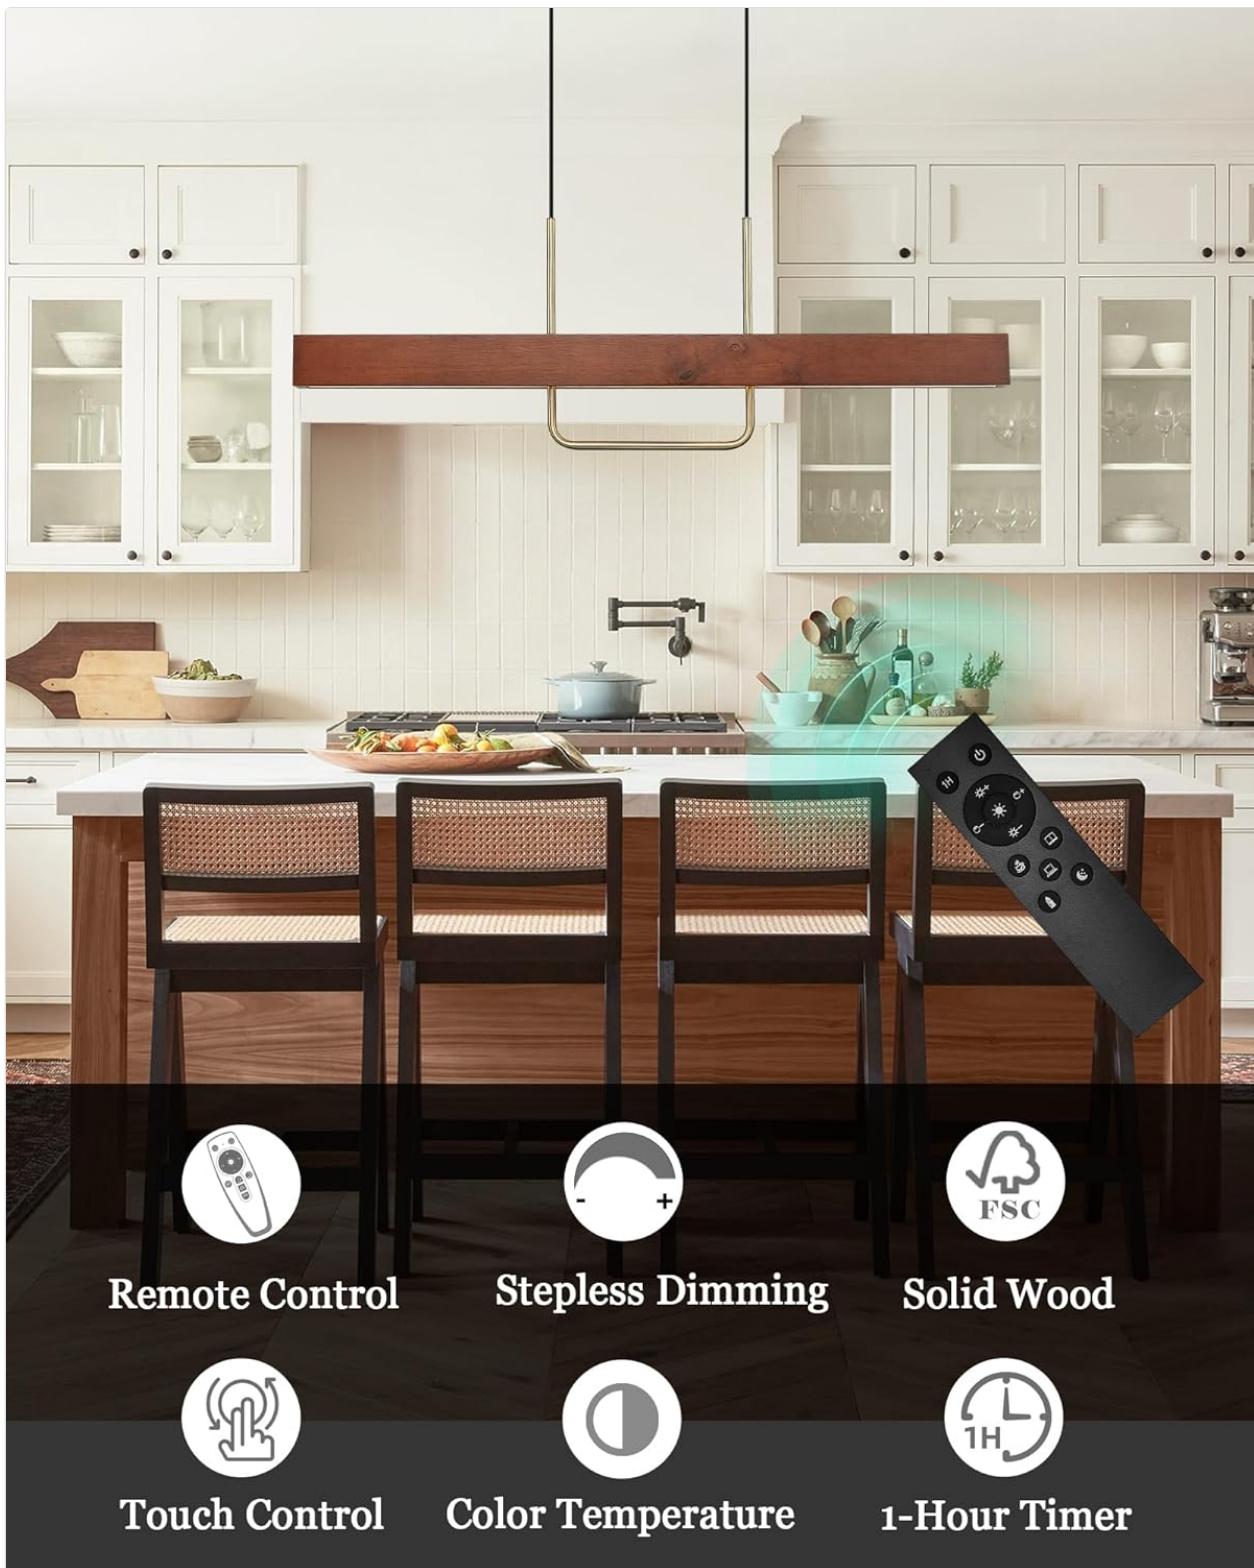


Figure 2: Detail of the FSC-certified solid wood construction, highlighting the natural material.

## 5. SETUP AND INSTALLATION

**Tools Required:** Phillips screwdriver, wire strippers, electrical tape, ladder, safety glasses.

- 1. Turn Off Power:** Locate the circuit breaker controlling the light fixture and turn off the power. Verify power is off using a voltage tester.
- 2. Prepare Mounting:** Attach the mounting bracket to the junction box in the ceiling using the provided screws. Ensure it is securely fastened.
- 3. Adjust Hanging Height:** Determine the desired hanging height for the pendant light. Adjust the length of the suspension cables by pressing the pin on the canopy and sliding the cables to the desired length.

Ensure both cables are adjusted evenly.

4. **Wiring Connections:** Carefully connect the fixture's wires to your household wiring. Match the wires:

- Black (Live) to Black (Live)
- White (Neutral) to White (Neutral)
- Green or Bare Copper (Ground) to Green or Bare Copper (Ground)

Secure connections with wire nuts and electrical tape. If the wiring is unclear or you are unsure, consult a qualified electrician.

5. **Mount Canopy:** Tuck all wires neatly into the junction box. Align the fixture canopy with the mounting bracket and secure it with the provided screws.

6. **Restore Power:** Turn the power back on at the circuit breaker.


*Note: The installation process may require two people due to the fixture's size and the need for precise height adjustment.*

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Remote Control Operation

The remote control allows for comprehensive adjustment of the light fixture from up to 20 meters away. Ensure the remote has working batteries (not included, typically 2x AAA).

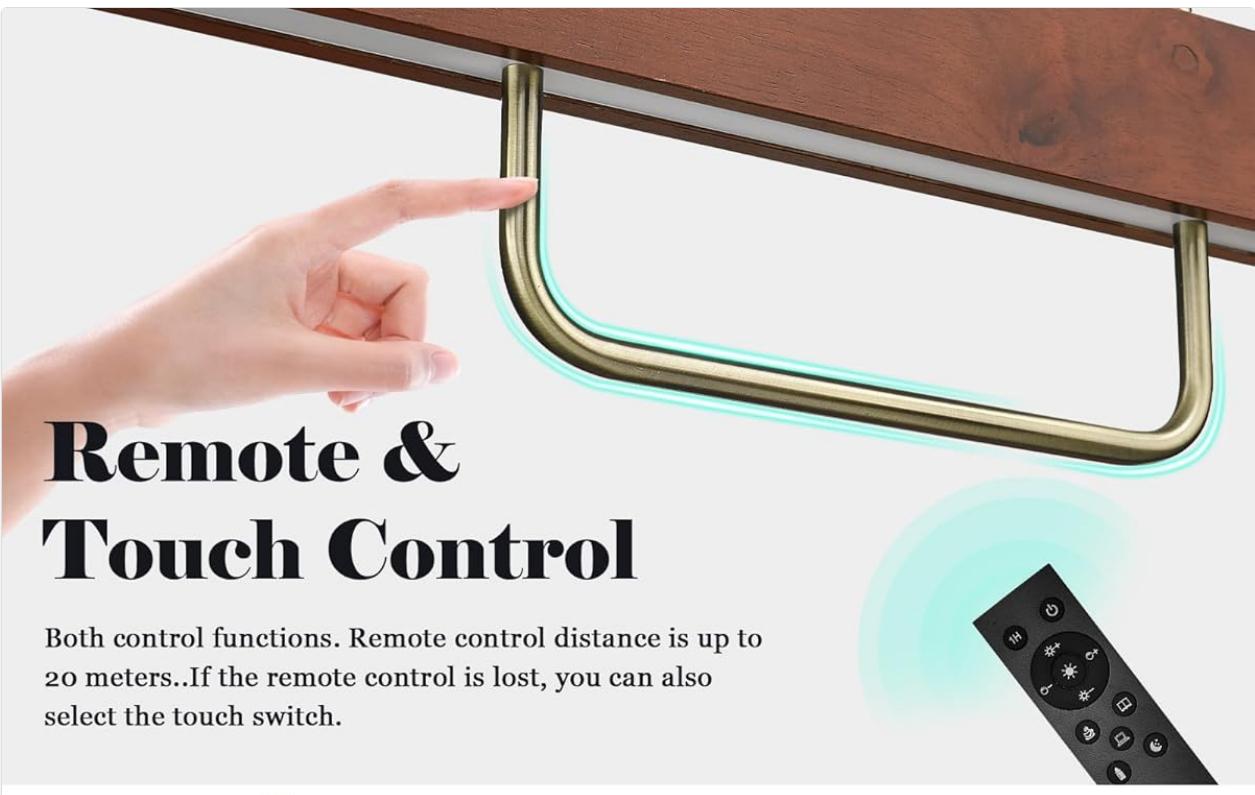

## Remote & Touch Control

Both control functions. Remote control distance is up to 20 meters..If the remote control is lost, you can also select the touch switch.



Figure 3: Remote control and touch sensor detail, illustrating control options.

- **ON/OFF:** Press the power button to turn the light on or off.
- **Brightness Adjustment:** Use the '+' and '-' buttons to increase or decrease brightness (30%-100%).
- **Color Temperature Adjustment:** Use the 'C+' and 'C-' buttons to cycle through color temperatures (2700K-6500K).
- **Preset Scenes:** The remote may include buttons for various preset lighting scenes (e.g., Reading, Working, Night Light, Leisure, Breastfeeding). Press the desired button to activate the scene.
- **1-Hour Timer:** Press the '1H' button to activate a 1-hour timer. The light will turn off automatically after 1 hour.

### 6.2 Touch Control Operation

The U-shaped brass metal bar on the bottom of the fixture serves as a touch sensor.

- **Turn On/Off:** Briefly touch the brass bar to toggle the light on or off.
- **Adjust Color Temperature:** Touch and hold the brass bar to cycle through the available color temperatures. Release when the desired temperature is reached.

*Memory Function: The fixture retains the last brightness and color temperature setting when turned off and on, whether by remote or touch.*



Figure 4: Visual representation of the stepless dimming and color temperature adjustment capabilities.

## 7. MAINTENANCE

- **Cleaning:** Ensure the power is off before cleaning. Wipe the fixture with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or electrical components.
- **LED Care:** The integrated LED light source is designed for long-term use and does not require replacement. Do not attempt to disassemble the LED module.

## 8. TROUBLESHOOTING

| Problem   | Possible Cause   | Solution   |
|---|--|--|
| Light does not turn on.                                 | No power, loose wiring, faulty remote batteries.             | Check circuit breaker. Verify wiring connections. Replace remote batteries.                          |
| Remote control not responding.                          | Remote batteries low/dead, remote out of range, obstruction. | Replace remote batteries. Ensure remote is within 20 meters of the fixture. Remove any obstructions. |
| Light flickers or dims unexpectedly.                    | Unstable power supply, loose wiring.                         | Consult an electrician to check power supply. Verify wiring connections.                             |
| 1-Hour Timer shuts off too early (e.g., 10-15 minutes). | Potential software or hardware discrepancy.                  | If this issue persists, contact customer support for assistance.                                     |

## 9. SPECIFICATIONS

| Feature            | Detail                                 |
|--------------------|--|
| Brand              | ELYONA                                 |
| Model Number       | UP3012                                 |
| Product Dimensions | 35.4 x 2.6 x 71 inches (L x W x Max H) |
| Item Weight        | 8.93 pounds                            |
| Material           | Solid Wood, Brass Metal                |
| Light Source Type  | Integrated LED                         |
| Wattage            | 20W                                    |
| Brightness         | 2000 lumens (Max)                      |
| Voltage            | 100V-240V                              |
| Color Temperature  | 2700K-6500K (Stepless Adjustable)      |
| Control Method     | Remote Control, Touch Control          |
| Installation Type  | Semi Flush Mount (Ceiling Mount)       |

| Feature              | Detail |
|----------------------|--------|
| Indoor/Outdoor Usage | Indoor |

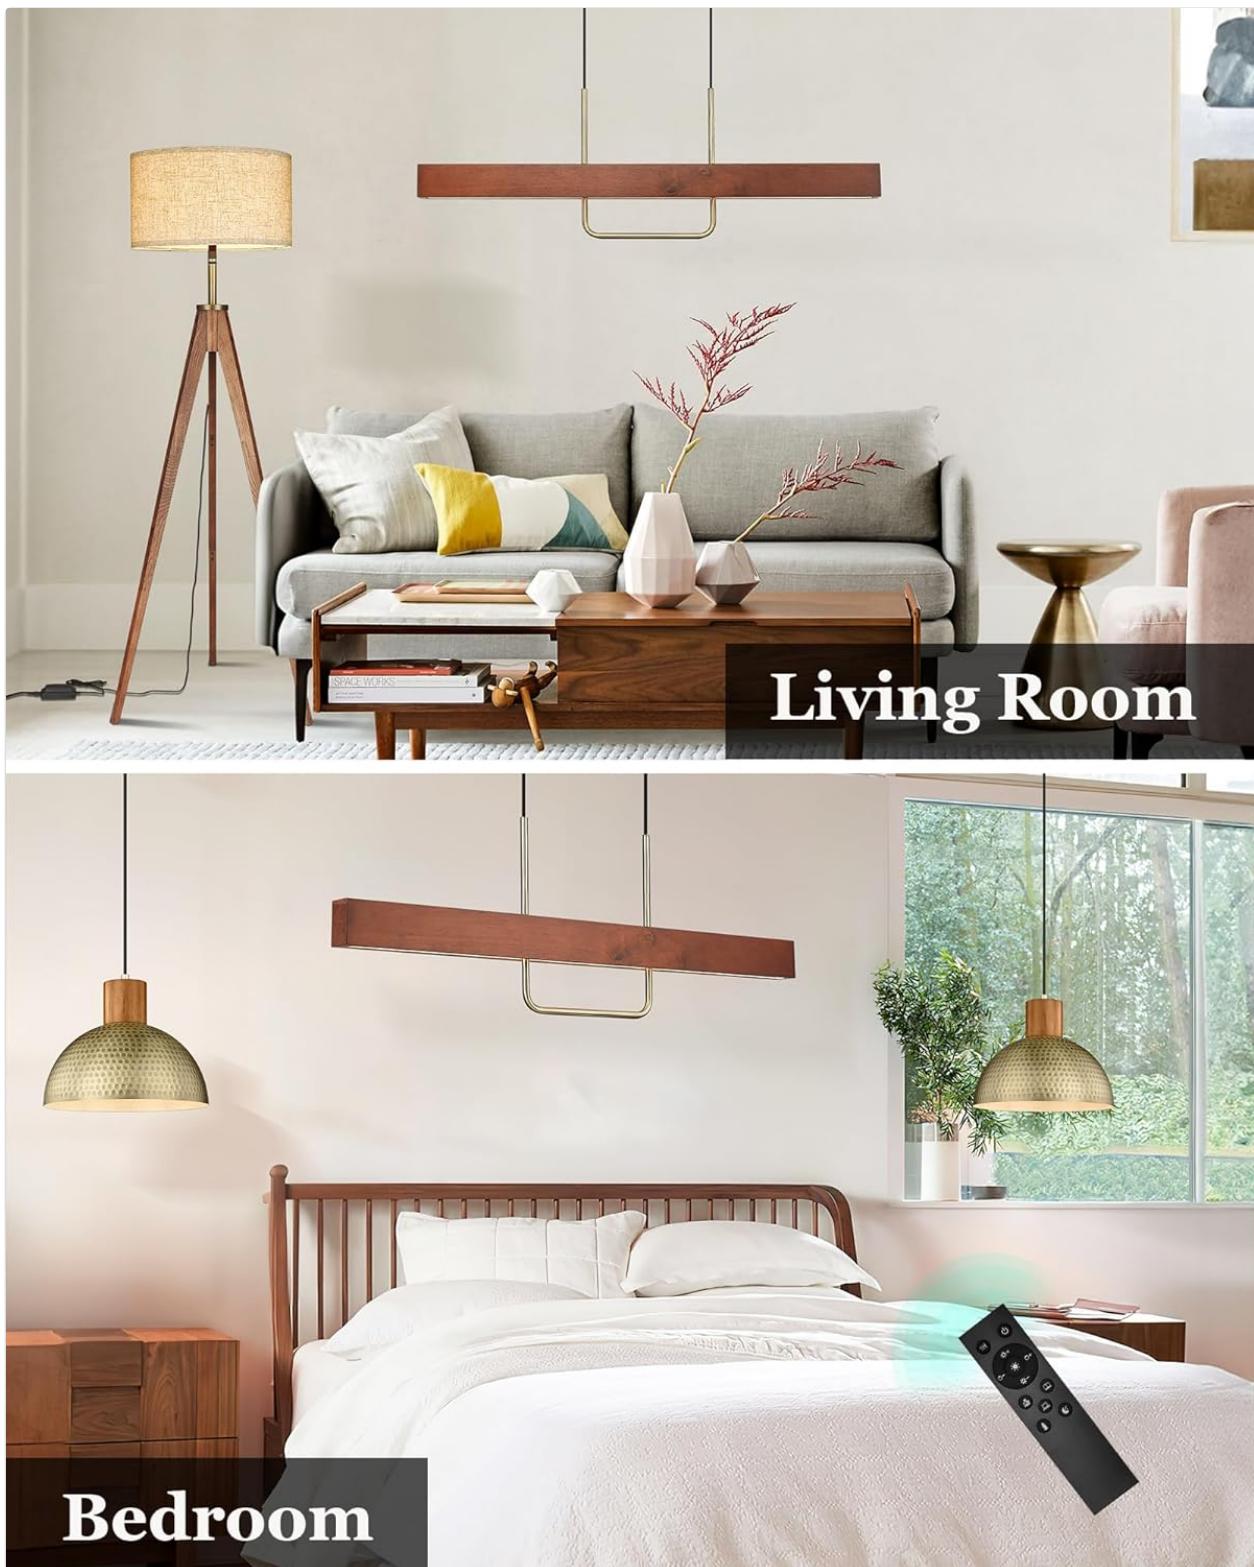


Figure 5: Product dimensions and adjustable hanging height details.

## 10. WARRANTY AND SUPPORT

This ELYONA product is covered by a **1-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For any inquiries, technical assistance, or warranty claims, please contact ELYONA customer support through

the Amazon message box. We aim to provide a response within 24 hours.

Please have your purchase details and model number (UP3012) available when contacting support to expedite the process.