

[Manuals.plus](#) /

› [EKO](#) /

› EKO Mirage Semi-Round Motion Sensor Trash Can (Model EK9331MMT-47L) User Manual

EKO EK9331MMT-47L

EKO Mirage Semi-Round Motion Sensor Trash Can (Model EK9331MMT-47L) User Manual

Model: EK9331MMT-47L | Brand: EKO

1. INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your EKO Mirage Semi-Round Motion Sensor Trash Can. Please read this manual thoroughly before use and retain it for future reference.



The EKO Mirage Semi-Round Motion Sensor Trash Can, shown with its sleek stainless steel finish and included sample trash bags.

2. PACKAGE CONTENTS

- EKO Mirage Semi-Round Motion Sensor Trash Can (47 Liter / 12.4 Gallon)
- Removable Inner Bucket
- Lid with Motion Sensor and Deodorizer Compartment
- Sample Garbage Bags
- User Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your EKO Mirage Motion Sensor Trash Can.



This image illustrates the overall dimensions of the 47-liter trash can and highlights the separate, removable inner bucket for easy waste disposal.

- **Motion Sensor:** Located on the lid for touchless operation.

- **Lid:** Features a soft-close mechanism and a deodorizer compartment.
- **Inner Bucket:** Removable for easy bag changes and cleaning.
- **Stainless Steel Body:** Durable and fingerprint-resistant finish.
- **Ergonomic Handle:** Located at the back for easy movement.

4. SETUP


1. **Unpacking:** Carefully remove all components from the packaging.

2. **Battery Installation:**

Locate the battery compartment on the underside of the lid. Insert 4 AA alkaline batteries, ensuring correct polarity (+/-). Close the battery compartment securely.

Ultra Power Efficiency

Enjoy up to 8 months of power with 4 AA alkaline batteries.
Please note: do not use rechargeable batteries.

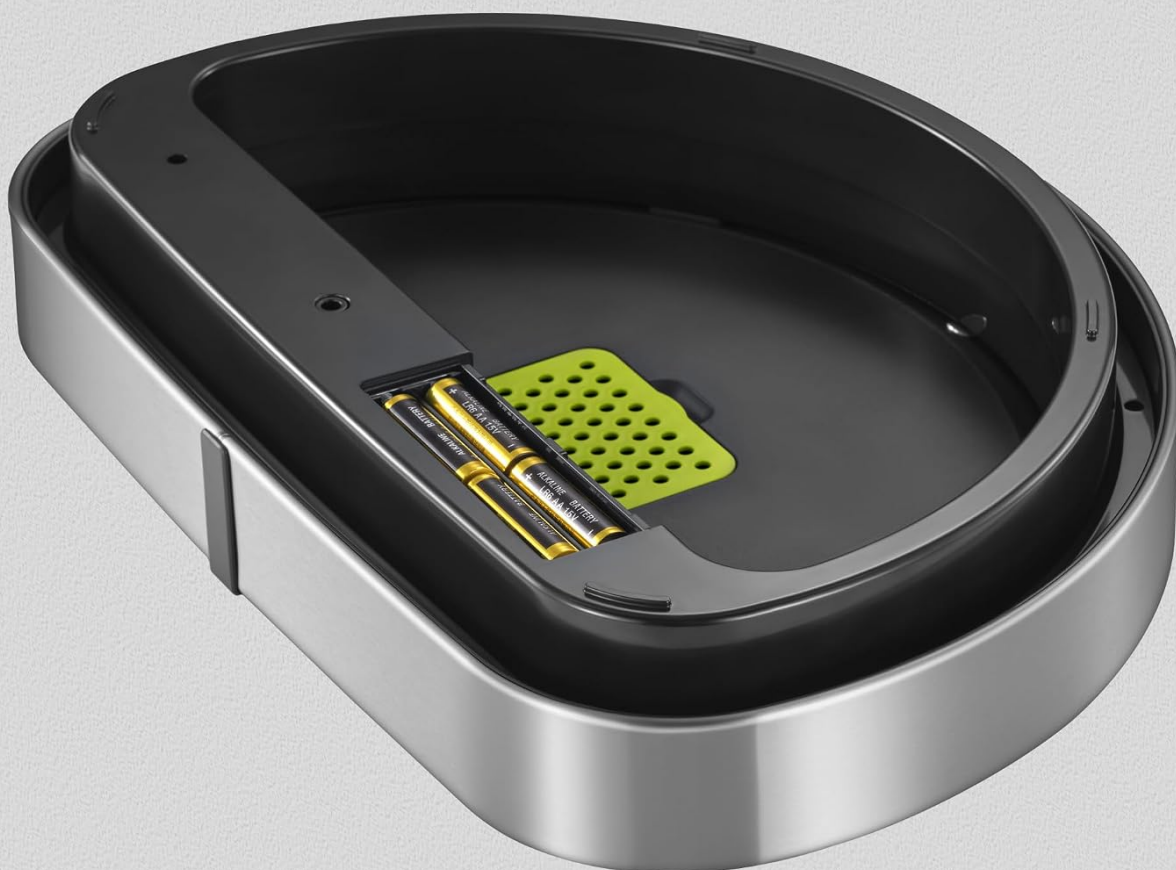

The battery compartment, located in the lid, requires 4 AA alkaline batteries for up to 8 months of operation. Rechargeable batteries are not recommended.

3. **Inner Bucket Placement:** Place the removable inner bucket inside the main body of the trash can.
4. **Lid Placement:** Carefully place the lid onto the trash can body, ensuring it is seated correctly.
5. **Trash Bag Installation:**

Lift the lid. Place a trash bag into the inner bucket, folding the edges over the rim to secure it. Lower the lid.

6. Deodorizer Installation (Optional):

Open the deodorizer compartment located on the underside of the lid. Insert an EKO carbon filter (sold separately or included as a sample). Close the compartment.



A built-in deodorizer compartment helps to control odors, designed for use with EKO carbon filters.

5. OPERATING INSTRUCTIONS

5.1 Motion Sensor Operation

The trash can features an infrared motion sensor for hands-free operation.

- To open the lid, simply wave your hand or approach the sensor area (approximately 30 cm / 11.8 inches) above the lid.
- The lid will open quickly (0.2 seconds reaction time) and remain open for 5 seconds.
- After 5 seconds of inactivity, the lid will close gently and quietly.

Fast, Accurate Sensor Response



0.2sec
Reaction Time




30 cm/11.8 inch
Sensor Range



The motion sensor on the EKO Mirage trash can detects hand movement within 30 cm (11.8 inches) for a fast 0.2-second lid opening.

Whisper-Quiet Gentle Operation

Enjoy uninterrupted tranquility with silent soft open and close

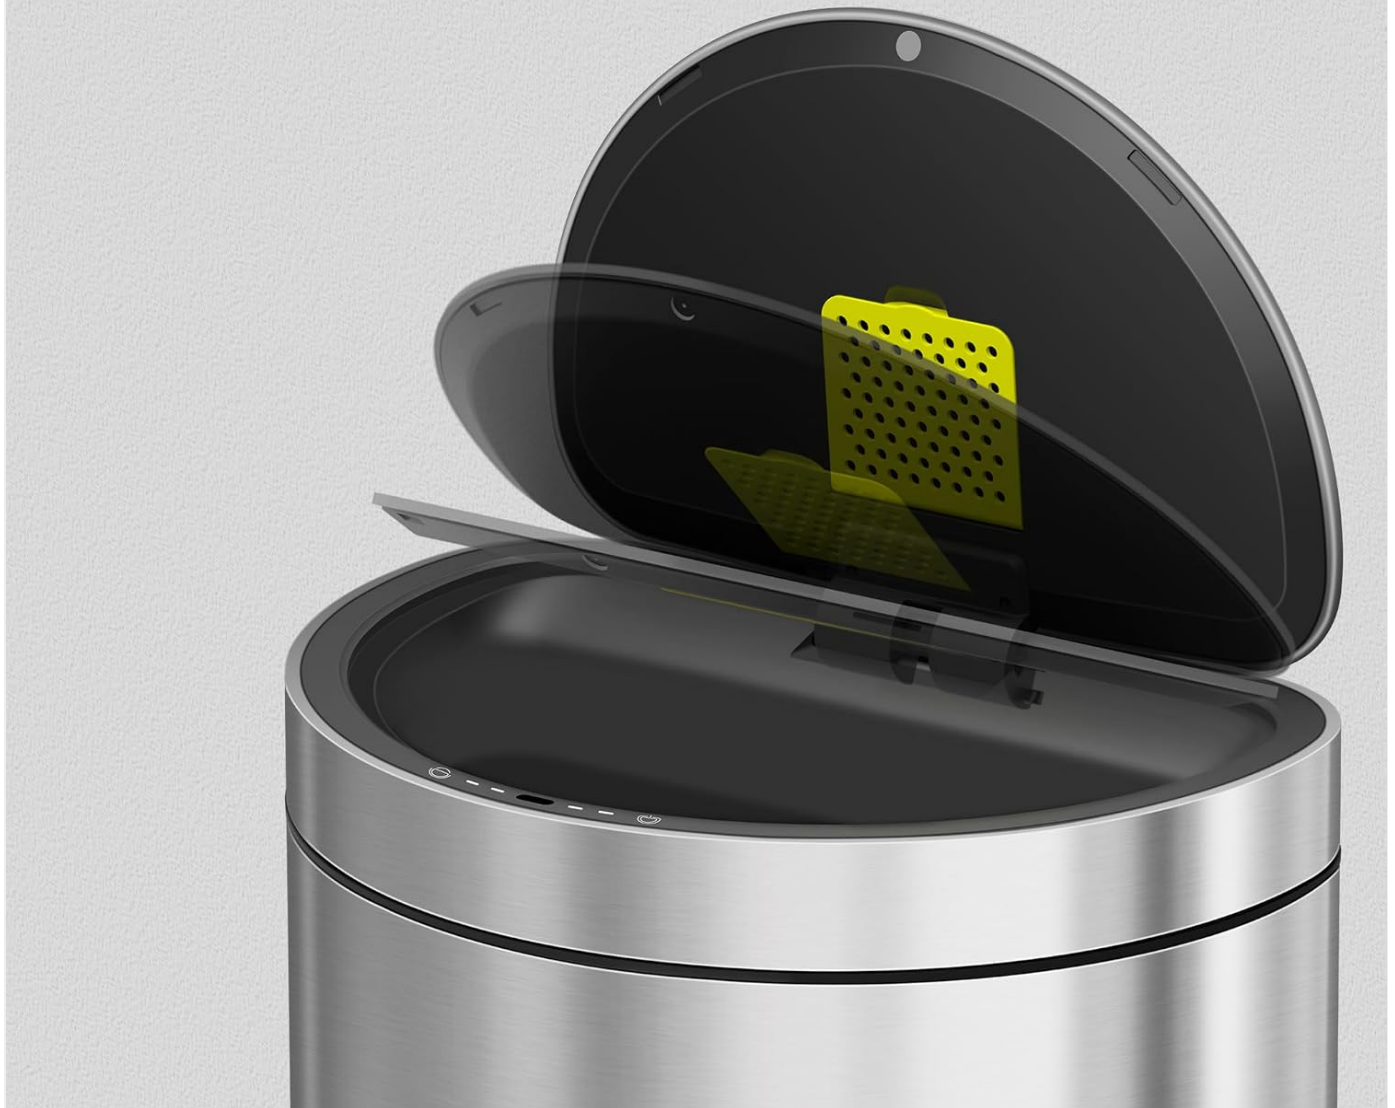

The lid features a soft-closing mechanism for quiet and gentle operation, preventing sudden slams.

5.2 Manual Stay-Open Function

For longer tasks, you can manually keep the lid open.

- Press the designated "Open" button on the lid. The lid will open and remain open.
- The lid will automatically close after 20 minutes if no sensor activation occurs, or you can press the "Close" button to close it manually.

6. MAINTENANCE

6.1 Cleaning

- **Exterior:** Wipe the stainless steel exterior with a soft, damp cloth and a mild detergent. Avoid abrasive cleaners or scouring pads to prevent scratching the fingerprint-resistant finish.
- **Lid:** The lid is removable for easy cleaning. Wipe with a damp cloth. Do not immerse the lid in water.

- **Inner Bucket:** The inner bucket can be removed and washed with soap and water. Ensure it is completely dry before placing it back into the trash can.

Build to Last

Robust, full stainless steel construction with ultra-matte fingerprint resistant finish.



Constructed from robust stainless steel with a fingerprint-resistant finish, ensuring durability and a clean appearance.

6.2 Battery Replacement

When the lid operation becomes slow or inconsistent, it's time to replace the batteries. Refer to Section 4 for battery installation instructions. Always use 4 new AA alkaline batteries. Do not mix old and new batteries, or different types of batteries. Rechargeable batteries are not recommended.

6.3 Deodorizer Filter Replacement

Replace the carbon filter in the deodorizer compartment every 3-6 months, or as needed, to maintain optimal odor control. EKO carbon filters are available separately.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lid does not open or close.	Batteries are dead or incorrectly installed. Power switch is off. Sensor is obstructed or dirty.	Replace batteries with new AA alkaline batteries, ensuring correct polarity. Ensure the power switch (usually on the back or underside of the lid) is in the "ON" position. Clean the sensor window with a soft, dry cloth. Remove any obstructions.
Lid opens unexpectedly or frequently.	Sensor is too sensitive or in a high-traffic area. Direct sunlight or strong artificial light interfering with the sensor.	Relocate the trash can to an area with less foot traffic. Ensure the sensor is not exposed to direct sunlight or strong overhead lighting.
Lid closes too quickly or slowly.	Low battery power.	Replace batteries with new AA alkaline batteries.
Odor is still present.	Deodorizer filter needs replacement. Deodorizer compartment is not closed properly.	Replace the carbon filter. Ensure the deodorizer compartment is securely closed.

8. SPECIFICATIONS

Brand	EKO
Model Number	EK9331MMT-47L
Capacity	47 Liters / 12.4 Gallons
Dimensions (L x W x H)	19" x 14" x 28"
Material	Stainless Steel
Opening Mechanism	Motion-Sensor
Power Source	4 AA Alkaline Batteries (not included)
Special Features	Motion Sensor, Odor Seal, Quiet Close, Removable Bucket, Removable Lid, Fingerprint Resistant Finish, Ergonomic Handle

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official EKO website or contact EKO customer service directly. Keep your purchase receipt as proof of purchase.

EKO Official Website: [Visit the EKO Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D32NVHFJ>

More documents and user manuals: **<https://manuals.plus/>**