



[Manuals.plus](#) /

› [EKO](#) /

› EKO Essential Dual Trash Can Instruction Manual

EKO EK9125XMT-30L+30L

EKO Essential Dual Trash Can Instruction Manual

Model: EK9125XMT-30L+30L

INTRODUCTION

Thank you for choosing the EKO Essential Dual Trash Can. This manual provides comprehensive instructions for the setup, operation, and maintenance of your new trash can. Designed for modern living, this dual-compartment system allows for efficient waste and recycling separation, contributing to a cleaner and more organized home environment. Please read this manual thoroughly before use to ensure proper function and longevity of your product.



Image: The EKO Essential Dual Trash Can in brushed stainless steel, showcasing its sleek design and dual pedal system.

PRODUCT FEATURES

- **Dual Pedal Recycler:** Features two independent pedals for effortless sorting of trash and recyclables into separate inner bins.
- **Premium Resin & Stainless Steel Construction:** A robust stainless steel body combined with a durable resin lid ensures longevity and a sophisticated aesthetic.
- **Ultimate Fingerprint Resistance:** The anti-fingerprint finish maintains a clean and polished exterior, reducing smudges and marks.
- **Streamlined Design:** Space-conscious rectangular shape allows the can to fit snugly against walls, optimizing kitchen layout.
- **Durable Foot Pedals:** Stainless steel foot pedals are engineered for durability, tested to withstand over 200,000 uses for

reliable operation.

- **Removable Inner Buckets:** Two black inner bins are easily removable for convenient waste disposal and cleaning.
- **Quiet-Close Lids:** Equipped with a damper-controlled soft-close mechanism for smooth, silent operation.
- **Odor Seal:** Lids are designed to seal in odors, maintaining a fresh environment.




Double Bin with Dual Lids

Two Inner Buckets for Easy Waste Sorting, Each with a Lid to Seal in Odors.

Image: Close-up view of the dual bins with independent lids, designed for easy waste sorting and odor sealing.

SETUP

1. **Unpack the Unit:** Carefully remove the trash can from its packaging. Inspect for any damage.
2. **Remove Inner Buckets:** Open the lids using the foot pedals and lift out the two inner black buckets.
3. **Insert Trash Bags:** Place appropriate size trash bags (e.g., 8-gallon for each compartment) into the inner buckets. Ensure the bag rim is tucked securely under the bag fixer hole inside the bucket to prevent overhang.
4. **Replace Inner Buckets:** Carefully lower the filled inner buckets back into their respective compartments within the stainless steel outer shell.
5. **Position the Trash Can:** Place the trash can in your desired location. Its streamlined design allows it to sit flush against a wall.

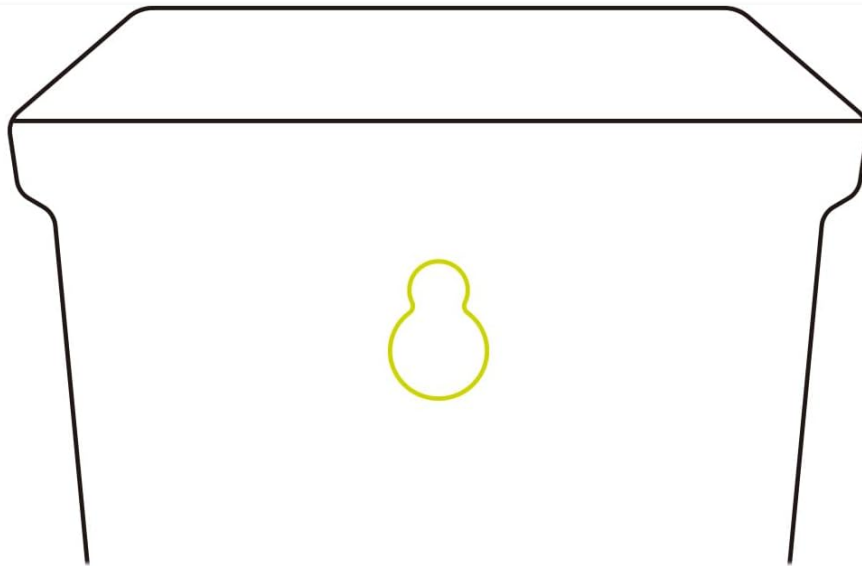

No Overhang with Bag Fixer



Image: Illustration of the internal bag fixer mechanism, ensuring trash bags are neatly secured without unsightly overhang.

OPERATING INSTRUCTIONS

1. **Opening the Lid:** Gently press down on the corresponding foot pedal for the desired compartment (left for recycling, right for trash). The lid will open smoothly.
2. **Disposing of Waste:** Place your waste or recyclables into the open inner bucket.
3. **Closing the Lid:** Release the foot pedal. The lid will slowly and silently close due to the soft-close mechanism. Avoid forcing the lid shut.
4. **Keeping Lids Open (for extended use):** The lids can be manually lifted and will stay in an upright position for longer tasks, such as changing bags or scraping food waste.

Soft close lid for smooth, silent operation.



Fingerprint resistant



Damper controlled soft close



Image: Visual representation of the soft-close lid mechanism, demonstrating its smooth and silent operation.

MAINTENANCE

- **Cleaning the Exterior:** Wipe the brushed stainless steel exterior with a soft, damp cloth and a mild, non-abrasive cleaner. The fingerprint-resistant coating minimizes the need for frequent cleaning.
- **Cleaning Inner Buckets:** Remove the inner buckets. Wash them with warm, soapy water. Rinse thoroughly and dry completely before placing them back into the trash can.
- **Odor Control:** Regularly empty the trash can to prevent odor buildup. The integrated odor seal helps contain smells

between emptying.

- **Pedal Care:** The durable stainless steel pedals require minimal maintenance. Avoid excessive force when operating to ensure smooth long-term function.



Durable and Convenient

Our trash can features removable inner buckets for easy cleaning and a secure bag lock system, ensuring a neat and tidy appearance.

Image: The removable inner buckets, highlighting their convenience for cleaning and bag replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lid not opening/closing smoothly.	Obstruction in hinge mechanism or pedal.	Check for any debris or objects obstructing the lid or pedal mechanism. Clean if necessary.
Odors present despite lid being closed.	Inner buckets are full or require cleaning.	Empty and clean the inner buckets thoroughly. Ensure lids are fully closed.
Trash bag slips into the bin.	Bag not properly secured.	Ensure the trash bag rim is fully tucked into the bag fixer hole inside the inner bucket.

SPECIFICATIONS

Brand: EKO

Model: EK9125XMT-30L+30L (2024 Version)

Capacity: 16 Gallons (8 Gallons per compartment) / 30L + 30L

Color: Brushed Stainless Steel

Material: Stainless Steel (body), Resin (lid)

Opening Mechanism: Step-On (Dual Pedals)

Product Dimensions: 23"L x 17"W x 30"H

Item Weight: 28 pounds

Special Features: Dual Compartment, Removable Bucket, Heavy Duty, Quiet Close, Odor Seal, Fingerprint Resistant

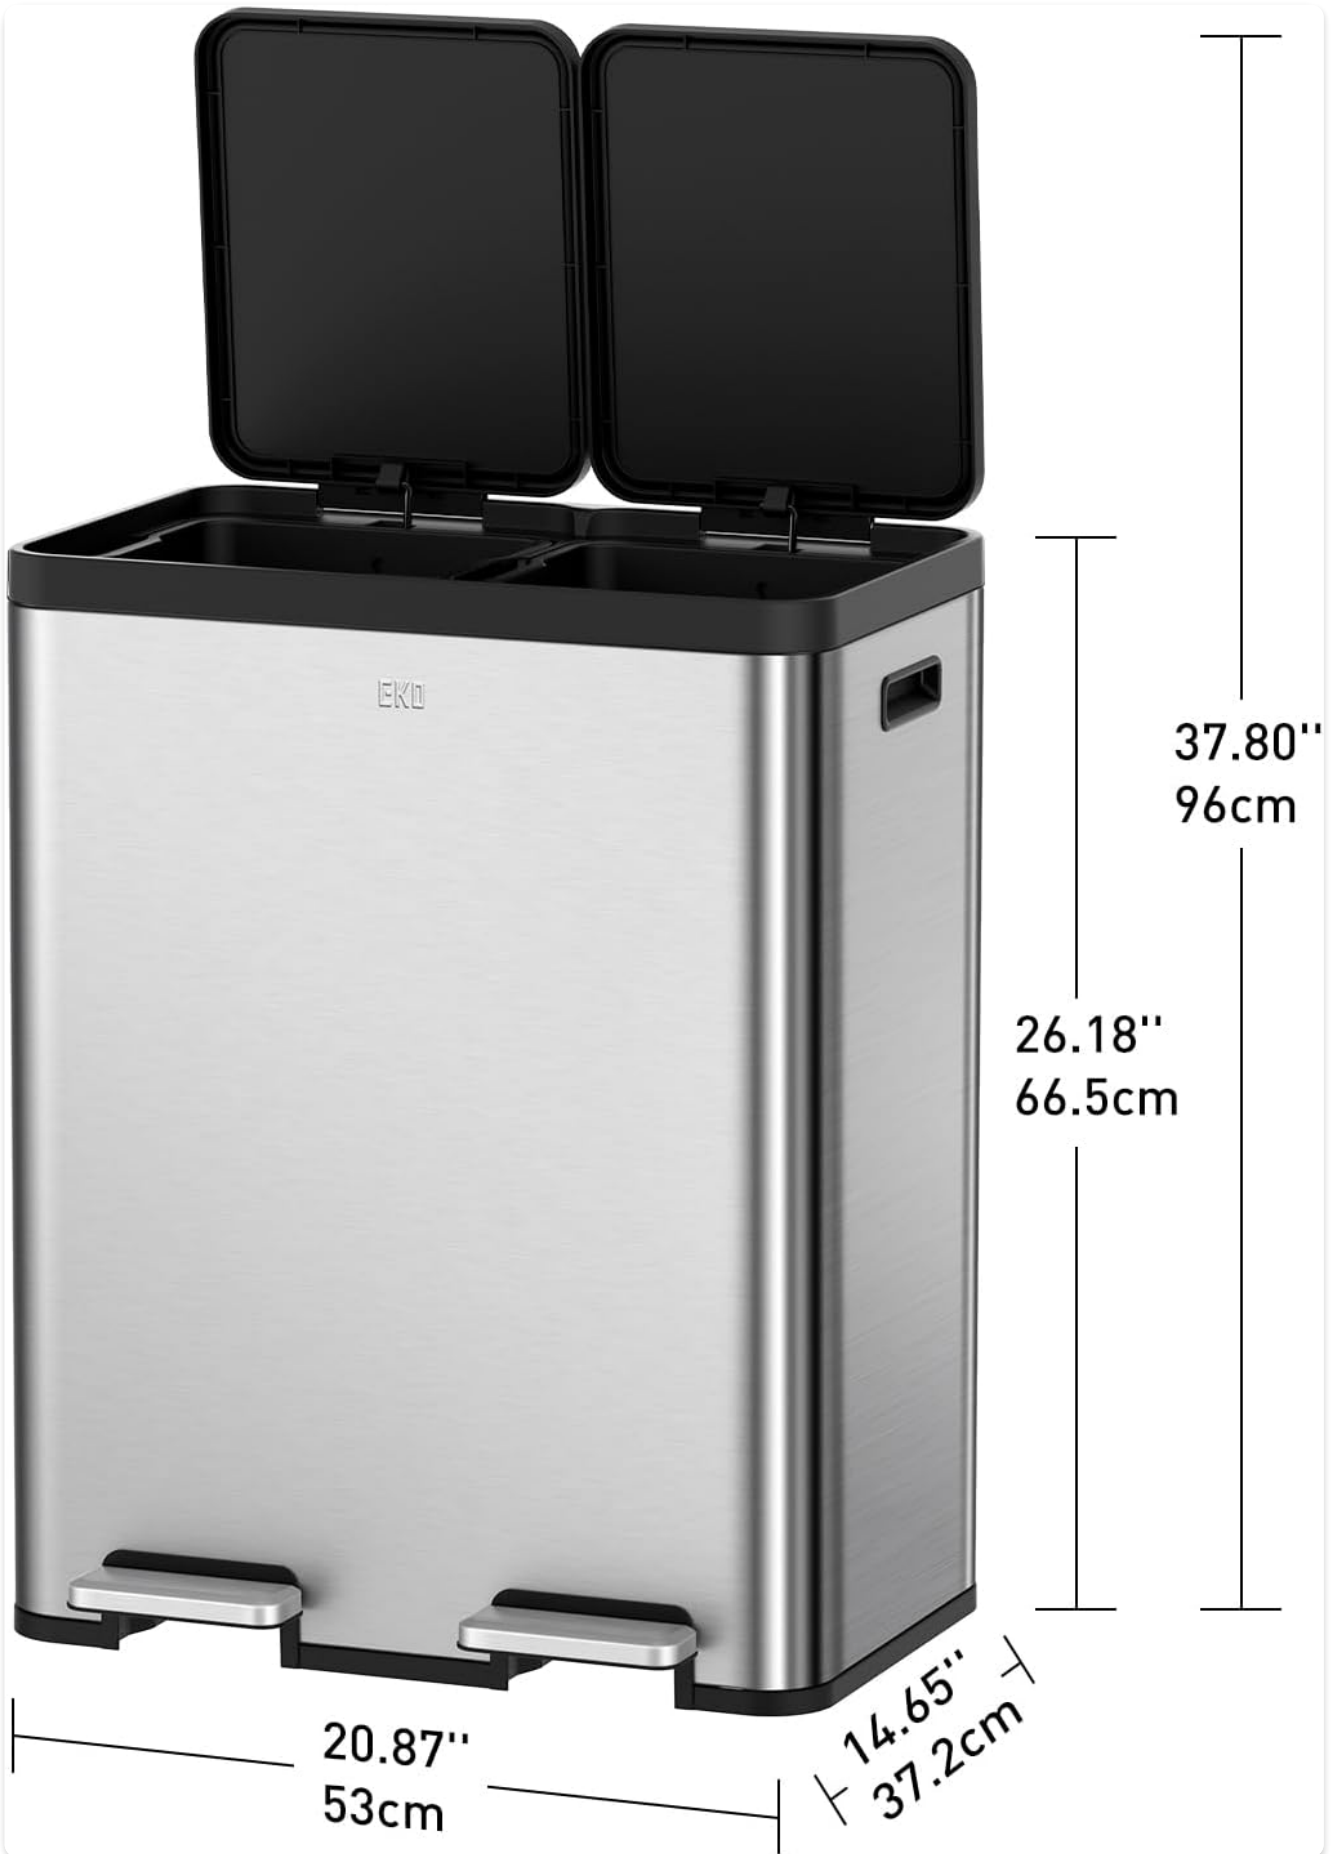


Image: Detailed dimensions of the EKO Essential Dual Trash Can, illustrating its compact and space-saving design.

For further assistance or inquiries, please contact EKO customer support.

© 2024 EKO. All rights reserved.