

[manuals.plus](#) /

› [IKEA](#) /

› [IKEA MITTZON Folding Table with Casters 905.279.55 User Manual](#)

IKEA 905.279.55

IKEA MITTZON Folding Table with Casters User Manual

Model: 905.279.55

1. INTRODUCTION

Thank you for choosing the IKEA MITTZON Folding Table with Casters. This manual provides essential information for the safe assembly, operation, and maintenance of your new table. Please read these instructions carefully before use and retain them for future reference.

This table, model 905.279.55, is designed for versatility and ease of movement, featuring a white finish and dimensions of 140x70 cm.



An image showing the IKEA MITTZON folding table in its unfolded state, featuring its white tabletop and legs with casters.

2. SAFETY INFORMATION

To ensure safe use of your MITTZON folding table, please observe the following safety guidelines:

- Always ensure the table is placed on a level surface to prevent tipping.
- Do not exceed the maximum weight capacity of the table. Distribute weight evenly.
- Before moving the table, ensure all items are removed from the tabletop.
- Always lock the casters when the table is in its desired position to prevent unintended movement.
- Keep fingers clear of folding mechanisms when folding or unfolding the table to avoid pinching.
- Regularly check all fittings and connections to ensure they are tight. Retighten as necessary.
- Do not allow children to play on or around the table unsupervised, especially during folding/unfolding.

3. SETUP AND ASSEMBLY

The MITTZON folding table requires minimal assembly. Follow these steps to prepare your table for use:

- 1. Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are present.
- 2. Attach Casters (if separate):** If the casters are not pre-attached, insert them firmly into the designated holes at the bottom of the table legs. Ensure they click into place or are securely fastened according to the included hardware.
- 3. Unfold the Table:**
 - Place the table on its side or upside down on a soft, clean surface to protect the tabletop.
 - Carefully extend the legs until they are fully open and locked into position. Listen for a click or ensure the locking mechanism is engaged.
 - Gently flip the table upright.
- 4. Lock Casters:** Once the table is in its desired location, press down on the locking levers on at least two of the casters to prevent the table from rolling.

Note: If any parts are missing or damaged, do not proceed with assembly. Contact customer support.

4. OPERATING INSTRUCTIONS

4.1 Unfolding the Table

- Ensure the area around the table is clear.
- If the casters are locked, unlock them by lifting the levers.
- Gently pull the table legs outwards until they fully extend and the locking mechanism engages.
- Verify that all legs are securely locked in the open position before placing any items on the table.

4.2 Folding the Table

- Remove all items from the tabletop.
- Unlock the casters if they are engaged.
- Locate the folding release mechanism (usually a lever or button) on each leg or leg assembly.
- Activate the release mechanism and carefully fold the legs inwards towards the tabletop. Ensure fingers are clear of moving parts.
- Once folded, the table can be stored upright or flat, depending on its design.

4.3 Using Casters

- Moving the Table:** Unlock the casters by lifting the levers. Gently push the table to its new location.
- Securing the Table:** Once the table is in position, press down on the locking levers on at least two casters to prevent accidental movement.

5. MAINTENANCE

5.1 Cleaning

- Wipe the table surface and legs with a damp cloth.
- For stubborn stains, use a mild soap solution. Avoid abrasive cleaners or harsh chemicals, as they may damage the finish.
- Dry thoroughly with a clean cloth.

5.2 Regular Inspection

- Periodically check all screws, bolts, and fasteners to ensure they are tight. Retighten as needed to maintain stability.
- Inspect the folding mechanism and casters for any signs of wear or damage.
- If any part is damaged, discontinue use and replace the part or contact customer support.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Table is wobbly or unstable.	Loose fasteners; uneven surface; legs not fully locked.	Ensure all screws are tightened. Move table to a level surface. Verify legs are fully extended and locked.
Casters do not lock.	Locking mechanism obstructed or damaged.	Clear any debris from the caster mechanism. If damaged, consider replacing the caster.
Difficulty folding/unfolding the table.	Mechanism stiff or obstructed; incorrect procedure.	Ensure no objects are obstructing the mechanism. Apply light lubricant if stiff. Review operating instructions.

7. SPECIFICATIONS

Feature	Detail
Brand	IKEA
Model Name	MITTZON Folding Table with Casters
Model Number	905.279.55
Color	White
Dimensions (Approx.)	140 cm (Length) x 70 cm (Width)
Table Design	Dining Table

8. WARRANTY AND SUPPORT

Please note that this product is not covered by IKEA's standard 10-year warranty.

For any questions regarding assembly, parts, or general inquiries, please refer to the retailer from whom you purchased this product.