

## Wahl 3026017

# Wahl Pro Series Forever Blade Rechargeable Beard Trimmer - Model 3026017 Instruction Manual

Brand: Wahl

[Product Overview](#)

[Safety Information](#)

[What's in the Box](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. PRODUCT OVERVIEW

---

The Wahl Pro Series Forever Blade Trimmer, Model 3026017, is a cordless rechargeable beard trimmer designed for precision grooming. It features a durable stainless steel body with a no-slip silicone grip for enhanced control. The innovative Forever Blade, coated with Black Diamond Hard Carbon, ensures a smoother, cooler, and closer cut. This waterproof trimmer is powered by Lithium Ion 2.0+ technology, providing extended runtime and convenient USB charging.



Figure 1: Wahl Pro Series Forever Blade Trimmer, Model 3026017.

## 2. SAFETY INFORMATION

---

- Always remove the trimmer from the charger before use.
- Avoid full immersion in water, except for cleaning as specified.
- Do not use on infants or children.
- Be cautious of flying particles during use.
- Clean any testing particles from the blade before first use.
- Always unplug the charger when not in use.
- Allow the trimmer to cool down before storing or cleaning.
- Do not use the trimmer if the cord or plug is damaged.
- Always keep the trimmer away from water sources while charging.

## 3. WHAT'S IN THE BOX

---

Your Wahl Pro Series Trimmer kit includes the following components:

- Wahl Pro Series Trimmer (Model 3026017)

- Forever Blade (Black Diamond Hard Carbon Coated)
- 6 T-blade guide combs (1/16" to 1/2")
- 10-position adjustable guide comb (2mm to 11mm)
- USB Charging Cable
- Protective Storage Case
- Cleaning Brush
- Blade Oil
- Styling Comb



Figure 2: All contents included in the Wahl Pro Series Trimmer kit.

## 4. SETUP

### 4.1 Initial Charging

Before first use, fully charge your trimmer. The Lithium Ion 2.0+ technology provides up to 3.5 hours of continuous runtime on a full charge. Use the provided USB charging cable to connect the trimmer to a compatible USB power source.

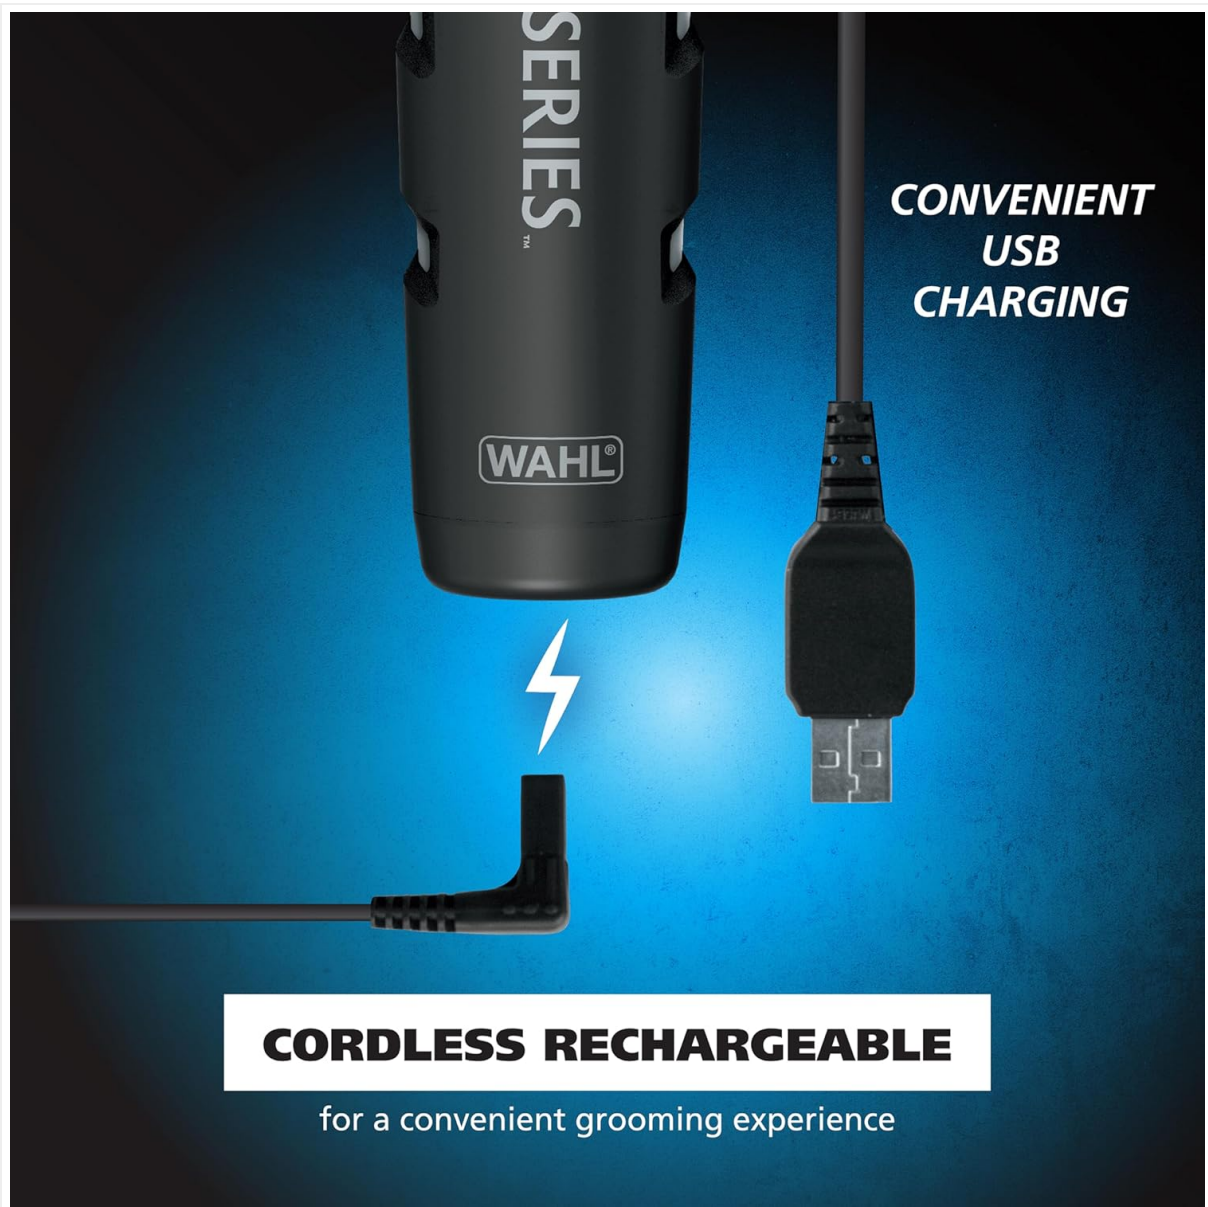


Figure 3: Connecting the USB charging cable to the trimmer.

#### 4.2 Attaching Guide Combs

Select the desired guide comb for your preferred trimming length. The kit includes 6 T-blade guide combs (1/16" to 1/2") and a 10-position adjustable guide comb (2mm to 11mm). To attach, align the comb with the trimmer blade and press firmly until it clicks into place. To remove, gently pull the comb away from the blade.



## 6 PREMIUM GUIDE COMBS

choose from a variety of guide comb lengths from 1/16" to 1/2" to achieve the style you're looking for

Figure 4: Various guide combs for different trimming lengths.

## ALL-IN-ONE GUARD

The Brand Used  
By Professionals®



### 10 POSITION ADJUSTABLE GUIDE

provides cutting lengths between 2mm and 11mm

Figure 5: The adjustable guide comb offers precise length control.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Powering On/Off

Press the power button located on the front of the trimmer to turn it on. Press the button again to turn it off.

### 5.2 Trimming Techniques

For an even trim, always move the trimmer against the direction of hair growth. Use light pressure and ensure the flat side of the guide comb is fully in contact with your skin.

- **Beard Trimming:** Start with a longer guide comb and gradually reduce the length until your desired style is achieved.
- **Detailing and Edging:** Remove the guide comb for precise lines and sharp edges. Hold the trimmer perpendicular to the skin for clean lines.
- **Waterproof Use:** The trimmer is fully waterproof. It can be used in the shower for convenience or rinsed under the tap for easy cleanup.



Figure 6: The trimmer is fully waterproof for use in wet conditions.

## 6. MAINTENANCE

---

### 6.1 Cleaning the Trimmer

1. Turn off the trimmer and remove any attached guide comb.
2. To remove the blade, gently push the blade assembly forward from the top until it detaches.
3. Rinse the blade and the trimmer body under running water to remove hair clippings.
4. Use the provided cleaning brush to remove any stubborn hair from the blade and internal components.
5. Allow all parts to air dry completely before reassembling.
6. To reattach the blade, align it with the trimmer body and press firmly until it snaps into place.

### 6.2 Oiling the Blades

For optimal performance and longevity, apply a few drops of the included blade oil to the teeth of the trimmer blade after every few uses or after cleaning. Turn the trimmer on for a few seconds to allow the oil to distribute evenly.

## 7. TROUBLESHOOTING

---

- **Trimmer not turning on:** Ensure the trimmer is fully charged. Check the USB charging cable for damage.
- **Poor cutting performance / pulling hair:** Clean the blades thoroughly and apply blade oil. Ensure the correct guide comb is properly attached. The blade may need replacement if it's dull (refer to warranty).
- **Battery not holding charge:** Ensure the trimmer is charged using the provided USB cable. If issues persist, contact customer support.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Number	3026017
Blade Type	Forever Blade with Black Diamond Hard Carbon Coating
Body Material	Stainless Steel with No-Slip Silicone Grip
Power Source	Battery Powered (Lithium Ion 2.0+)
Run Time	Up to 3.5 hours on a full charge
Charging	USB Charge
Waterproof	Fully Waterproof
Guide Combs	6 T-blade (1/16" - 1/2"), 1 adjustable (2mm - 11mm)
Item Weight	0.54 Kilograms (1.19 Pounds)
Package Dimensions	10.51 x 4.8 x 3.31 inches

## 9. WARRANTY & SUPPORT

---

For warranty information, product support, or to find tutorials, please refer to the product packaging or visit the official Wahl USA website. Contact information can typically be found on the product packaging and in the included instruction booklet.

Wahl clippers and trimmers have been trusted by professionals since 1919, reflecting a commitment to quality and durability.

For product tutorials, visit [wahlusa.com](http://wahlusa.com) under each main category.