

[Manuals.plus](#) /

› [Peach Street](#) /

› Peach Street Multi-Use Immersion Blender Set 800W - Instruction Manual

Peach Street PE-207

Peach Street Multi-Use Immersion Blender Set

MODEL: PE-207 - INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the Peach Street Multi-Use Immersion Blender Set. This versatile 3-in-1 appliance is designed to simplify your kitchen tasks, offering blending, whisking, and chopping functionalities. Equipped with a powerful 800W motor, stainless steel blades, and ergonomic design, it provides efficient and consistent results for a variety of recipes. This manual provides essential information for the safe and effective use, maintenance, and care of your new immersion blender set. Please read it thoroughly before first use and retain it for future reference.



Image 1.1: Overview of the Peach Street Immersion Blender Set and its components.

2. Important Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

1. Read all instructions before using the appliance.
2. Do not immerse the motor unit in water or other liquids. Clean only with a damp cloth.
3. Keep hands, hair, clothing, and utensils away from moving blades during operation to prevent injury.
4. Always unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
5. This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities unless supervised.
6. Avoid contact with moving parts. Blades are sharp; handle with care.
7. Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or

damaged in any manner.

8. Do not use outdoors.
9. Do not operate the blender continuously for more than 60 seconds to prevent motor overheating. Allow a cool-down period between uses.
10. Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.

3. Components Overview

Your Peach Street Immersion Blender Set includes the following parts:

- **Motor Unit:** The main body containing the 800W motor and control buttons.
- **Blender Stick:** Stainless steel shaft with a 4-point blade for immersion blending.
- **Whisk Attachment:** For whipping and aerating ingredients.
- **Chopper Bowl:** A container for chopping ingredients.
- **Chopper Blade:** Sharp blade for use within the chopper bowl.
- **Chopper Lid:** Secures the chopper blade and connects to the motor unit.
- **Beaker:** A 600ml measuring cup for blending or mixing.

Versatile Functions

Blend, mix, and beat in a fraction of the time.



Image 3.1: Labeled components of the Immersion Blender Set.

4. Setup and Assembly

Before first use, wash all parts that will come into contact with food (blender stick, whisk, chopper bowl, chopper blade, beaker) in warm soapy water, then rinse and dry thoroughly.

4.1 Attaching/Detaching Accessories

1. **To attach:** Align the motor unit with the desired attachment (blender stick, whisk adapter, or chopper lid). Twist clockwise until it locks securely into place.
2. **To detach:** Twist counter-clockwise and pull the attachment away from the motor unit.

Detachable Parts

All parts easily attaches and detaches from base



Image 4.1: Detachable parts for easy assembly and cleaning.

5. Operating Instructions

Always ensure the appliance is unplugged before changing attachments.

5.1 Immersion Blending

1. Attach the blender stick to the motor unit.
2. Immerse the blender stick into the ingredients in a pot, beaker, or suitable container. Ensure the blade guard is fully submerged to prevent splashing.
3. Plug the appliance into a power outlet.
4. Press and hold the **Normal Speed** button for continuous blending. For tougher ingredients or a quicker blend, press and hold the **TURBO** button.
5. Move the blender up and down gently to ensure all ingredients are processed evenly.

6. Release the button to stop operation.

7. Unplug the appliance before removing the blender stick from the ingredients.



Image 5.1: Using the immersion blender for soups.



Image 5.2: The blender head design minimizes splatter.

5.2 Whisking

1. Attach the whisk adapter to the motor unit, then attach the whisk to the adapter.
2. Place the whisk into the ingredients (e.g., eggs, cream) in a bowl.
3. Plug the appliance into a power outlet.
4. Press and hold the **Normal Speed** or **TURBO** button to whisk.
5. Release the button to stop operation.
6. Unplug the appliance before removing the whisk.

5.3 Chopping

1. Carefully place the chopper blade onto the central pin inside the chopper bowl.
2. Add ingredients to the chopper bowl. Do not overfill.
3. Place the chopper lid onto the chopper bowl, ensuring it is securely seated.

- 4. Attach the motor unit to the chopper lid.
- 5. Plug the appliance into a power outlet.
- 6. Press and hold the **Normal Speed** or **TURBO** button in short pulses until desired consistency is achieved.
- 7. Release the button to stop operation.
- 8. Unplug the appliance, detach the motor unit, remove the chopper lid, and carefully remove the chopper blade before emptying the bowl.

6. Care and Cleaning

Proper cleaning ensures the longevity and hygiene of your appliance.

- **Motor Unit:** Never immerse the motor unit in water or any other liquid. Wipe the exterior with a damp cloth and mild detergent, then dry thoroughly.
- **Blender Stick, Whisk, Chopper Bowl, Chopper Blade, Beaker:** These parts are dishwasher-safe. Alternatively, wash them in warm soapy water, rinse, and dry immediately. Handle blades with extreme caution.
- For stubborn food residue on the blender stick, fill the beaker with warm soapy water, immerse the blender stick, and briefly run the blender on low speed. Then rinse under running water.
- Store the appliance and its accessories in a dry place.

7. Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; motor unit not properly attached to accessory.	Ensure the appliance is securely plugged into a working outlet. Check if the motor unit is correctly locked onto the attachment.
Motor stops during operation or overheats.	Overloaded with ingredients; continuous operation for too long.	Reduce the amount of ingredients. Do not operate for more than 60 seconds continuously. Allow the motor to cool down for several minutes before resuming use.
Ingredients are not blending/chopping effectively.	Too little liquid; ingredients too large; blade not fully submerged (blender stick).	Add more liquid if blending. Cut ingredients into smaller pieces. Ensure the blender stick's blade guard is fully submerged.
Attachments are difficult to attach/detach.	Misalignment; food residue.	Ensure proper alignment before twisting. Clean any food residue from connection points.

8. Specifications

- **Brand:** Peach Street
- **Model:** PE-207
- **Power:** 800 Watts
- **Voltage:** 120 Volts
- **Number of Speeds:** 2 (Normal, Turbo)

- **Beaker Capacity:** 600 Milliliters
- **Product Dimensions:** 3.5"D x 3.5"W x 15"H
- **Item Weight:** 3.07 pounds
- **Special Features:** Compact, Ergonomic Handle, Multiple Speeds, Turbo Boost
- **Included Components:** Blender Attachment, Blender Machine, Chopper, Whisk Attachment
- **UPC:** 810087040123



Image 8.1: Product dimensions and detachable design.

9. Warranty and Support

This Peach Street Immersion Blender Set comes with a limited warranty. For specific details regarding the warranty period and coverage, please refer to the product packaging or contact the seller directly.

For any questions, technical assistance, or warranty claims, please contact Peach Street customer support through the retailer where the product was purchased. Please have your model number (PE-207) and proof of purchase available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question