

[manuals.plus](#) /

› [Electrolux](#) /

› [Electrolux Serie 600 EES68615L Total Integrated Dishwasher User Manual](#)

Electrolux EES68615L

Electrolux Serie 600 EES68615L Total Integrated Dishwasher User Manual

Model: EES68615L

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Electrolux Serie 600 EES68615L total integrated dishwasher. Please read these instructions carefully before installation and use, and keep them for future reference.



Figure 1: Front view of the Electrolux Serie 600 EES68615L Total Integrated Dishwasher.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. This appliance is intended for domestic use only.

2.1 General Safety

- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it is damaged.

- Keep children away from the appliance during operation.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Sharp items should be loaded with points and edges down to prevent injury.

2.2 Electrical Safety

- Do not pull the power cord to disconnect the appliance. Always grasp the plug firmly.
- Do not touch the plug with wet hands.
- Ensure the electrical outlet is suitable for the appliance's power requirements.

2.3 Water Safety

- Check water hoses regularly for signs of wear or damage.
- Ensure water connections are tight to prevent leaks.

3. SETUP AND INSTALLATION

The Electrolux EES68615L is a total integrated dishwasher designed to blend seamlessly with your kitchen cabinetry. It requires professional installation. Please note that the decorative front panel and handle are not included with the appliance and must be supplied separately to match your kitchen design.



Risparmia energia

L'ecometro ti guida visivamente nella scelta del programma più efficiente dal punto di vista idrico ed energetico

Figure 2: The dishwasher installed as a built-in unit within kitchen furniture. The front panel is not supplied with the appliance.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage incurred during transit. Report any damage to your retailer immediately.

3.2 Water and Electrical Connections

Ensure water supply and drainage connections are correctly made according to local plumbing codes. The appliance requires a 220-240V, 50Hz electrical supply. All connections should be performed by a qualified technician.


4. OPERATING INSTRUCTIONS

Your Electrolux EES68615L dishwasher is equipped with advanced features for efficient and effective dishwashing.

4.1 Control Panel and Program Selection

The QuickSelect control panel allows for intuitive program selection. Use the sliding control to adjust the cycle

duration, and the Ecometer will visually guide you to the most water and energy-efficient program for your load.

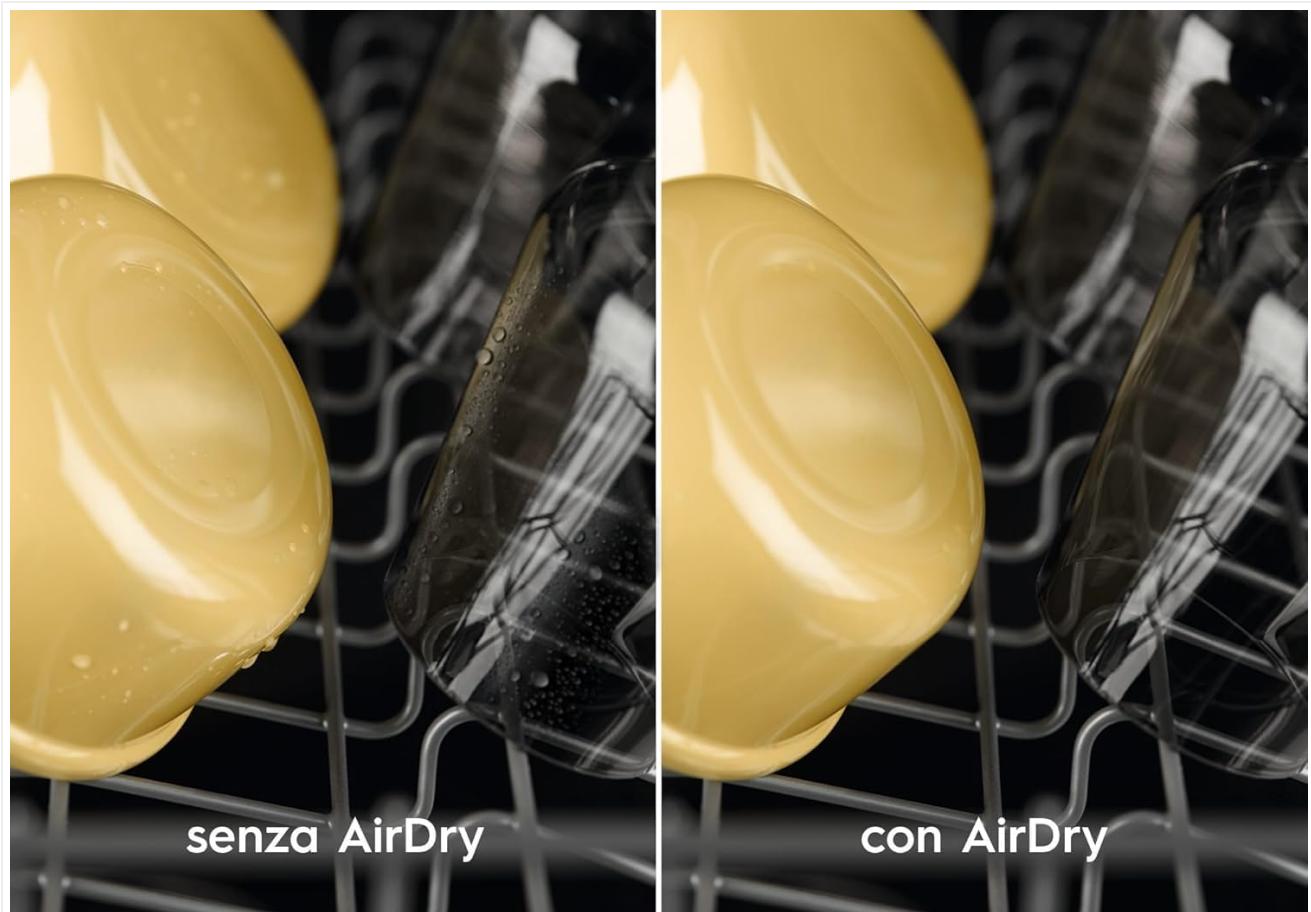

Piatti perfettamente asciutti
La tecnologia AirDry asciuga le stoviglie utilizzando l'aria naturale: ottimi risultati e meno energia

Figure 3: QuickSelect control panel showing the Ecometer for energy saving guidance.



Questo prodotto è ad incasso
Il pannello frontale non è incluso.

Figure 4: Detailed view of the control panel, illustrating program selection and display.

4.2 Loading the Dishwasher

The MaxiFlex cutlery tray provides flexible space for various utensils, from standard cutlery to larger items. Arrange items to ensure water can reach all surfaces.



Figure 5: The MaxiFlex cutlery tray, designed for flexible loading of various utensils.

For delicate glassware, utilize the SoftGrips and SoftSpikes features. These soft materials securely hold glasses in place, preventing damage during the wash cycle.



Figure 6: Glasses held securely by SoftGrips and SoftSpikes in the dishwasher basket.

4.3 Washing Technology

- **SatelliteClean:** This technology ensures thorough cleaning with a satellite spray arm that changes the angle of the water jet, reaching every corner of the dishwasher.
- **ExtraHygiene:** For maximum sanitization, this function maintains a temperature between 65°C and 69°C during the final rinse for at least 10 minutes, removing over 99.99% of bacteria.

4.4 Drying Performance

The AirDry technology automatically opens the dishwasher door slightly at the end of the cycle, allowing natural air to complete the drying process, resulting in perfectly dry dishes and reduced energy consumption.



Figure 7: Visual comparison demonstrating the effectiveness of AirDry technology for superior drying results.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

5.1 Cleaning the Filters

The dishwasher features removable filters. Regularly clean these filters to prevent blockages and maintain wash performance. Refer to the detailed instructions in the full user manual for filter removal and cleaning procedures.

5.2 Descaling

Depending on your water hardness, periodic descaling may be necessary. Use a dishwasher descaler product as recommended by Electrolux to prevent limescale buildup.



Figure 8: Examples of Electrolux descaling and cleaning products for dishwashers.

6. TROUBLESHOOTING

Before contacting service, consult the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Dishes not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes correctly, clean spray arm nozzles, use appropriate detergent, clean filters.
Water leakage	Hose connections loose, door seal damaged, excessive foam.	Check hose connections, inspect door seal for damage, use less detergent.
Excessive noise	Items interfering with spray arms, foreign object in pump, improper installation.	Rearrange dishes, check for foreign objects, ensure proper leveling.

For more detailed troubleshooting, refer to the complete user manual or contact Electrolux customer support.

7. SPECIFICATIONS

Key technical specifications for the Electrolux EES68615L dishwasher:

- **Model Name:** EES68615L
- **Form Factor:** Built-in
- **Dimensions (DxWxH):** 56 cm x 59.6 cm x 81.8 cm
- **Weight:** 37.28 kg
- **Capacity:** 14 Place Settings
- **Noise Level:** 43 Decibels
- **Energy Efficiency Class:** A
- **Number of Programs:** 8 (Optional Cycles)
- **Special Features:** Integrated anti-flood device, Removable filter, Power indicator light
- **Material:** Stainless steel
- **Included Components:** Salt funnel, User manual



Figure 9: Energy label for the Electrolux EES68615L dishwasher, indicating energy class A, 14 place settings, 10.9L water consumption, and 43dB noise level.

8. WARRANTY AND SUPPORT


Your Electrolux EES68615L dishwasher comes with a manufacturer's warranty. The duration of spare parts availability in the EU is 2 years. For specific warranty details and terms, please refer to the warranty card included with your product or visit the official Electrolux website.

For technical assistance, spare parts, or service requests, please contact Electrolux customer support. You can find contact information in the full user manual or on the Electrolux website.

A detailed user manual is included in the box for comprehensive guidance on all aspects of your dishwasher's use and care.

Related Documents - EES68615L

	<p><u>Electrolux EBF3360VWB Fully Integrated Dishwasher Dimension Guide</u></p> <p>Detailed dimension guide for the Electrolux EBF3360VWB Fully Integrated Dishwasher, part of the ULTIMATECARE series. Includes product and cut-out dimensions (width, height, depth) and installation space requirements for this 60cm, 13-place setting appliance.</p>
	<p><u>Guía de Uso y Cuidado de Lavadora de Carga Frontal Electrolux</u></p> <p>Manual completo de uso y cuidado para lavadoras de carga frontal Electrolux. Incluye instrucciones de seguridad, características, funcionamiento, mantenimiento y solución de problemas para las series 300, 400, 500 y 600.</p>

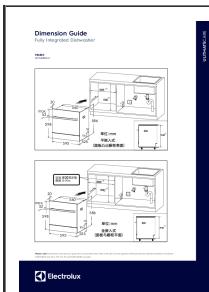

[Electrolux Fully Integrated Dishwasher Dimension Guide - Model EET43200LX](#)

Provides essential installation dimensions for the Electrolux Fully Integrated Dishwasher, model EET43200LX. Includes specifications for both semi-integrated and fully integrated cabinet setups, covering appliance and opening sizes, and utility clearances.




[Manuel d'utilisation et d'entretien de Sécheuse Electrolux](#)

Ce manuel d'utilisation et d'entretien fournit des instructions détaillées pour l'installation, le fonctionnement sûr, l'entretien et le dépannage de votre sécheuse Electrolux. Il couvre les différentes séries de modèles, les cycles de lavage, les options et les conseils de sécurité pour une performance optimale.



[Electrolux Fully Integrated Dishwasher Dimension Guide - EBF3360VWB](#)

Provides dimension details for the Electrolux Fully Integrated Dishwasher, model EBF3360VWB, including product and cut-out dimensions for installation.

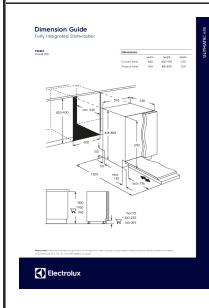

[Electrolux EEM48300L Fully Integrated Dishwasher Dimension Guide](#)

Detailed dimension guide for the Electrolux EEM48300L fully integrated dishwasher, including installation measurements and product specifications for cabinetry and appliance fit.