

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [RYOBI](#) /

› [RYOBI ONE+ HP 18V Brushless Cordless SWIFTClean Mid-Size Spot Cleaner Instruction Manual](#)

RYOBI PBLHV704K

RYOBI ONE+ HP 18V Brushless Cordless SWIFTClean Mid-Size Spot Cleaner

Model: PBLHV704K

[Overview](#)

[Safety Information](#)

[Components](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. PRODUCT OVERVIEW

The RYOBI ONE+ HP 18V Brushless Cordless SWIFTClean Mid-Size Spot Cleaner is designed for efficient spot cleaning of carpets, rugs, and upholstery. This portable unit offers cordless convenience, powered by an 18V battery, and includes various attachments for versatile cleaning tasks.

2. IMPORTANT SAFETY INFORMATION

Read and understand all instructions before using this product. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

- Always wear appropriate personal protective equipment, such as safety glasses, when operating the cleaner.
- Do not immerse the cleaner in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only RYOBI ONE+ 18V batteries and chargers.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Exercise extra care when cleaning on stairs.
- Do not use without tanks and filters in place.
- Store indoors.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, contact customer service.



Figure 3.1: The RYOBI SWIFTClean Mid-Size Spot Cleaner with its complete set of accessories, including the main unit, battery, charger, and various cleaning tools.

- RYOBI ONE+ HP 18V Brushless Cordless SWIFTClean Mid-Size Spot Cleaner
- 4.0 Ah High Performance Battery
- Charger
- 6 oz. OXY Cleaning Concentrate
- 7" Wide Path Nozzle
- Hose Rinse Tool
- Crevice Tool
- Bristle and Rubber Brush Inserts

4. SETUP INSTRUCTIONS

4.1. Charging the Battery

Before first use, ensure the 4.0 Ah High Performance Battery is fully charged using the provided charger. Refer to the charger's instruction manual for detailed charging procedures.



Figure 4.1: The RYOBI SWIFTClean Spot Cleaner with the 4.0 Ah battery securely inserted into its designated slot.

4.2. Inserting the Battery

Slide the charged 4.0 Ah battery into the battery port on the back of the cleaner until it clicks into place. Ensure it is firmly seated.

4.3. Filling the Solution Tank

Remove the clean water tank from the unit. Unscrew the cap and fill the tank with clean water up to the 'FULL TANK' line (36 oz). Add the recommended amount of RYOBI OXY Cleaning Concentrate (typically four capfuls for a full tank). Securely replace the cap and reattach the tank to the cleaner.



Figure 4.2: The solution tank of the RYOBI SWIFTClean Spot Cleaner, detached from the main unit, showing the fill lines for water and cleaning solution.

4.4. Attaching Cleaning Tools

Select the appropriate cleaning tool for your task. The 7" Wide Path Nozzle is suitable for larger areas, while the Crevice Tool is ideal for tight spaces. Bristle and Rubber Brush Inserts can be interchanged on the nozzles for different cleaning needs. Attach the desired tool firmly to the end of the hose.



Figure 4.3: The RYOBI SWIFTClean Spot Cleaner with its hose and multiple cleaning tools, including the wide path nozzle and crevice tool, attached for convenient storage and access.

5. OPERATING INSTRUCTIONS

5.1. Spot Cleaning

Position the chosen cleaning tool over the stained area. Press the spray trigger on the handle to dispense cleaning solution onto the spot. Allow the solution to penetrate for a few moments. Then, without pressing the spray trigger, move the tool back and forth over the area to agitate the stain and suction up the dirty solution. Repeat as necessary until the stain is removed.



Figure 5.1: A user demonstrating the spot cleaning process on a carpet using the RYOBI SWIFTClean Spot Cleaner, effectively removing a visible stain.

5.2. Upholstery Cleaning

For upholstery, test a small, inconspicuous area first for colorfastness. Apply solution sparingly to avoid over-wetting. Gently scrub with the appropriate brush insert and then suction up the dirty liquid. Work in small sections to ensure thorough cleaning and drying.



Figure 5.2: A user cleaning upholstery with the RYOBI SWIFTClean Spot Cleaner, showcasing its effectiveness on fabric surfaces.

6. MAINTENANCE

6.1. Emptying and Cleaning Dirty Water Tank

After each use, remove the dirty water tank from the unit. Carefully empty the dirty water and rinse the tank thoroughly with clean water. Allow it to air dry before reattaching.

6.2. Cleaning the Hose and Tools

Use the Hose Rinse Tool to flush out any remaining solution or debris from the hose. Attach the rinse tool to the hose and run clean water through it until clear. Rinse all cleaning attachments under running water and allow them to air dry.

6.3. Storage

Ensure the unit, tanks, and all accessories are clean and dry before storing. Store the cleaner and its components in a dry, protected area, away from extreme temperatures. The hose and tools can be conveniently stored on the unit itself.

7. TROUBLESHOOTING

If the cleaner is not operating as expected, refer to the following common issues and solutions:

- **No Power:** Ensure the battery is fully charged and properly inserted. Check if the battery contacts are clean.

- **No Suction:** Verify that the dirty water tank is correctly seated and sealed. Check the hose and nozzle for blockages. Ensure the dirty water tank is not full.
- **No Spray:** Confirm the clean water tank is filled with solution and properly attached. Check the spray nozzle for any clogs.
- **Poor Cleaning Performance:** Ensure the correct cleaning concentrate is used and mixed according to instructions. Allow sufficient time for the solution to penetrate stains.

For issues not covered here, contact RYOBI customer support.

8. PRODUCT SPECIFICATIONS

Brand	RYOBI
Model Number	PBLHV704K
Power Source	Battery Powered (18V)
Capacity	2.3 Pounds (approx. 36 oz for full tank)
Item Weight	14.39 pounds (6.54 Kilograms)
Color	Green
Package Dimensions	15.47 x 13.39 x 11.18 inches
Assembly Required	No

9. WARRANTY AND SUPPORT

For warranty information, service, or technical support, please refer to the warranty card included with your product or visit the official RYOBI website. Keep your purchase receipt as proof of purchase for warranty claims.