#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Nostalgia /
- Nostalgia NSPFP6SS6A Stirring Popcorn Popper Instruction Manual

## Nostalgia NSPFP6SS6A

# Nostalgia NSPFP6SS6A Stirring Popcorn Popper Instruction Manual

Model: NSPFP6SS6A

#### INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Nostalgia NSPFP6SS6A Stirring Popcorn Popper. This appliance is designed to produce up to 24 cups of popcorn per batch using a stirring mechanism for even heat distribution. Please read all instructions carefully before initial use and retain this manual for future reference.

#### IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or any part of the unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not provided by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

### PARTS AND FEATURES

- · Base Unit with Non-Stick Cooking Plate and Stirring Rod
- Transparent Dome Lid (doubles as serving bowl)
- Cool-Touch Handles
- Kernel Measuring Cup (1/4 cup)
- Oil Measuring Spoon (1 tablespoon)



Image: The Nostalgia Stirring Popcorn Popper showing its overall design, dimensions (approximately 11.8 inches wide and 9.84 inches high), and key features such as its 24-cup capacity, 2-in-1 popping bowl, and motorized stirring rod.



Image: The popcorn popper displayed alongside the included kernel measuring cup and oil measuring spoon, indicating these accessories are part of the product.



Image: A collage of close-up views highlighting specific features: the cool-touch handles for safe handling, the vent holes on the lid which also serve as a butter melting tray, and the non-stick cooking plate for easy cleanup.

#### SETUP

- 1. Before first use, wipe down all surfaces with a damp cloth and dry thoroughly.
- 2. Ensure the appliance is placed on a stable, heat-resistant surface away from water sources.
- 3. Verify that the stirring rod is properly seated in the center of the cooking plate.
- 4. Ensure the dome lid is securely placed on the base unit.

### **OPERATING INSTRUCTIONS**

Follow these steps to make popcorn:

1. Using the provided oil measuring spoon, add 1 tablespoon of your preferred popping oil to the non-stick cooking plate.

- 2. Using the provided kernel measuring cup, add 1/4 cup of popcorn kernels to the cooking plate. Do not overfill.
- 3. Place the transparent dome lid securely on the base unit. If desired, place butter on the vent holes of the lid to melt while popping.
- 4. Plug the appliance into a standard electrical outlet. The unit will begin heating immediately.
- 5. The stirring rod will rotate to ensure even distribution of kernels and oil.
- 6. Listen for the popping to begin. Once the popping slows to 1-2 seconds between pops, unplug the unit.
- 7. Carefully grasp the cool-touch handles and invert the entire unit, using the dome lid as a serving bowl.
- 8. Add desired seasonings and enjoy.



Image: A detailed view of popcorn kernels and a small amount of oil on the non-stick cooking plate, with the stirring rod visible in the center, illustrating the initial setup for popping.

## MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity of your appliance:

- 1. Always unplug the unit and allow it to cool completely before cleaning.
- 2. The non-stick cooking plate can be wiped clean with a damp cloth and mild soap. Do not use abrasive cleaners or scouring pads.
- 3. The transparent dome lid can be washed in warm, soapy water. Rinse thoroughly and dry.
- 4. Do not immerse the base unit or electrical cord in water or any other liquid.
- 5. Store the appliance in a cool, dry place.

#### **TROUBLESHOOTING**

Problem	Possible Cause	Solution
Popcorn not popping or very few kernels pop.	<ul><li>Not enough oil.</li><li>Old or dry kernels.</li><li>Appliance not plugged in.</li></ul>	<ul><li>Ensure 1 tablespoon of oil is used.</li><li>Use fresh popcorn kernels.</li><li>Check power connection.</li></ul>
Popcorn is burning.	<ul><li>Too much oil or kernels.</li><li>Left on too long after popping stops.</li></ul>	<ul> <li>Use recommended measurements (1 tbsp oil, 1/4 cup kernels).</li> <li>Unplug immediately once popping slows significantly.</li> </ul>
Stirring rod not rotating.	<ul><li>Not properly seated.</li><li>Obstruction.</li></ul>	<ul><li>Ensure stirring rod is correctly positioned.</li><li>Check for any debris preventing rotation.</li></ul>

### **SPECIFICATIONS**

• Model: NSPFP6SS6A

• Brand: Nostalgia

• Color: Stainless Steel

• Capacity: Up to 24 cups of popcorn per batch

• Special Features: Non-stick cooking plate, Stirring mechanism, Cool-touch handles, 2-in-1 serving bowl lid

· Material: Stainless Steel

Product Dimensions: Approximately 27.31 cm (10.75 in) L x 27.31 cm (10.75 in) W x 26.7 cm (10.5 in) H

• Weight: Approximately 2.34 kg (5.16 lbs)

ASIN: B0D364FBD3EAN: 0810061708445

## WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support inquiries, please refer to the warranty card included with your product or visit the official Nostalgia website. Do not attempt to repair the appliance yourself. Contact authorized service personnel for assistance.

## **Related Documents - NSPFP6SS6A**

NOSTALGIA* PRODUCTS	Nostalgia NKPTT25BG 2.5 Oz. Kettle Popcorn Maker: Instructions, Recipes, and Warranty User manual for the Nostalgia NKPTT25BG 2.5 Oz. Kettle Popcorn Maker, detailing safety, operation, cleaning, maintenance, recipes, and warranty information.
NOSTALGIA PRODUCTS	Nostalgia Retro Kettle Popcorn Maker CKKPTT25CR - Instructions, Recipes, and Warranty Comprehensive guide for the Nostalgia Retro Kettle Popcorn Maker (Model CKKPTT25CR), including operating instructions, safety precautions, cleaning and maintenance tips, delicious recipes, and warranty information. Learn how to make perfect popcorn with this vintage-style appliance.
NOSTALGIA  PRODUCTS	Nostalgia 2.5 Oz. Popcorn Cart: Instructions and Recipes  This document provides instructions, assembly guides, helpful tips, and recipes for the Nostalgia 2.5 Oz. Popcorn Cart (Model NRKPCRT25RR). Learn how to operate, clean, and maintain your popcorn cart for perfect theater-style popcorn.
NOSTALGIA" PRODUCTS	Nostalgia Vintage 2.5 Oz. Popcorn Cart Instruction Manual User manual for the Nostalgia Vintage 2.5 Oz. Popcorn Cart (Model NKPCRT25BK), including assembly instructions, operating procedures, cleaning tips, recipes, and warranty information.
NOSTALGIA" PRODUCTS	Nostalgia Vintage 2.5 Oz. Popcorn Cart (NKPCRT25RW) - User Manual & Recipes  Detailed user manual and recipe guide for the Nostalgia Vintage 2.5 Oz. Popcorn Cart (Model NKPCRT25RW). Learn how to assemble, operate, clean, and maintain your popcorn cart, with included recipes for delicious popcorn treats.



### Nostalgia Giant Gummy Candy Maker NGCM6: Instructions, Recipes, and Safety Guide

Comprehensive guide for the Nostalgia Giant Gummy Candy Maker (Model NGCM6), including operation instructions, safety precautions, cleaning tips, and delicious recipes for making gummy candies, vitamins, and energy chews.