

[Manuals.plus](#) /

> [JBL](#) /

> JBL PartyBox Club 120 Portable Wireless Speaker User Manual

JBL JBLPARTYBOX120AM

JBL PartyBox Club 120 Portable Wireless Speaker User Manual

Model: JBLPARTYBOX120AM

INTRODUCTION

This manual provides comprehensive instructions for the JBL PartyBox Club 120 portable wireless speaker. It covers essential information regarding product setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. Please read this manual thoroughly before using the speaker.

WHAT'S IN THE BOX

Upon unpacking, verify that all the following items are present:

- 1 x JBL PartyBox 120 Portable Wireless Speaker
- 1 x AC Power Cord
- 1 x Auxiliary Cable
- 1 x Microfiber Cloth



Image: Front view of the JBL PartyBox Club 120 speaker, showcasing its grille and illuminated JBL logo.

SETUP

1. Charging the Speaker

Before initial use, fully charge the speaker. Connect the provided AC power cord to the speaker's power input and then to a wall outlet. The charging indicator will show the battery status. A full charge provides approximately 12 hours of playtime.

2. Powering On/Off

- To power on: Press the Power button located on the control panel.
- To power off: Press and hold the Power button until the speaker shuts down.

3. Bluetooth Pairing

1. Ensure the speaker is powered on.
2. Press the Bluetooth button on the speaker. The Bluetooth indicator will flash, indicating it is in pairing mode.
3. On your mobile device (smartphone, tablet, or laptop), enable Bluetooth and search for available devices.
4. Select "JBL PartyBox Club 120" from the list of devices.
5. Once paired, the Bluetooth indicator will glow solid, and you will hear a confirmation sound.

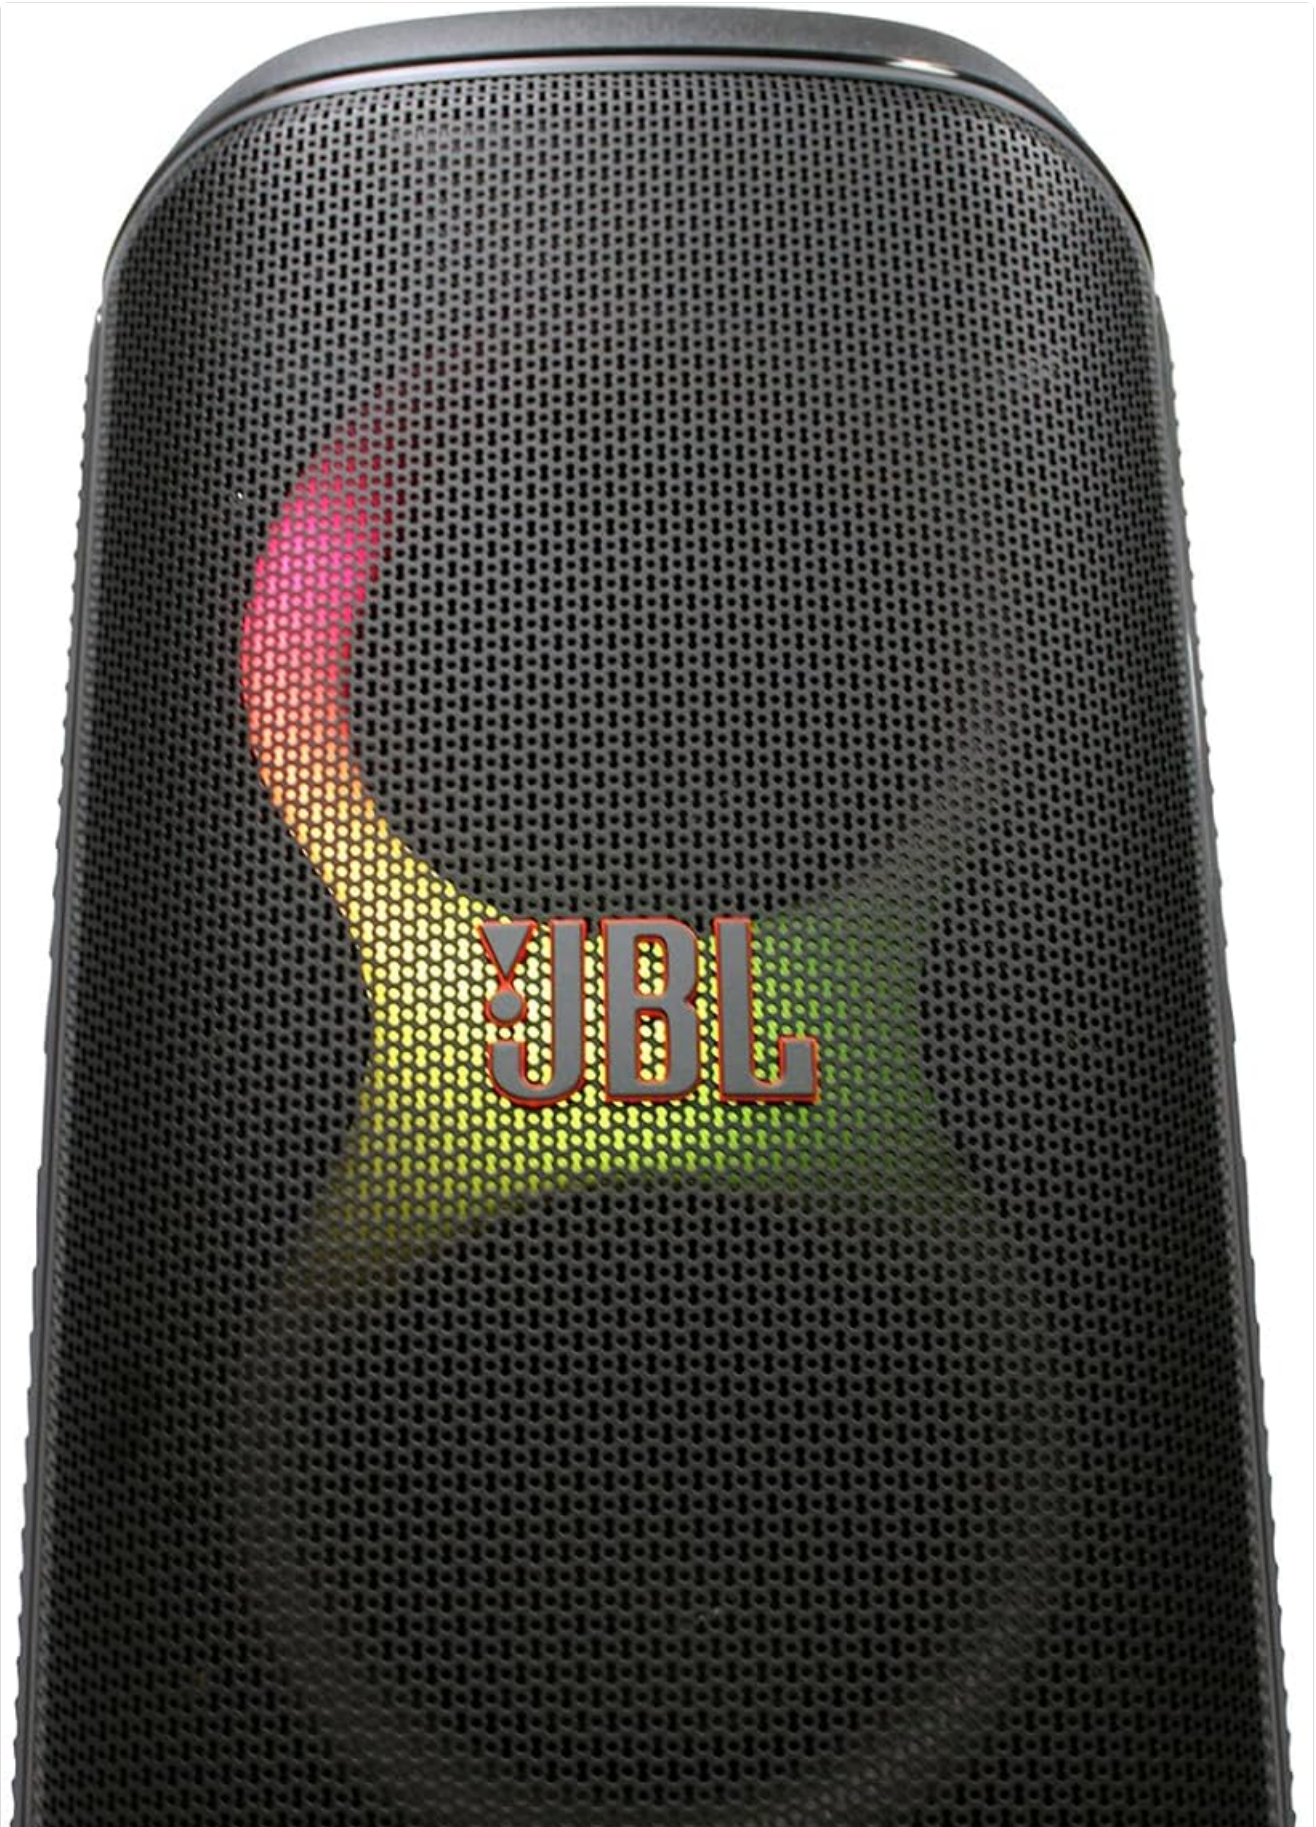




Image: Front view of the JBL PartyBox Club 120 speaker, displaying dynamic multi-color lighting effects.

4. AUX Connection

To connect an audio device via the auxiliary input:

1. Connect one end of the provided auxiliary cable to the AUX IN port on the speaker.
2. Connect the other end of the auxiliary cable to the headphone jack or audio output of your device.
3. The speaker will automatically switch to AUX input mode, or you may need to select it manually using the input source button.

OPERATING INSTRUCTIONS

1. Audio Playback

- **Volume Control:** Use the volume up (+) and volume down (-) buttons on the speaker or your connected device to adjust the audio level.
- **Play/Pause:** Press the Play/Pause button to start or stop audio playback.
- **Track Navigation:** Use the skip forward and skip backward buttons to change tracks.

2. Light Show Features

The JBL PartyBox Club 120 features dynamic LED lighting effects that synchronize with your music. Use the dedicated Light Mode button on the speaker to cycle through different light patterns or turn the lights off.





Image: Side view of the JBL PartyBox Club 120 speaker, showing its robust design and a blue light effect.

3. Splash Proof Design

The speaker is designed to be splash-proof, making it suitable for outdoor use and near water. However, it is not fully

waterproof and should not be submerged in water. Ensure all port covers are securely closed to maintain splash resistance.

MAINTENANCE

- **Cleaning:** Use the provided microfiber cloth or a soft, damp cloth to clean the speaker's exterior. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted; Power cord not connected	Charge the speaker; Ensure power cord is securely connected to speaker and outlet
No sound	Volume too low; Incorrect input source; Device not playing audio	Increase volume on speaker and device; Select correct input source (Bluetooth/AUX); Ensure audio is playing on connected device
Bluetooth not connecting	Speaker not in pairing mode; Device Bluetooth off; Too far from speaker	Press Bluetooth button to enter pairing mode; Enable Bluetooth on device; Move device closer to speaker (within 30 feet)
Light show not working	Light mode off; Speaker malfunction	Press Light Mode button to activate; Contact support if issue persists

SPECIFICATIONS

Brand	JBL
Model Number	JBLPARTYBOX120AM
Output Wattage	160 Watts
Connectivity Technology	AUX, Bluetooth
Power Source	Battery Powered, Corded Electric
Battery Type	Rechargeable
Item Dimensions (L x W x H)	11.6 x 11.8 x 22 inches
Item Weight	25 Pounds
Color	Black
Material	Plastic, Rubber
Compatible Devices	Smartphone, Tablet, Laptop

Mounting Type	Tabletop
UPC	094148647852

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official JBL website. For technical support, product registration, or service inquiries, please contact JBL customer support through their official channels.

Note: This manual provides general guidance. Specific features and operations may vary. Always refer to the latest information available from the manufacturer.

