

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Stanley](#) /
- › [Stanley SXFPW17E Pressure Washer User Manual](#)

Stanley SXFPW17E

Stanley SXFPW17E Pressure Washer User Manual

Model: SXFPW17E

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Stanley SXFPW17E Pressure Washer. Please read this manual thoroughly before using the appliance and keep it for future reference. Proper use and care will ensure optimal performance and extend the life of your pressure washer.

2. SAFETY INFORMATION

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury. Failure to follow these instructions may result in serious injury or property damage.

- **Eye Protection:** Always wear safety goggles or glasses with side shields when operating the pressure washer.
- **Electrical Safety:** Ensure the power outlet is properly grounded. Do not operate the unit with damaged cords or plugs. Keep all connections dry and off the ground.
- **Water Connection:** Connect the pressure washer to a cold water supply only. Do not use hot water. Ensure the water supply hose is free from kinks and leaks.
- **Operating Environment:** Use the pressure washer on a stable, level surface. Do not operate in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- **Nozzle Direction:** Never point the spray gun at people, pets, or electrical devices. The high-pressure spray can cause severe injury.
- **Children and Bystanders:** Keep children and bystanders away from the operating area.
- **Chemicals:** Use only detergents recommended for pressure washers. Follow detergent manufacturer's instructions for use and storage.
- **Maintenance:** Disconnect the power supply before performing any maintenance or cleaning.

3. PACKAGE CONTENTS

Verify that all items are present and undamaged upon unpacking. If any parts are missing or damaged, contact your retailer.

- Stanley SXFPW17E Pressure Washer Unit
- Washing Gun
- Adjustable Jet Nozzle
- Rotary Nozzle

- Foam Gun (Detergent Dispenser)
- High-Pressure Hose
- Water Inlet Connector
- User Manual



Figure 1: Included accessories for the Stanley SXFPW17E pressure washer, featuring the washing gun, adjustable and rotary nozzles, and the foam gun.

4. SETUP

1. **Positioning:** Place the pressure washer on a firm, level surface to prevent tipping during operation.
2. **Water Supply Connection:**
 - Connect a garden hose (not supplied) to the water inlet connector on the pressure washer.
 - Ensure the water supply hose is securely fastened and free from leaks.
 - Connect the other end of the garden hose to a cold water tap.
 - Turn on the water tap fully to ensure adequate water flow.
3. **High-Pressure Hose Connection:**
 - Attach the high-pressure hose to the outlet on the pressure washer unit.
 - Connect the other end of the high-pressure hose to the washing gun. Ensure all connections are tight.
4. **Accessory Attachment:**
 - Select the desired nozzle (adjustable jet or rotary) and attach it to the end of the washing gun lance. Push and twist until it clicks into place.
 - For detergent application, fill the foam gun with appropriate pressure washer detergent and attach it to the washing gun.
5. **Electrical Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the pressure washer.

5. OPERATING INSTRUCTIONS

1. **Priming the Pump:**
 - Ensure the water supply is fully open.
 - Squeeze the trigger on the washing gun to release air from the system. Hold the trigger until a steady stream of water flows from the nozzle, indicating the pump is primed.

2. Starting the Pressure Washer:

- Turn the ON/OFF switch to the "ON" position. The motor will start.
- Squeeze the trigger on the washing gun to begin high-pressure spraying. Release the trigger to stop the spray.

3. Using Nozzles:

- **Adjustable Jet Nozzle:** Rotate the nozzle head to change the spray pattern from a narrow, powerful stream to a wide, gentle fan spray. Suitable for various cleaning tasks.
- **Rotary Nozzle:** Provides a concentrated, oscillating jet for stubborn dirt and grime. Use with caution on delicate surfaces.

4. Using the Foam Gun:

- Fill the foam gun reservoir with pressure washer detergent.
- Attach the foam gun to the washing gun.
- Operate the pressure washer. The unit will draw detergent and mix it with water to create foam.
- Apply foam to the surface, allow it to dwell as per detergent instructions, then rinse with a high-pressure nozzle.

5. Cleaning Techniques:

- Always start cleaning from a distance of at least 30 cm (12 inches) to avoid damaging the surface.
- Work from top to bottom on vertical surfaces to allow detergent to work effectively.
- Overlap your spray passes to ensure even cleaning.

6. Shutting Down:

- Turn the ON/OFF switch to the "OFF" position.
- Turn off the water supply.
- Squeeze the trigger on the washing gun to release any remaining pressure in the system.
- Disconnect the power cord and water supply hose.



Figure 2: The Stanley SXFPW17E pressure washer in operation, demonstrating effective cleaning on a tiled surface.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer. Always disconnect the power supply before performing any maintenance.

- **Nozzle Cleaning:** If the nozzle becomes clogged, use the supplied nozzle cleaning tool (if applicable) or a thin wire to clear

any debris. Rinse thoroughly.

- **Water Inlet Filter:** Regularly check and clean the water inlet filter to prevent debris from entering the pump. Remove the filter, rinse it under running water, and reinsert.
- **Storage:**
 - Drain all water from the pump, hose, and gun before storing, especially in freezing temperatures. Run the unit for a few seconds with the water supply disconnected and the trigger squeezed until no more water comes out.
 - Store the pressure washer in a dry, frost-free location.
 - Coil the high-pressure hose and power cord neatly.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Motor does not start	No power supply	Check power cord connection and circuit breaker.
Motor runs but no pressure	No water supply or air in pump	Ensure water tap is fully open. Prime the pump by squeezing the trigger until water flows steadily.
Low pressure	Clogged nozzle or water inlet filter	Clean the nozzle and water inlet filter.
Water leaks from connections	Loose connections or worn O-rings	Tighten all connections. Inspect and replace O-rings if damaged.

8. SPECIFICATIONS

Parameter	Value
Model	SXFPW17E
Power	1700 W
Max Pressure	130 bar
Max Flow Rate	420 L/h
Dimensions (L x W x H)	36 x 32.4 x 81.5 cm
Weight	12 kg

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Stanley website. For technical support or spare parts, please contact your retailer or the authorized Stanley service center in your region. Keep your purchase receipt as proof of purchase.

