



Manuals.plus /

› Nostalgia /

› Nostalgia 8-Cup Red Electric Stirring Popcorn Maker User Manual

Nostalgia 8-Cup Red Stirring Popcorn Maker

Nostalgia 8-Cup Red Electric Stirring Popcorn Maker User Manual

Model: 8-Cup Red Stirring Popcorn Maker

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before operating this appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or any part of the unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- A popper that is plugged into an outlet should not be left unattended.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PARTS IDENTIFICATION

Familiarize yourself with the components of your Nostalgia Popcorn Maker:

- Base Unit with Non-Stick Cooking Plate and Stirring Rod
- Clear Lid / Serving Bowl
- Kernel Measuring Cup
- Oil Measuring Spoon



Image: The Nostalgia 8-Cup Red Electric Stirring Popcorn Maker, showing the red base unit with a clear lid full of popcorn, and a separate clear serving bowl also filled with popcorn.

SETUP AND FIRST USE

Before using your popcorn maker for the first time, follow these steps:

1. Unpack the unit and remove all packaging materials.
2. Wipe down the base unit with a damp, non-abrasive cloth.
3. Wash the clear lid/serving bowl, kernel measuring cup, and oil measuring spoon in warm, soapy water. Rinse thoroughly and dry.
4. Ensure the unit is completely dry before plugging it in.

includes:
kernel measuring cup
& oil measuring spoon



stirring rod perfectly
distributes kernels,
ensuring an even
pop every time!

Image: A person's hand pouring popcorn kernels from a red measuring cup into the non-stick cooking plate of the popcorn maker. An oil measuring spoon is also visible.

OPERATING INSTRUCTIONS

Follow these steps to make delicious popcorn:

1. Place the base unit on a stable, heat-resistant surface.
2. Add 1 tablespoon of cooking oil (vegetable, canola, or coconut oil recommended) to the non-stick cooking plate using the provided oil measuring spoon.
3. Add 1/4 cup of popcorn kernels to the cooking plate using the provided kernel measuring cup. Do not overfill.
4. Place the clear lid securely onto the base unit. The lid also functions as a serving bowl.
5. Plug the unit into a standard electrical outlet. The stirring rod will begin to rotate, and the heating element will activate.
6. Popcorn will begin to pop within a few minutes. The stirring rod ensures even popping.
7. Once popping slows to 1-2 seconds between pops, turn off the unit and unplug it from the outlet.
8. Carefully remove the clear lid using the cool-touch handles. Be aware of hot steam.

- To serve, invert the base unit with the lid still attached, so the lid becomes the serving bowl. The cool-touch handles facilitate this process.
- Add desired seasonings or butter.



Image: A collage highlighting key features: cool-touch handles for safe handling, vent holes on the lid for moisture release and butter melting, and the non-stick cooking plate for easy cleaning.

DOUBLES AS A SERVING BOWL!



Image: The clear lid of the popcorn maker, now inverted and resting on its red base, filled with freshly popped popcorn, demonstrating its dual function as a serving bowl.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your popcorn maker:

1. Always unplug the unit and allow it to cool completely before cleaning.
2. Remove the clear lid/serving bowl. Wash it in warm, soapy water, rinse, and dry thoroughly. It is top-rack dishwasher safe.
3. Wipe the non-stick cooking plate and stirring rod with a damp, non-abrasive cloth. For stubborn residue, use a small amount of mild dish soap and rinse with a damp cloth. Do not immerse the base unit in water.
4. Wipe the exterior of the base unit with a damp cloth.
5. Ensure all parts are dry before storing.

TROUBLESHOOTING

Refer to this section for common issues and their solutions:

Problem	Possible Cause	Solution
Popcorn not popping or very few kernels pop.	Not enough oil, old kernels, or too many kernels.	Ensure correct oil and kernel measurements. Use fresh kernels. Do not exceed 1/4 cup kernels.
Popcorn tastes burnt.	Left on too long after popping, or too much oil.	Unplug immediately after popping slows. Use recommended oil amount.
Stirring rod not rotating.	Unit not plugged in, or obstruction.	Check power connection. Ensure no kernels or debris are blocking the rod.
Unit not turning on.	Not plugged in, or power outlet issue.	Verify plug is fully inserted. Test outlet with another appliance.

SPECIFICATIONS

Technical details for the Nostalgia 8-Cup Red Electric Stirring Popcorn Maker:

- **Brand:** Nostalgia
- **Model:** 8-Cup Red Stirring Popcorn Maker
- **Capacity:** 8 Cups (popped popcorn)
- **Material:** Plastic (Base), Non-Stick (Cooking Plate)
- **Product Dimensions:** 10.75"L x 10.75"W x 10.51"H
- **Item Weight:** 2.99 pounds
- **UPC:** 810140670700
- **Power:** Electric

STIRRING POPCORN POPPER!

 pops up to 8 cups of popcorn per batch

 2-in-1 popping bowl

 motorized stirring rod for even popping!

 convenient countertop size

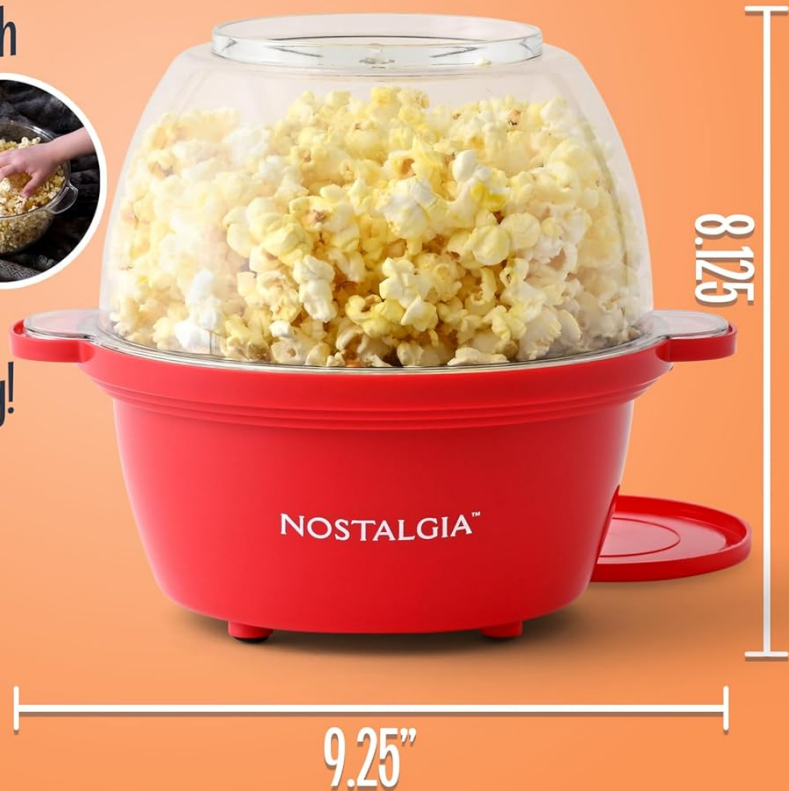


Image: The Nostalgia Stirring Popcorn Popper with visual callouts for its dimensions, indicating a width of 9.25 inches and a height of 8.125 inches.

WARRANTY INFORMATION

Nostalgia products are designed with quality and reliability in mind. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your purchase or visit the official Nostalgia website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, questions, or to purchase replacement parts, please contact Nostalgia Customer Service:

- **Website:** www.nostalgiaproducts.com
- Refer to your product packaging or the official website for phone numbers and email contacts specific to your region.

