

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Anderic](#) /

› [Anderic UC7222T434 Compatible with Home Decorators Collection Altura 68" Ceiling Fan TR171B Remote Control with Reverse Key for MR77A Receiver - UC7222T434, CHQ7222T434, RR7222T434](#)

Anderic RR7222T434

Anderic RR7222T434 Remote Control User Manual

Model: RR7222T434 | Brand: Anderic

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Anderic RR7222T434 Replacement Remote Control. This remote is designed to seamlessly replace specific Home Decorators Collection and Hampton Bay ceiling fan remotes, offering convenient control over fan speeds, light functions, and reverse mode.

COMPATIBILITY INFORMATION

Critical Compatibility Note: This Anderic RR7222T434 Replacement Remote is specifically designed to replace original remotes with the FCCID: **CHQ7222T434** or **UC7222T434** printed on their back. It also replaces the TR171B Remote Control made for the MR77A receiver. This remote will **NOT** function with original remotes that have FCCID: UC7222T (without "434") or CHQ7222T (without "434").

It is engineered for use with Home Decorators Collection and Hampton Bay Altura 68" Ceiling Fans that utilize MR77A & MR77A.2 receivers.

PACKAGE CONTENTS

- 1 x Anderic RR7222T434 Remote Control
- 1 x Wall Mount Bracket
- *Note: An A23 12-Volt battery is required and is not included in the package.*

SETUP INSTRUCTIONS

1. Battery Installation

Locate the battery compartment on the back of the remote control. Insert one A23 12-Volt battery, ensuring correct polarity (+/-) as indicated inside the compartment. Close the battery cover securely.

2. DIP Switch Pairing

The Anderic RR7222T434 remote uses DIP switches for pairing with your ceiling fan receiver. The DIP switches are typically located inside the battery compartment of the remote and on the ceiling fan receiver unit itself. Both sets of DIP switches must match for the remote to function correctly.

1. **Identify DIP Switches:** Open the battery cover on your new Anderic remote. Locate the series of small switches (DIP switches).
2. **Access Receiver DIP Switches:** For your ceiling fan, you may need to access the receiver unit, which is usually located in the fan's canopy (the part that attaches to the ceiling). Consult your ceiling fan's original manual for instructions on accessing its receiver and DIP switches.
3. **Match Settings:** Carefully match the position of the DIP switches on your new Anderic remote to the exact pattern of the DIP switches on your ceiling fan's receiver. Ensure each switch is set to the identical ON or OFF position.
4. **Test Functionality:** After matching the DIP switch settings, reassemble the fan canopy and close the remote's battery cover. Test the remote's functions to ensure proper operation.

If the remote does not operate the fan, double-check the DIP switch settings on both the remote and the receiver.

OPERATING INSTRUCTIONS

The Anderic RR7222T434 remote control provides intuitive control over your ceiling fan and light. Refer to the image below for button identification.





Image: Front view of the Anderic RR7222T434 remote control. It is black with light gray and beige buttons. From top to bottom, there are three oval buttons labeled '3', '2', and '1' for fan speeds. Below these are a power button (circle with vertical line) and a reverse button (circle with two arrows forming a loop). At the bottom, there is a large circular beige button with a light bulb icon for light control. The brand "ANDERIC" and model "RR7222T434" are printed at the bottom.

- **Fan Speed Buttons (1, 2, 3):** Press '1' for low speed, '2' for medium speed, and '3' for high speed.
- **Fan Off/Power Button (⏻):** Press this button to turn the ceiling fan off.
- **Reverse Function Button (↻):** Press this button to change the direction of the fan blades (e.g., for summer or winter operation).
- **Light Control Button (💡):** Press this button to toggle the fan's light on or off. If your fan supports dimming, holding this button may adjust the light intensity.

MAINTENANCE

Battery Replacement

When the remote's performance diminishes or it stops responding, it is likely time to replace the battery. Follow the battery installation steps outlined in the "Setup Instructions" section. Always use a fresh A23 12-Volt battery for optimal performance.

Cleaning

To clean the remote control, use a soft, dry cloth. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding to fan.	Incorrect DIP switch settings.	Verify and match the DIP switch settings on both the remote and the fan receiver.
Remote's range is reduced or intermittent.	Low battery.	Replace the A23 12-Volt battery.
Light function works, but fan does not.	Wiring issue or fan motor problem.	Consult your ceiling fan's manual or a qualified electrician.
Remote does not control all functions.	Incompatible fan receiver or remote model.	Ensure your original remote's FCCID matches CHQ7222T434 or UC7222T434.

SPECIFICATIONS

Model Number: RR7222T434

Brand: Anderic

Compatible FCCIDs: CHQ7222T434, UC7222T434

Frequency: 433.9MHz (434MHz)

Battery Requirement: 1 x A23 12-Volt (not included)

Package Dimensions: 6.54 x 3.39 x 1.61 inches

Item Weight: 2.39 ounces

Manufacturer: Dan's Electronics Etc., Inc.

Color: Black

Max Number of Supported Devices: 1

Compatible Devices: Fan

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Anderic customer service. Refer to the product packaging or the official Anderic website for the most current contact details and warranty terms.

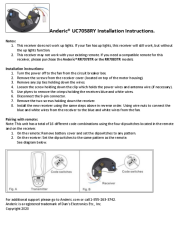 
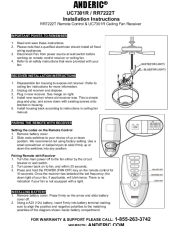 
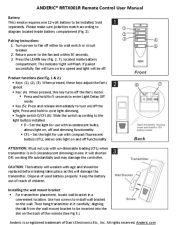 
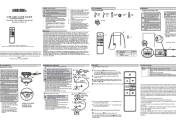 

You can visit the [Anderic Store on Amazon](#) for more product information.

Related Documents - RR7222T434



[Anderic FAN9T and FAN28R/UC7067FCRX Installation Instructions](#)

Detailed installation guide for the Anderic FAN9T and FAN28R/UC7067FCRX ceiling fan remote control system, including receiver wiring, remote pairing, and battery installation.

	<p>Anderic UC7058RY Ceiling Fan Receiver Installation Guide</p> <p>Detailed installation and pairing instructions for the Anderic UC7058RY ceiling fan receiver. Includes notes on compatibility with Anderic RR7078TR and RR7083TR remotes. Provides step-by-step guidance for setup and remote synchronization.</p>
	<p>Anderic UC7301R / RR7222T Ceiling Fan Remote & Receiver Installation Guide</p> <p>Step-by-step installation instructions for the Anderic UC7301R Ceiling Fan Receiver and RR7222T Remote Control, covering important safety points, receiver installation, remote pairing, and battery replacement.</p>
	<p>ANDERIC® RRTX001R Remote Control User Manual</p> <p>User manual for the ANDERIC® RRTX001R Remote Control, detailing battery installation, pairing instructions, product functions, and wall mount bracket installation.</p>
	<p>Anderic Universal Thermostatic Ceiling Fan Remote Control Kit Installation and Use Guide</p> <p>Comprehensive guide for installing and operating the Anderic HD3 Universal Thermostatic Ceiling Fan Remote Control Kit, including safety information, troubleshooting, and warranty details.</p>
	<p>RR1002 Universal Remote Control User Manual</p> <p>User manual for the RR1002 Universal Remote Control, providing instructions on programming, code input, shortcut key usage, learning function, code identification, factory reset, setting the sleep timer, and setup lock.</p>